

## TIGA Cg-503

# Catiga Cg-503 Digital Stopwatch User Manual

Model: Cg-503 | Brand: TIGA

## 1. INTRODUCTION

---

Thank you for choosing the Catiga Cg-503 Digital Stopwatch. This manual provides detailed instructions for the proper use and maintenance of your device. Please read it thoroughly before operating the stopwatch to ensure optimal performance and longevity.

### Key Features:

- 1/100 second accuracy
- Lap counter function
- Clock display with 12/24 hour format
- Calendar display (date and day of the week)
- Daily alarm function
- Countdown timer
- Neck strap for convenient carrying

## 2. PRODUCT OVERVIEW

---



**Image 1:** Front view of the Catiga Cg-503 Digital Stopwatch, showing the display and control buttons, with the included neck strap.

The Catiga Cg-503 is a compact digital stopwatch designed for various timing needs. It features a clear digital display, multiple function buttons, and a durable casing. A neck strap is included for easy portability during sports or other activities.

**Components:**

- **Display:** Shows time, date, stopwatch readings, and countdown.
- **Mode Button:** Cycles through different modes (Stopwatch, Clock, Alarm, Countdown).
- **Start/Stop Button:** Initiates and pauses timing functions.
- **Reset/Lap Button:** Resets the stopwatch or records lap times.
- **Set Button:** Used for adjusting time, date, alarm, and countdown settings.
- **Neck Strap Attachment:** For securing the included neck strap.

### 3. SETUP

---

#### 3.1. Battery Installation

The stopwatch typically comes with a battery pre-installed. If the display is blank or dim, the battery may need replacement. This device uses a standard button cell battery (e.g., CR2032).

1. Locate the battery compartment cover on the back of the stopwatch.
2. Use a small screwdriver or coin to carefully open the cover.
3. Remove the old battery, noting its polarity (+/-).
4. Insert a new battery with the correct polarity.
5. Securely close the battery compartment cover.

*Note: Dispose of used batteries responsibly according to local regulations.*

#### 3.2. Initial Time and Date Setting

After battery installation or reset, you may need to set the current time and date.

1. Press the **Mode** button repeatedly until the Clock display is shown.
2. Press and hold the **Set** button until the time digits start flashing.
3. Use the **Start/Stop** button to adjust the flashing digit (hours, minutes, seconds).
4. Press the **Reset/Lap** button to move to the next digit or setting (e.g., 12/24 hour format, year, month, day).
5. Repeat steps 3 and 4 until all settings are correct.
6. Press the **Set** button again to exit the setting mode.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Stopwatch Mode

This mode is used for timing events with 1/100 second accuracy.

1. Press the **Mode** button until the stopwatch display (00:00:00) appears.
2. Press **Start/Stop** to begin timing.
3. Press **Start/Stop** again to pause the timing.
4. To resume, press **Start/Stop**.
5. To record a lap or split time, press **Reset/Lap** while the stopwatch is running. The lap time will be displayed briefly, and the main timer will continue running.
6. To reset the stopwatch to zero, press **Start/Stop** to pause it, then press **Reset/Lap**.

### 4.2. Clock and Calendar Mode

The stopwatch can display the current time and date.

- Press the **Mode** button until the current time is displayed.
- The display will show hours, minutes, and seconds, along with the day of the week and date.
- To switch between 12-hour and 24-hour format, enter the time setting mode as described in Section 3.2 and adjust the format.

### 4.3. Alarm Mode

Set a daily alarm to sound at a specific time.

1. Press the **Mode** button until the Alarm display appears (usually indicated by 'AL' or a bell icon).
2. Press and hold the **Set** button until the alarm time digits flash.
3. Use the **Start/Stop** button to adjust the flashing hour digit.
4. Press the **Reset/Lap** button to move to the minute digit, then adjust with **Start/Stop**.
5. Press the **Set** button to confirm and exit.
6. To turn the alarm ON/OFF, press the **Start/Stop** button while in Alarm mode (not in setting mode). An alarm icon will appear/disappear on the display.

### 4.4. Countdown Timer

Use the countdown timer for specific intervals.

1. Press the **Mode** button until the Countdown Timer display appears (usually indicated by 'CD' or a down arrow icon).
2. Press and hold the **Set** button until the countdown time digits flash.

3. Use the **Start/Stop** button to adjust the flashing digit (hours, minutes, seconds).
4. Press the **Reset/Lap** button to move to the next digit.
5. Press the **Set** button to confirm and exit the setting mode.
6. Press **Start/Stop** to begin the countdown.
7. Press **Start/Stop** again to pause/resume the countdown.
8. When the countdown reaches zero, an alarm will sound. Press any button to stop the alarm.

## 5. MAINTENANCE

---

### 5.1. Cleaning

To clean your stopwatch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the casing or display.

### 5.2. Battery Replacement

When the display becomes dim or unresponsive, it's time to replace the battery. Refer to Section 3.1 for battery installation instructions. Always use the specified battery type.

### 5.3. Storage

Store the stopwatch in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, consider removing the battery to prevent leakage.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery (refer to Section 3.1).
Buttons are unresponsive.	Battery issue or internal malfunction.	Replace battery. If problem persists, contact support.
Incorrect time/date displayed.	Time/date not set correctly.	Reset and set the time/date (refer to Section 3.2).
Stopwatch does not start/stop.	Incorrect mode selected.	Ensure the stopwatch is in Stopwatch Mode (refer to Section 4.1).

## 7. SPECIFICATIONS

---

- **Model:** Cg-503
- **Brand:** TIGA
- **Color:** Black
- **Size:** Standard
- **Accuracy:** 1/100 second
- **Time Format:** 12/24 hour selectable
- **Functions:** Stopwatch, Lap Counter, Clock, Calendar, Daily Alarm, Countdown Timer
- **First Available Date:** September 14, 2018

- **ASIN:** B07HCKLG7H

## 8. WARRANTY AND SUPPORT

---

This product is manufactured by TIGA. For any issues or support inquiries, please refer to the retailer where the product was purchased.

### **Return and Exchange Policy:**

- Returns and exchanges must be made with the original box or packaging.
- The original invoice (all copies) and a completed return reason form (found on the back of the invoice) must accompany the returned product.
- Products with damaged original packaging, or those that have lost their resale value and cannot be sold to another customer, are not eligible for return.

For authenticity verification, you may check the product's barcode on [ongepir.org.tr](https://ongepir.org.tr).