

CAMRY CR 4469

CAMRY Electric Knife Sharpener CR 4469 User Manual

Model: CR 4469

1. INTRODUCTION

Thank you for choosing the CAMRY Electric Knife Sharpener CR 4469. This device is designed to efficiently sharpen and polish various types of kitchen knives, restoring their cutting edge. Please read this manual carefully before first use to ensure safe and optimal operation. Keep these instructions for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the sharpener.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep hands and fingers away from the sharpening slots during operation.
- Always unplug the sharpener from the outlet when not in use, before cleaning, or before attempting to move it.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the appliance only for its intended purpose, which is sharpening knives.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Place the sharpener on a stable, flat, and dry surface.
- Ensure the power supply matches the voltage specified on the appliance.
- Avoid sharpening serrated blades, scissors, or ceramic knives with this device.

3. PRODUCT OVERVIEW

The CAMRY Electric Knife Sharpener CR 4469 features a compact design with two distinct sharpening stages to achieve optimal

sharpness.



Figure 1: Front view of the CAMRY Electric Knife Sharpener CR 4469 with a knife inserted into a sharpening slot. This image illustrates the general appearance and how a knife is positioned for sharpening.

- **Coarse Sharpening Slot (Stage 1):** For dull or damaged blades.
- **Fine Polishing Slot (Stage 2):** For refining the edge and everyday sharpening.
- **Power Switch:** Located on the front for easy operation.
- **Anti-slip Suction Feet:** Ensures stability during use.



Figure 2: Top-down view of the CAMRY Electric Knife Sharpener, highlighting the two sharpening slots and the central power switch. This perspective shows the overall shape and layout of the device.

4. SETUP

1. Unpack the sharpener and remove all packaging materials.
2. Place the sharpener on a clean, dry, and stable surface. Ensure the anti-slip suction feet are firmly gripping the countertop.
3. Ensure the power switch is in the "OFF" position.
4. Plug the power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

The CAMRY Electric Knife Sharpener uses a two-stage sharpening process. Always start with Stage 1 for dull knives, then proceed to Stage 2 for polishing. For knives that only need a quick touch-up, you may start directly with Stage 2.

5.1. Sharpening (Stage 1 - Coarse)

This stage is for very dull or damaged knife blades.

1. Turn the power switch to the "ON" position.
2. Hold the knife with the blade facing downwards. Insert the heel of the knife blade into the left coarse sharpening slot (Stage 1) at a 90-degree angle to the sharpener.
3. Gently pull the knife towards you, maintaining light, consistent downward pressure. The sharpener's guides will maintain the optimal sharpening angle.
4. Repeat this process 3-5 times for each side of the blade, alternating between the left and right coarse slots.
5. Ensure the entire length of the blade, from heel to tip, passes through the slot.

5.2. Polishing (Stage 2 - Fine)

This stage refines the blade edge, removing burrs and creating a razor-sharp finish.

1. After completing Stage 1, or for knives that only need a touch-up, insert the heel of the knife blade into the left fine polishing slot (Stage 2).
2. Gently pull the knife towards you, applying very light downward pressure.
3. Repeat this process 3-5 times for each side of the blade, alternating between the left and right fine slots.
4. For best results, reduce pressure with each pass.

After sharpening, carefully wipe the blade with a damp cloth to remove any metal particles. Always test the sharpness on a piece of paper or a tomato, not on your finger.



Figure 3: The CAMRY Electric Knife Sharpener positioned on a wooden surface in a kitchen environment, alongside fresh produce. This image demonstrates the product's intended use setting.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your sharpener.

1. Always unplug the sharpener before cleaning.
2. Do not immerse the sharpener in water or any other liquid.
3. Wipe the exterior of the appliance with a soft, damp cloth.
4. To remove metal filings, gently tap the sharpener upside down over a waste bin. Some models may have a removable tray for filings; if so, empty and clean it.
5. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
6. Store the sharpener in a dry place when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Sharpener does not turn on.	Not plugged in; power switch off; power outlet malfunction.	Ensure the sharpener is securely plugged into a working outlet. Check the power switch is in the "ON" position. Test the outlet with another appliance.
Knives are not sharpening effectively.	Incorrect technique; blade too dull for Stage 2; sharpening wheels worn.	Ensure you are using light, consistent pressure and pulling the knife slowly. Start with Stage 1 for very dull knives. If the issue persists after extended use, the sharpening wheels may be worn and require professional servicing or replacement.
Excessive noise during operation.	Foreign object in slot; internal malfunction.	Unplug the device and carefully inspect the sharpening slots for any obstructions. If no obstruction is found and the noise persists, discontinue use and contact customer support.

8. SPECIFICATIONS

Brand: CAMRY
Model: CR 4469
Power: 40 Watts
Dimensions (L x W x H): 22.5 x 10 x 15 cm (8.86 x 3.94 x 5.91 inches)
Weight: 1.14 kg (2.51 lbs)
Material: Silver-colored housing
Sharpening Stages: 2 (Coarse and Fine)

9. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or questions regarding your CAMRY Electric Knife Sharpener CR 4469, please contact your retailer or the manufacturer's customer service department. Keep your proof of purchase for warranty claims.



Related Documents - CR 4469




[Camry CR 4469 Knife Sharpener: User Manual & Safety Guide](#)

Discover how to safely and effectively use your Camry CR 4469 knife sharpener. This comprehensive user manual provides detailed instructions, safety precautions, and maintenance tips for optimal performance.



Camry CR 1259 Electric Kettle: User Manual & Operating Guide

Comprehensive user manual for the Camry CR 1259 electric water boiler. Includes safety instructions, operating guidelines, maintenance tips, and technical specifications for optimal use.

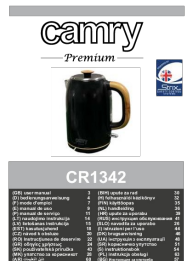

[Camry CR1342 Electric Kettle User Manual](#)

Comprehensive user manual for the Camry CR1342 electric kettle, detailing safety instructions, operating guidelines, cleaning procedures, and technical specifications.



[Camry CR 2927 User Manual - Electric Shaver Instructions](#)

Discover how to use and maintain your Camry CR 2927 electric shaver with this comprehensive user manual. Includes safety guidelines, charging instructions, and cleaning tips for optimal performance.



[Camry CR 2322 Hair Straightener User Manual and Safety Instructions](#)

Detailed user manual and safety instructions for the Camry CR 2322 hair straightener. Learn about safe operation, usage, cleaning, and technical specifications. Available in multiple languages.



[Camry CR 6016 Mini Oven User Manual and Safety Guide](#)

Comprehensive user manual and safety guide for the Camry CR 6016 mini oven. Includes operating instructions, maintenance tips, and safety precautions for optimal use.

