

## YAMAZAKI 4108-P

# Yamazaki Home Rin Wall Clock Instruction Manual

Model: 4108-P | Brand: YAMAZAKI

### 1. INTRODUCTION

Thank you for choosing the Yamazaki Home Rin Wall Clock. This clock features a sleek, minimalist design with a warm wooden face and a durable steel frame, designed to complement various interior styles. This manual provides essential information for the safe and proper installation, operation, and maintenance of your new wall clock. Please read these instructions thoroughly before use and retain them for future reference.



*Image 1.1: The Yamazaki Home Rin Wall Clock in Ash, showcasing its modern design.*

## 2. PACKAGE CONTENTS

---

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Yamazaki Home Rin Wall Clock (Model 4108-P)
- Instruction Manual (this document)

**Note:** 1 AA battery is required for operation and is **not** included in the package.

## 3. SAFETY INFORMATION

---

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.

- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.
- Ensure the clock is securely mounted to prevent it from falling.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- This product is for indoor use only.

## 4. SETUP

---

### 4.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

### 4.2 Setting the Time

1. Locate the time-setting knob on the back of the clock, usually near the battery compartment.
2. Gently turn the knob in either direction until the hour and minute hands display the correct time.
3. Avoid forcing the hands directly, as this may damage the clock mechanism.

### 4.3 Mounting the Clock

The Yamazaki Home Rin Wall Clock is designed for wall mounting.

1. Choose a suitable location on a wall that can support the weight of the clock (approximately 2.1 pounds).
2. Use an appropriate wall anchor and screw for your wall type (e.g., drywall, plaster, wood stud). Ensure the screw head is small enough to fit into the clock's hanging slot but large enough to hold it securely.
3. Hang the clock onto the screw, ensuring it is level and stable.



A classic wall clock with a modern twist  
that will look at home anywhere.

*Image 4.1: The Rin Wall Clock displayed in a living space, demonstrating its aesthetic appeal when mounted.*

## 5. OPERATING INSTRUCTIONS

---

Once the battery is installed and the time is set, the clock will begin to operate automatically. The clock is designed to provide accurate timekeeping for your home or office environment.





Image 5.1: Detail of the clock face and hands, indicating timekeeping function.

## 6. MAINTENANCE

- **Cleaning:** Wipe clean with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.
- **Battery Replacement:** Replace the AA battery approximately once a year, or when the clock begins to lose time or stop functioning. Follow the battery installation steps in Section 4.1.
- **Wood Variation:** Due to the natural wood material, slight variations in wood tone and grain are normal and contribute to the unique character of each clock.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running or losing time.	Battery is dead or incorrectly installed.	Replace the AA battery with a fresh one, ensuring correct polarity (+/-).
Clock hands are stuck.	Hands may be bent or obstructed.	Gently check if the hands are touching each other or the clock face. If bent, carefully straighten them.
Loud ticking sound.	This clock features a standard quartz movement which produces an audible ticking sound.	This is a normal characteristic of the clock's mechanism and not a defect. Consider placement in areas where ticking is less noticeable if preferred.

## 8. SPECIFICATIONS

**Model:** 4108-P

**Brand:** YAMAZAKI

**Color:** Ash

**Display Type:** Analog

**Style:** Modern, Minimalist, Urban

**Product Dimensions:** Diameter: 10.4 inches, Depth: 1.7 inches

**Power Source:** Battery Powered (1 AA battery required, not included)

**Material:** Alloy Steel, Wood (Ash)

**Item Weight:** 2.1 pounds

**Mounting Type:** Wall Mount

**Indoor/Outdoor Usage:** Indoor Only



*Image 8.1: Dimensional diagram of the Rin Wall Clock. Note: The diagram indicates a diameter of 10.38 inches and a depth of 1 inch, which may vary slightly from listed specifications.*

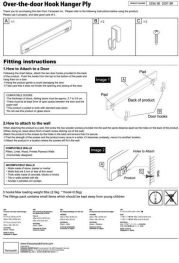
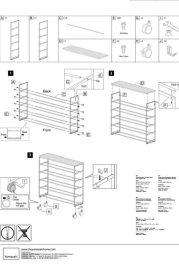
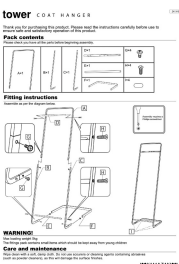


## 9. WARRANTY AND SUPPORT

**Warranty:** The manufacturer's warranty for this product is not specified. Please refer to your point of purchase for any applicable return or exchange policies.

**Customer Support:** For further assistance or inquiries regarding your Yamazaki Home Rin Wall Clock, please

contact Yamazaki Home customer service through their official website or the retailer from whom you purchased the product.

## Related Documents - 4108-P

 <p>The image shows the cover of the 'Over-the-door Hook Hanger Ply' installation and usage guide. It features a diagram of the product being installed on a door and a list of parts.</p>	<p><a href="#">Yamazaki Over-the-door Hook Hanger Ply: Installation and Usage Guide</a></p> <p>Detailed instructions and specifications for the Yamazaki Over-the-door Hook Hanger Ply, including how to attach it to doors and walls, compatible materials, and weight limits.</p>
 <p>The image shows the cover of the 'Yamazaki Tower Rolling 5-Tier Shoe Rack Assembly Instructions'. It features a diagram of the shoe rack and a list of parts.</p>	<p><a href="#">Yamazaki Tower Rolling 5-Tier Shoe Rack Assembly Instructions</a></p> <p>Step-by-step assembly guide for the Yamazaki Tower Rolling 5-Tier Shoe Rack with Wooden Top, including parts list and assembly diagrams.</p>
 <p>The image shows the cover of the 'Tower Coat Hanger Assembly Instructions - Yamazaki ZK-313'. It features a diagram of the coat hanger and a list of parts.</p>	<p><a href="#">Tower Coat Hanger Assembly Instructions - Yamazaki ZK-313</a></p> <p>Step-by-step assembly guide for the Yamazaki Tower Coat Hanger (model ZK-313). Includes parts list, fitting instructions, warnings, and care advice.</p>
 <p>The image shows the cover of the 'Tock the Learning Clock - Educational Toy for Teaching Time'. It features a diagram of the clock and a list of parts.</p>	<p><a href="#">Tock the Learning Clock - Educational Toy for Teaching Time</a></p> <p>Learn to tell time with Tock the Learning Clock, an interactive educational toy from Learning Resources. Features analog and digital time display, quiz mode, music, and an 'OK to Wake' light for children aged 3+.</p>
 <p>The image shows the cover of the 'SOLAR LOYAL LIMITED SL-4108 Bluetooth Controller User Manual'. It features a diagram of the controller and a list of parts.</p>	<p><a href="#">SOLAR LOYAL LIMITED SL-4108 Bluetooth Controller User Manual</a></p> <p>Explore the features and usage of the SOLAR LOYAL LIMITED SL-4108 Bluetooth controller. This manual covers setup, operation, and troubleshooting for PC and Nintendo Switch gaming.</p>

**Thank you**  
**for your purchase!**

Please read the manual carefully before using the cuckoo clock. The cuckoo clock is a battery-operated clock and must be used indoors. The cuckoo clock is not a toy and should not be used by children. The cuckoo clock is not a fire hazard and should not be used near fire. The cuckoo clock is not a water hazard and should not be used near water. The cuckoo clock is not a shock hazard and should not be used near electrical outlets. The cuckoo clock is not a choking hazard and should not be used by children. The cuckoo clock is not a suffocation hazard and should not be used by children. The cuckoo clock is not a strangulation hazard and should not be used by children. The cuckoo clock is not a drowning hazard and should not be used by children. The cuckoo clock is not a poisoning hazard and should not be used by children. The cuckoo clock is not a fire hazard and should not be used near fire. The cuckoo clock is not a water hazard and should not be used near water. The cuckoo clock is not a shock hazard and should not be used near electrical outlets. The cuckoo clock is not a choking hazard and should not be used by children. The cuckoo clock is not a suffocation hazard and should not be used by children. The cuckoo clock is not a strangulation hazard and should not be used by children. The cuckoo clock is not a drowning hazard and should not be used by children. The cuckoo clock is not a poisoning hazard and should not be used by children.

**Setup and operation**

Please read the manual carefully before using the cuckoo clock. The cuckoo clock is a battery-operated clock and must be used indoors. The cuckoo clock is not a toy and should not be used by children. The cuckoo clock is not a fire hazard and should not be used near fire. The cuckoo clock is not a water hazard and should not be used near water. The cuckoo clock is not a shock hazard and should not be used near electrical outlets. The cuckoo clock is not a choking hazard and should not be used by children. The cuckoo clock is not a suffocation hazard and should not be used by children. The cuckoo clock is not a strangulation hazard and should not be used by children. The cuckoo clock is not a drowning hazard and should not be used by children. The cuckoo clock is not a poisoning hazard and should not be used by children.

**Important safety instructions**

Please read the manual carefully before using the cuckoo clock. The cuckoo clock is a battery-operated clock and must be used indoors. The cuckoo clock is not a toy and should not be used by children. The cuckoo clock is not a fire hazard and should not be used near fire. The cuckoo clock is not a water hazard and should not be used near water. The cuckoo clock is not a shock hazard and should not be used near electrical outlets. The cuckoo clock is not a choking hazard and should not be used by children. The cuckoo clock is not a suffocation hazard and should not be used by children. The cuckoo clock is not a strangulation hazard and should not be used by children. The cuckoo clock is not a drowning hazard and should not be used by children. The cuckoo clock is not a poisoning hazard and should not be used by children.

Model	SP851215-P	SP120913
Material	Wood	Wood
Color	White	White
Size	15" x 12" x 15"	13" x 10" x 13"
Weight	1.5 lbs	1.2 lbs
Power Source	Battery	Battery
Battery Type	AA	AA
Battery Life	100 hours	100 hours
Warranty	1 year	1 year

### [Huge Happiness Cuckoo Clock User Manual & Setup Guide](#)

Comprehensive setup instructions, troubleshooting guide, and product information for the Huge Happiness battery-operated cuckoo clock (models SP851215-P, SP120913).