

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux EIV63440BW Induction Hob User Manual](#)

Electrolux EIV63440BW

Electrolux EIV63440BW Induction Hob User Manual

Model: EIV63440BW

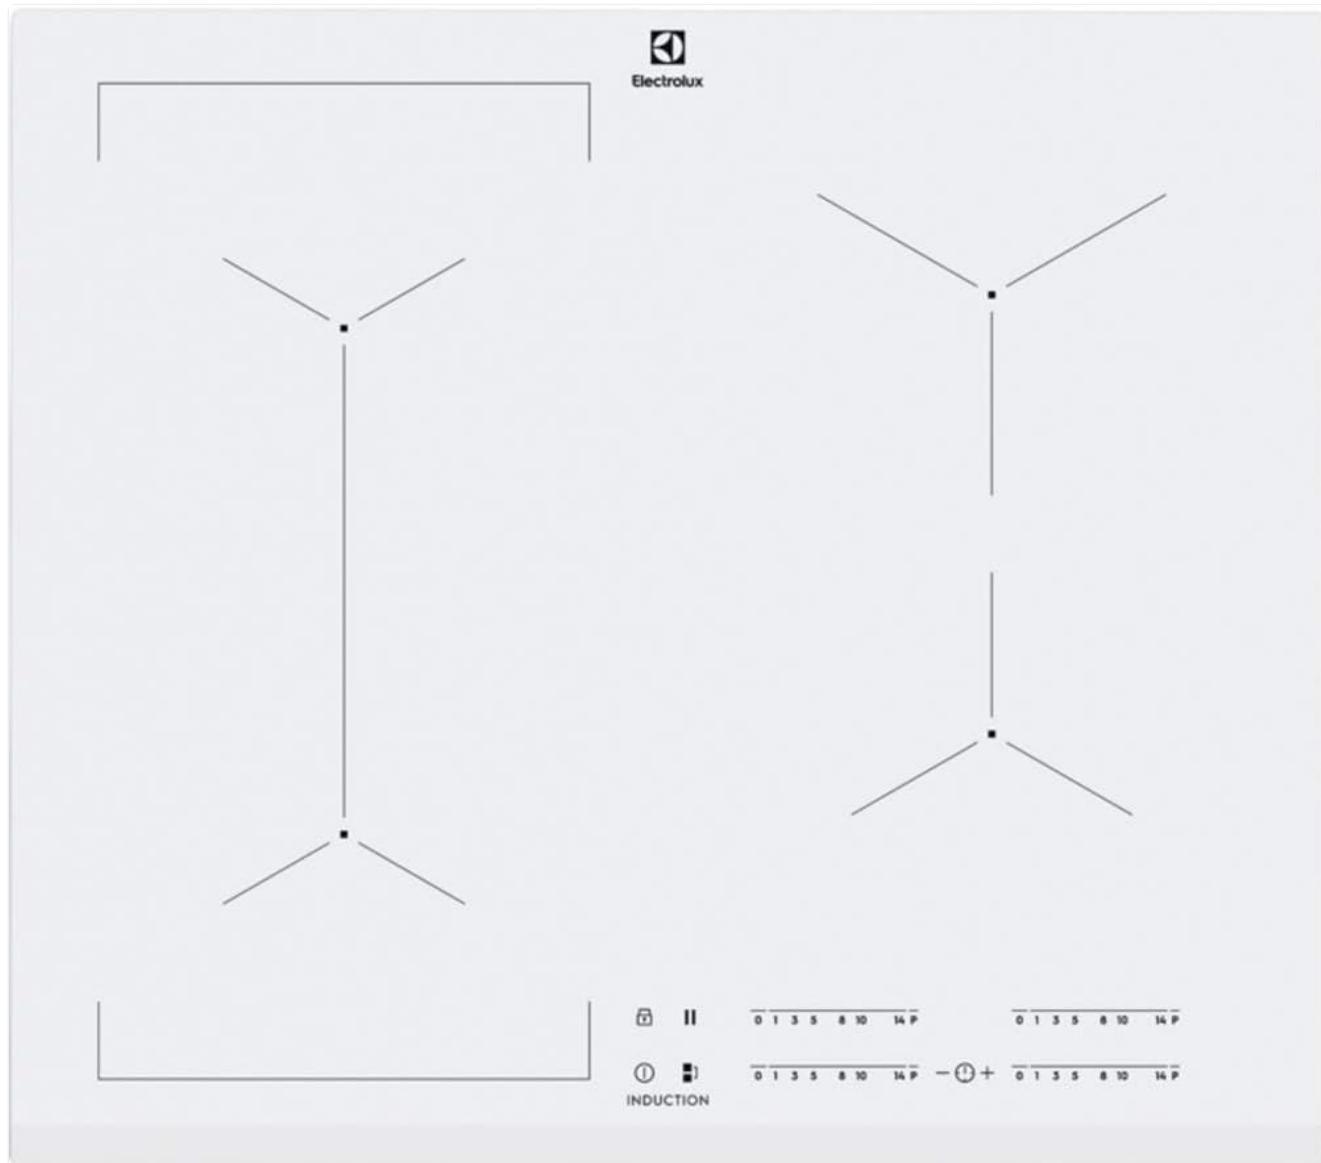


Image: Top-down view of the Electrolux EIV63440BW Induction Hob, showcasing its white glass surface and cooking zones.

Sections:

[Introduction](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Electrolux EIV63440BW Induction Hob. Please read these instructions carefully before installation and operation, and keep them for future reference.

The Electrolux EIV63440BW is a modern induction cooktop designed for efficient and precise cooking. It features a sleek glass surface and intuitive controls.

Key Features:

- **EcoTimer:** Helps save energy by turning off the heating zone before the set time, using residual heat to complete cooking.
- **Booster Function:** Provides a temporary power boost for rapid heating.
- **Bridge Function:** Combines two cooking zones to create a larger cooking area, ideal for griddle plates or large pots.
- **Settings Lock:** Prevents accidental changes to cooking settings.
- **Automatic Safety Shut-off:** Automatically turns off the hob if left unattended for too long or if a spill occurs.
- **Melt Setting:** Low heat setting for delicate tasks like melting chocolate or butter.
- **Timer Function:** Allows precise control over cooking duration.

2. SETUP AND INSTALLATION

Important: Installation of this appliance must be performed by a qualified professional in accordance with local regulations and safety standards. Incorrect installation can lead to electric shock, fire, or damage to the appliance.

Unpacking:

1. Carefully remove the hob from its packaging.
2. Inspect the appliance for any signs of damage. Do not install if damaged.
3. Ensure all components listed in the packing contents are present. The package includes: 1 induction hob, mounting brackets, and this user manual.

Placement:

- The hob is designed for built-in installation into a countertop.
- Ensure adequate ventilation space around and below the appliance as specified in the installation guide (provided separately to installers).
- Maintain minimum distances from walls and other appliances.

Electrical Connection:

- The appliance requires a 240 Volt electrical supply.
- The electrical connection must be made by a qualified electrician.
- Ensure the power supply is disconnected before any electrical work.

3. OPERATING INSTRUCTIONS

The Electrolux EIV63440BW induction hob features touch controls for easy operation.

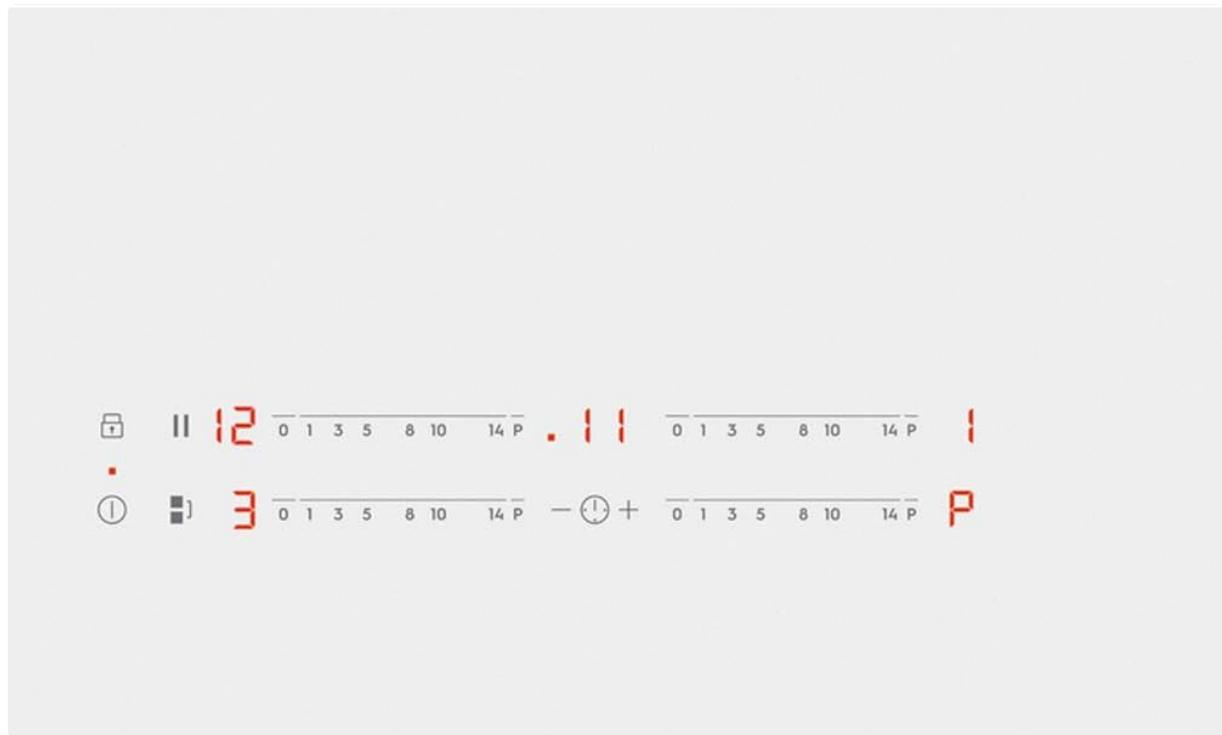


Image: Close-up view of the control panel on the Electrolux EIV63440BW Induction Hob, showing touch controls and digital displays for heat settings and timers.

Suitable Cookware:

Only use cookware suitable for induction hobs. This includes pots and pans with a magnetic base. Test by holding a magnet to the bottom of your cookware; if it sticks, it's suitable.

Turning On/Off:

- To Turn On:** Touch the main power symbol (.). The hob will emit a short beep, and the displays will show '0'.
- To Turn Off:** Touch the main power symbol again. All cooking zones will turn off.

Selecting a Cooking Zone and Setting Heat:

- Place a suitable pan on the desired cooking zone.
- Touch the corresponding zone selection control.
- Adjust the heat setting using the '+' or '-' controls, or by sliding your finger along the power level bar. Settings range from 1 (low) to 9 (high).

Using Special Functions:

- Booster (P):** To activate, select a cooking zone and then touch the 'P' symbol. This provides maximum power for rapid boiling. The booster will automatically deactivate after a set time or if the hob detects overheating.
- EcoTimer:** After setting a cooking time, the hob will automatically reduce power or switch off the zone to utilize residual heat, saving energy. Refer to the full manual for specific EcoTimer settings.
- Bridge Function:** For combining two zones, touch the bridge symbol after selecting the two zones you wish to link. This creates a single large cooking area controlled by one set of controls.

- **Melt Setting:** Select a zone and choose the lowest heat setting (often indicated by a specific symbol or 'L' for low).

Safety Lock:

To prevent accidental operation, especially by children, activate the safety lock. Touch the lock symbol  and hold for a few seconds. The hob will indicate that it is locked. Repeat the process to unlock.



Image: Three pans on an Electrolux induction hob, demonstrating active cooking with various dishes.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

General Cleaning:

- Always ensure the hob is cool before cleaning.
- Wipe the glass surface with a soft cloth or sponge and warm soapy water.
- For stubborn stains, use a specialized ceramic hob cleaner.
- Rinse thoroughly and dry with a clean cloth to prevent water marks.

Avoiding Damage:

- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the glass surface.
- Avoid dropping heavy objects on the hob, as this can cause cracks.
- Clean spills immediately, especially sugary liquids, to prevent them from burning onto the surface and causing permanent damage.

5. TROUBLESHOOTING

Before contacting service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; safety lock activated; incorrect power button press.	Check circuit breaker. Deactivate safety lock. Press power button firmly for 1-2 seconds.
Cooking zone not heating.	Unsuitable cookware; no pan detected; pan not centered.	Use induction-compatible cookware. Ensure pan is on the zone. Center the pan.
Hob makes a buzzing or humming noise.	Normal operation for induction hobs (fan, pan vibration); specific cookware.	This is often normal. Try different cookware. If excessively loud or unusual, contact service.
Small scratches appear on the surface.	Abrasive cleaning materials; rough pan bottoms; sliding pans.	Use only soft cloths and specialized cleaners. Lift pans instead of sliding. Ensure pan bottoms are smooth.
Error code displayed.	Specific internal fault or operational issue.	Refer to the full user manual for a list of error codes and their meanings. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Electrolux customer support or a qualified service technician.

6. TECHNICAL SPECIFICATIONS

Brand	Electrolux
Model Number	EIV63440BW
Product Dimensions (L x W x H)	59 x 52 x 4 cm (approximately 23.2 x 20.5 x 1.6 inches)
Weight	11.86 kg (approximately 26.15 lbs)
Installation Type	Built-in (Self-contained)
Special Features	Timer, Melt Setting, Double Induction (Bridge), Safety Lock

Hob Type	Induction
Number of Hobs/Cooking Zones	Multiple (The provided data states '1', but product images and 'Double Induction' feature indicate multiple zones, typically 4 for this layout.)
Color	White
Voltage	240 Volts
Power	2800 Watts
Energy Type	Electric
Material	Glass
Ignition System Type	Electronic

Note: The specification "Number of foyers: 1" appears to be a data entry error, as the product images and "Double Induction" feature clearly indicate multiple cooking zones (typically 4 for this layout). Please refer to the product packaging or official Electrolux website for the exact number of cooking zones.

7. WARRANTY AND CUSTOMER SUPPORT

Warranty Information:

For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Electrolux website. Keep your proof of purchase for any warranty claims.

Customer Support:

If you have any questions, require technical assistance, or need to schedule a service appointment, please contact Electrolux customer support. Contact details can typically be found on the Electrolux website for your region.

Availability of Spare Parts: Information regarding the availability of spare parts is not provided in the product details. Please contact Electrolux customer service for inquiries about spare parts.

© 2024 Electrolux. All rights reserved.

This manual is for informational purposes only. Electrolux reserves the right to make changes to products without prior notice.