

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Oregon](#) /

› [Oregon CS1400 2400W Electric Chainsaw Instruction Manual](#)

Oregon CS1400

Oregon CS1400 2400W Electric Chainsaw

INSTRUCTION MANUAL

1. SAFETY INFORMATION

Always read and understand this instruction manual before operating the Oregon CS1400 Electric Chainsaw. Failure to follow safety instructions can result in serious injury or death.

General Safety Precautions:

- Wear appropriate personal protective equipment (PPE), including safety glasses, hearing protection, gloves, and sturdy footwear.
- Ensure the work area is clear of bystanders, children, and pets.
- Do not operate the chainsaw in wet conditions or in the presence of flammable liquids or gases.
- Keep a firm grip on the chainsaw with both hands during operation.
- Be aware of kickback and how to avoid it.

Electrical Safety:

- Only connect the chainsaw to a properly grounded outlet.
- Use only extension cords rated for outdoor use and of appropriate gauge for the chainsaw's power requirements.
- Inspect the power cord and extension cord for damage before each use.

2. PRODUCT OVERVIEW

The Oregon CS1400 is a powerful 2400W electric chainsaw designed for efficient and quiet cutting tasks in your garden or yard. It features a 16-inch (40 cm) guide bar and a low-kickback Control Cut saw chain, making it suitable for trimming branches, felling small trees, and cutting firewood.



Figure 2.1: Front view of the Oregon CS1400 Electric Chainsaw.

Key Features:

- **Powerful Performance:** 2400W electric motor with integrated chain brake and 16-inch bar.
- **Control Cut Saw Chain:** Provides smooth cutting and reduced kickback with a chain speed of 45 ft/sec.
- **Smart Design:** Tool-less chain tensioning system for easy adjustments, oil level window, and front safety hand guard.
- **Automatic Oiling:** Ensures continuous lubrication of the bar and chain, minimizing maintenance and preventing premature wear.
- **Comfortable Operation:** Lightweight (5.9 kg) and balanced design, low noise output, low vibration, and an ergonomic over-mold handle.



Figure 2.2: Side view of the Oregon CS1400 Electric Chainsaw, highlighting the bar and chain.

3. SETUP

The Oregon CS1400 is designed for easy assembly. Follow these steps to prepare your chainsaw for use.

3.1 Unpacking and Component Identification:

Carefully remove all components from the packaging. Verify that all parts are present:

- Chainsaw body
- Guide bar
- Saw chain
- Bar cover



Figure 3.1: All components of the Oregon CS1400 Electric Chainsaw laid out.

3.2 Bar and Chain Installation:

1. Ensure the chainsaw is unplugged from the power source.
2. Remove the side cover by loosening the tensioning knob.
3. Place the saw chain around the drive sprocket and then guide it into the groove of the guide bar. Ensure the cutting edges of the chain are facing the correct direction (refer to the diagram on the chainsaw body).
4. Fit the guide bar onto the chainsaw studs, ensuring the chain tensioning pin engages with the hole in the guide bar.
5. Replace the side cover and hand-tighten the tensioning knob. Do not fully tighten yet.

3.3 Chain Tensioning:

The CS1400 features a tool-less chain tensioning system.

1. Lift the tip of the guide bar and turn the red tensioning ring clockwise to increase chain tension.
2. The chain is correctly tensioned when it fits snugly against the guide bar, but can still be pulled around the bar by hand. There should be no sag on the underside of the bar.
3. Once tensioned, fully tighten the red tensioning knob to secure the bar and chain.

3.4 Filling the Oil Reservoir:

The chainsaw has an automatic oiling system. It is crucial to fill the oil reservoir before first use and to check the oil level regularly.

1. Unscrew the oil cap located on the top of the chainsaw body.
2. Fill the reservoir with high-quality bar and chain oil. Do not use motor oil or waste oil.
3. Monitor the oil level through the transparent oil level window during operation. Refill as needed.

4. OPERATING INSTRUCTIONS

Before starting, ensure all safety precautions are followed and the chainsaw is properly assembled and oiled.

4.1 Starting and Stopping:

1. Plug the chainsaw into a suitable power outlet.
2. To start, press the safety lock-off button (usually located on the handle) and then squeeze the trigger switch.
3. To stop, release the trigger switch. The chain brake will engage instantly.

4.2 Cutting Techniques:

- Always maintain a balanced stance and firm grip on the chainsaw.
- Allow the chain to reach full speed before beginning a cut.
- Apply steady, even pressure. Do not force the saw through the wood.
- Be aware of the wood's tension to avoid pinching the bar or causing kickback.
- For felling small trees, make a notch cut on the side of the desired fall, then a felling cut from the opposite side.

The low noise operation of the CS1400 makes it more comfortable for extended use, but hearing protection is still recommended.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Oregon CS1400 Chainsaw.

5.1 Chain Lubrication:

The automatic oiling system keeps the bar and chain lubricated. Regularly check the oil level via the transparent window and refill as necessary. Never operate the chainsaw with an empty oil reservoir.

5.2 Chain Sharpening:

A sharp chain is essential for safe and efficient cutting. When the chain starts to produce fine sawdust instead of chips, or requires excessive force to cut, it needs sharpening. Refer to a qualified service technician or consult a detailed guide for proper chain sharpening techniques specific to your chain type.

5.3 Cleaning:

- After each use, unplug the chainsaw and allow it to cool.
- Remove the side cover and clean sawdust and debris from around the sprocket, guide bar, and chain.

- Clean the air vents to prevent overheating.
- Wipe down the exterior with a damp cloth. Do not use solvents.

5.4 Chain Tension Adjustment:

Check chain tension frequently, especially during the first few hours of use, as new chains can stretch. Adjust using the tool-less tensioning system as described in Section 3.3.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Oregon CS1400 Chainsaw.

Problem	Possible Cause	Solution
Chainsaw does not start.	No power supply; Safety lock-off not engaged; Damaged cord/plug.	Check power connection; Ensure safety lock-off is pressed before trigger; Inspect cord for damage.
Chain does not move or moves slowly.	Chain brake engaged; Chain too tight; Low oil; Debris in sprocket area.	Disengage chain brake; Adjust chain tension; Refill oil reservoir; Clean debris.
Saw smokes or overheats.	Chain dull; Insufficient lubrication; Overloading the motor; Blocked air vents.	Sharpen chain; Check oil level and automatic oiling; Reduce cutting load; Clean air vents.
Chain becomes loose frequently.	Chain stretching (new chain); Tensioning knob not fully tightened.	Re-tension chain as needed; Ensure tensioning knob is securely tightened.

7. SPECIFICATIONS

Specification	Value
Manufacturer	Oregon Tool
Part Number	603349
Item Weight	4.86 Kilograms
Product Dimensions	1 x 1 x 1 cm
Item Model Number	CS1400
Style	2400W 40cm Chainsaw
Power Source Type	Corded Electric
Wattage	2400 Watts
Number of Item Subunits	1
Batteries Included?	No

Specification	Value
Batteries Required?	No
ASIN	B07HF85M6D
Chain Speed	14 m/s (approx. 45 ft/s)
Global Trade Identification Number (GTIN)	05400591020800
UPC	036577603290

8. WARRANTY AND SUPPORT

The Oregon CS1400 Electric Chainsaw comes with a **3-year warranty**, ensuring peace of mind regarding its quality and performance.

For technical support, warranty claims, or to purchase replacement parts, please contact Oregon Tool customer service. Refer to the product packaging or the official Oregon Tool website for the most up-to-date contact information.

Always use genuine Oregon replacement parts to maintain product performance and warranty validity.