

Cozy Products CTCOMBO2

Cozy Products CT Toes Carpeted Foot Warming Heater User Manual

Model: CTCOMBO2 | Brand: Cozy Products

1. INTRODUCTION

The Cozy Products CT Toes Carpeted Foot Warming Heater is designed to provide gentle, energy-efficient warmth to your feet and lower extremities. This low-wattage personal space heater uses only 70 watts, offering a comfortable solution for cold environments at home or in the office. Its heated, plush carpet surface helps to warm the entire body by keeping your feet comfortable.

Key Features:

- Soft, carpeted surface for enhanced comfort.
- Low power consumption: uses only 70 watts.
- Portable design: rolls up for easy transport and storage.
- Reduces fire risk and saves energy compared to standard space heaters.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before use and retain for future reference.

- Always unplug the heater when not in use.
- Do not place on or near flammable materials.
- Keep away from children and pets.
- Do not use if damaged or wet.
- Allow the heater to cool before storing.

- Never leave the heater unattended while in use.
- Do not connect multiple devices to the same outlet or extension cord to avoid overheating and potential fire hazards.

3. PACKAGE CONTENTS

Your Cozy Products CT Toes Carpeted Foot Warming Heater package should include:

- 1 x CT Toes Carpeted Foot Warming Heater Mat
- 1 x Power Cord with On/Off Switch

4. SETUP

1. **Unpack the Heater:** Carefully remove the foot warming mat and power cord from the packaging.
2. **Position the Mat:** Place the mat on a flat, dry surface where you intend to use it, such as under a desk, in a home office, or by a comfortable chair. Ensure the mat is fully unrolled and flat.
3. **Connect Power:** Plug the power cord into a standard 120V AC electrical outlet. Ensure the outlet is easily accessible.



Image: The foot warmer positioned under a desk, providing warmth to a user's feet.

Video: Demonstration of the Toasty Toes Ergonomic Heated Foot Rest in use, showing its placement and functionality.

5. OPERATING INSTRUCTIONS

1. **Power On:** Locate the in-line on/off switch on the power cord. Flip the switch to the "ON" position. An indicator light on the switch will illuminate, confirming the unit is powered on.
2. **Heating:** The mat will begin to warm up to its optimal temperature. The Cozy Toes mat operates at a single, comfortable warming temperature.
3. **Power Off:** To turn off the heater, flip the in-line switch to the "OFF" position. The indicator light will turn off.



Image: Close-up of a user's feet on the foot warmer, highlighting the integrated power control.

Video: A brief overview of the Cozy Products CT Cozy Toes Carpeted Foot Warming Heater, demonstrating its simple operation.

6. MAINTENANCE

To ensure the longevity and proper functioning of your foot warming mat, follow these maintenance guidelines:

- **Cleaning:** Always unplug the mat before cleaning. Use a damp cloth to wipe the surface clean. Do not immerse the mat in water or use harsh chemical cleaners.
- **Inspection:** Regularly inspect the power cord and mat for any signs of damage. If any damage is found, discontinue use immediately and contact customer support.

7. STORAGE

When not in use, or for seasonal storage:

- Ensure the mat is unplugged and completely cool.
- The mat can be rolled up for compact storage. Secure it with a strap or tie to keep it neatly rolled.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.



Image: The foot warmer rolled up, demonstrating its portability and ease of storage.

8. TROUBLESHOOTING

If you experience issues with your Cozy Products CT Toes Carpeted Foot Warming Heater, please refer to the following common solutions:

- **No Heat/Power:** Ensure the power cord is securely plugged into a working electrical outlet and the in-line switch is in the "ON" position. Check if the outlet is functioning by plugging in another device.
- **Insufficient Warmth:** Allow adequate time (up to 15-20 minutes) for the mat to reach its full operating temperature. Ensure the mat is placed on a flat surface and not obstructed.
- **Unusual Odor:** A slight odor may be present during initial use. This is normal and should dissipate quickly. If a strong or persistent odor occurs, discontinue use and unplug the device.

If these steps do not resolve the issue, please contact Cozy Products customer support for further assistance.

9. SPECIFICATIONS

Feature	Specification
Model Number	CTCOMBO2
Wattage	70 watts
Material	Polypropylene
Item Weight	2.79 pounds
Package Dimensions	18.4 x 8.9 x 4.4 inches
Number of Settings	1
UPC	766885466781

10. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official Cozy Products website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.