



[Manuals.plus](#) /

› [Clarisonic](#) /

› Clarisonic Mia Smart Device Instruction Manual

Clarisonic Mia Smart

Clarisonic Mia Smart Device Instruction Manual

Model: Mia Smart

1. INTRODUCTION

The Clarisonic Mia Smart is a multi-functional sonic device designed for comprehensive skincare. It offers advanced cleansing, firming massage, and makeup blending capabilities. This manual provides essential information for the safe and effective use of your Mia Smart device.

The Mia Smart device utilizes sonic technology to gently cleanse the skin, remove impurities, and prepare it for better absorption of skincare products. With interchangeable brush heads, it adapts to various skincare needs, including deep cleansing, gentle exfoliation, and seamless makeup application.

2. WHAT'S IN THE BOX

Your Clarisonic Mia Smart 5-Piece Set includes the following components:

- Mia Smart Device
- Three Cleansing Brush Heads (e.g., Daily Radiance, Deep Pore, Sensitive)
- One Foundation Makeup Blending Brush Head
- One Facial Cleanser (e.g., Refreshing Gel Cleanser)
- USB Charging Stand



Figure 2.1: Clarisonic Mia Smart 5-Piece Set components.



Figure 2.2: Clarisonic Mia Smart retail packaging.

3. SETUP

3.1 Initial Charging

1. Connect the USB charging stand to a power source.
2. Place the Mia Smart device onto the charging stand. Ensure the device is properly seated.
3. The battery indicator light on the device will illuminate to show charging status. A full charge typically takes 18-24 hours for the first use.
4. The device is fully charged when the indicator light remains solid.

3.2 Attaching Brush Heads

1. Align the three tabs on the back of the brush head with the three slots on the device handle.
2. Push down and twist the brush head clockwise until it locks into place. Ensure it is securely attached.
3. To remove, twist counter-clockwise and pull up.

4. OPERATING INSTRUCTIONS

4.1 Cleansing Routine

1. Dampen your face and the brush head with warm water.
2. Apply a small amount of facial cleanser directly to the brush head or to your face.
3. Press the power button to turn on the device. The device will automatically run a 60-second T-Timer cycle.
4. Gently glide the brush in small, circular motions over your face. The T-Timer will briefly pause to indicate when to move to the next area:
 - 20 seconds on forehead
 - 20 seconds on nose and chin
 - 10 seconds on each cheek
5. The device will automatically turn off after the cycle is complete.
6. Rinse your face and the brush head thoroughly.

Note: Avoid using exfoliating face washes with the device, as this may cause irritation. Creamy face washes are recommended.

4.2 Makeup Blending

1. Attach the Foundation Makeup Blending Brush Head to the Mia Smart device.
2. Apply a small amount of liquid or cream foundation to the brush head or directly to your face.
3. Turn on the device.
4. Gently glide the brush over your face in circular motions to blend the foundation evenly.
5. Continue until desired coverage and blend are achieved.

4.3 Smart Features and App Connectivity

The Mia Smart device can connect to the Clarisonic app via Bluetooth for personalized routines and tracking. Refer to the Clarisonic app for detailed instructions on pairing and customizing your skincare experience.

Your browser does not support the video tag.

Video 4.1: An overview of the Clarisonic Mia Smart device features, including cleansing, firming, and eye awakening functions, and its smart app connectivity. This video demonstrates the device in use for various skincare applications.

5. MAINTENANCE

5.1 Cleaning the Device and Brush Heads

- After each use, rinse the brush head thoroughly with warm water and a mild soap.
- Wipe the handle of the Mia Smart device with a damp cloth. Do not submerge the device in water for extended periods.
- Ensure the device and brush head are dry before storing.

5.2 Replacing Brush Heads

For optimal performance and hygiene, it is recommended to replace your Clarisonic brush heads every three months. Worn bristles can reduce effectiveness and may harbor bacteria.

1. Remove the old brush head by twisting it counter-clockwise and pulling it off.

2. Attach a new Clarisonic brush head as described in Section 3.2.

6. TROUBLESHOOTING

6.1 Device Not Turning On

- Ensure the device is fully charged. Place it on the charging stand for at least 24 hours.
- Check the charging stand and USB cable for any damage.

6.2 Brush Head Not Spinning or Vibrating Properly

- Ensure the brush head is securely attached to the device. Remove and reattach it.
- The brush head may be worn out. Replace it with a new one.
- Check for any debris or buildup around the brush head base that might be obstructing movement.

6.3 Skin Irritation

- Reduce the frequency of use (e.g., use every other day instead of daily).
- Ensure you are using a gentle cleanser and a brush head suitable for your skin type (e.g., Sensitive brush head).
- Avoid pressing the device too hard against your skin.

7. SPECIFICATIONS

Feature	Detail
Brand	Clarisonic
Model	Mia Smart
Product Dimensions	8.52 x 2.84 x 7 inches
Weight	1.55 Pounds
Number of Pieces	5 (Device, 3 Cleansing Heads, 1 Makeup Head, Cleanser, Charger)
Bristle Material	Synthetic
Handle Material	Aluminum
Recommended Uses	Face Cleansing, Face Makeup Application
Skin Type Compatibility	Sensitive (with appropriate brush head)
Connectivity	Bluetooth (for app integration)

8. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the official Clarisonic website or contact Clarisonic customer service directly. Keep your proof of purchase for warranty claims.

