

[Manuals.plus](#) /

› [CUSIMAX](#) /

› Cusimax Portable Electric Stove User Manual

CUSIMAX 1200W hot plate

Cusimax Portable Electric Stove User Manual

Model: 1200W Hot Plate

Brand: CUSIMAX

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The infrared cooktop works by far infrared heating and has no electromagnetic radiation, making it harmless to the human body.
- Automatic safety shutoff function with temperature regulated by a thermostat. It is normal when the indicator turns on and off automatically to maintain the set temperature and for overheating protection.
- The base of the unit can get very hot. Exercise extreme caution and allow ample time for cooling after use.

PRODUCT OVERVIEW



The Cusimax Portable Electric Stove features a single ceramic glass burner with a sleek black stainless steel body.

- **Ceramic Glass Burner:** Provides efficient and even heating.
- **Control Knob:** Allows for easy temperature adjustment.
- **Indicator Light:** Illuminates when the unit is heating.

Dimensions and Weight



Product Size

The small scale in size makes it very portable
No stovetop required



The compact design makes the stove highly portable.

- **Product Dimensions:** 11.8"D x 8.7"W x 3"H
- **Item Weight:** Approximately 3.5 lbs

SETUP

1. **Unpack:** Carefully remove the stove and all packaging materials.
2. **Placement:** Place the stove on a dry, level, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
3. **Initial Use:** Before first use, operate the stove at the highest setting for approximately 15 minutes without cookware. This helps to burn off any manufacturing residues and may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated during this process.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the power cord into a standard 120V electrical outlet.
2. **Temperature Control:** Turn the control knob to your desired heat setting (1-7/Max). The indicator light will illuminate, signaling that the burner is heating.

3. **Cookware Placement:** Place your compatible cookware centrally on the burner.
4. **Heating Speed:** The infrared burner heats up in seconds, providing rapid cooking capabilities.
5. **Thermostat Cycling:** The indicator light may cycle on and off during operation. This is normal and indicates the internal thermostat is regulating the temperature to prevent overheating and maintain your selected setting.

Compatible Cookware



Compatible with all cookware

pots and pans with maximum size of 7.1 inches



Wok



Frying Pan



Aluminum Cookware



Stainless Steel Saucepan



Ceramic Cookware



Glass Cookware



Stovetop Teapot



Steak Plate



The Cusimax Portable Electric Stove is compatible with all types of cookware.

- Works with pots and pans with a maximum size of 7.1 inches.
- Suitable for glass, copper, frying pans, cast-iron, and aluminum cookware.
- Heats cookware efficiently with minimal heat loss.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and safe operation of your stove.

1. **Cool Down:** Always ensure the stove is completely cool before cleaning. Unplug the unit from the power outlet.
2. **Exterior Cleaning:** Simply wipe the exterior and ceramic cooktop with a clean, damp cloth. For hard stains, use a mild washing-up

liquid.

3. **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.

4. **Storage:** Store the stove in a dry place when not in use.



Powered by 120V and 1200-Watts

take only a few seconds to heat up take only a few seconds to heat up



It makes boiling water easier and quicker



Easy to clean with a damp cloth for convenient maintenance.

TROUBLESHOOTING

If you encounter issues with your Cusimax Portable Electric Stove, refer to the following common problems and solutions:

- **Stove not heating:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the control knob is turned to an active heat setting (not 'OFF').

- **Indicator light cycling on/off:**

- This is normal operation. The built-in thermostat automatically turns the heating element on and off to maintain the selected temperature and prevent overheating.

- **Smoke or odor during initial use:**

- A slight odor or smoke during the first 15 minutes of operation at high heat is normal. This is due to the burn-off of protective coatings. Ensure good ventilation.

- **Cookware not heating efficiently:**

- Ensure the cookware base is flat and makes full contact with the burner surface.
- Verify the cookware size is within the recommended 7.1-inch maximum.

SPECIFICATIONS

- **Color:** Black 1
- **Material:** Stainless Steel
- **Heating Elements:** 1
- **Product Dimensions:** 11.8"D x 8.7"W x 3"H
- **Wattage:** 1200 watts
- **Voltage:** 120 Volts
- **Power Source:** Electric
- **Special Feature:** Infrared Heating Technology
- **Item Weight:** Approximately 3.5 lbs

WARRANTY AND SUPPORT

Cusimax stands behind its products and offers comprehensive support for your portable electric stove.

- **Money Back Guarantee:** Enjoy a 30-Day Money Back Guarantee from the date of purchase.
- **Warranty:** The product comes with an 18-Month warranty. Register your product to activate the full warranty period.
- **Customer Service:** Benefit from free Lifetime Customer Service.

For any issues, questions, or warranty claims, please contact Cusimax customer support through their official website or the contact information provided in your product packaging. Provide your model number and purchase details for faster assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07HFC6H3C>

More documents and user manuals: <https://manuals.plus/>