

[Manuals.plus](#) /

> [NEDIS](#) /

> NEDIS CLDK008BK Digital Alarm Clock User Manual

NEDIS CLDK008BK

NEDIS CLDK008BK Digital Alarm Clock User Manual

Model: CLDK008BK

INTRODUCTION

Thank you for purchasing the NEDIS CLDK008BK Digital Alarm Clock. This compact alarm clock features a clear 0.6-inch LED display and a convenient snooze function. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image: Packaging of the NEDIS CLDK008BK Digital Alarm Clock, showing the product and its features.

SAFETY INFORMATION

Please read these safety instructions carefully before using the product to prevent damage or injury.

- Ensure the power adapter voltage matches your local power supply.
- Do not expose the device to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep the device away from heat sources such as radiators, stoves, or other heat-producing appliances.
- Unplug the device during lightning storms or when unused for long periods.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your alarm clock.

Front View



Image: Front view of the alarm clock, showing the red LED display and the "nedis" logo.

- **LED Display:** Shows the current time and alarm status.

Top and Rear View



Image: Top and rear view of the alarm clock, highlighting the control buttons and the alarm ON/OFF switch.

- **SNOOZE Button:** Activates the snooze function when the alarm sounds.
- **HOUR Button:** Adjusts the hour.
- **MIN Button:** Adjusts the minute.
- **TIME Button:** Used to set the current time.
- **ALARM Button:** Used to set the alarm time.
- **ALARM ON/OFF Switch:** Toggles the alarm function on or off.

SETUP

Follow these steps to set up your alarm clock for the first time.

1. **Connect Power:** Plug the power adapter into the alarm clock's power input, then into a standard wall outlet. The LED display will light up.



Image: The alarm clock with its power cable and plug, ready to be connected to a power source.

2. **Set Current Time:**
 - Press and hold the **TIME** button.
 - While holding **TIME**, press the **HOUR** button to adjust the hour.
 - While holding **TIME**, press the **MIN** button to adjust the minute.
 - Release the **TIME** button once the correct time is set.

OPERATING INSTRUCTIONS

Setting the Alarm

1. Press and hold the **ALARM** button.
2. While holding **ALARM**, press the **HOUR** button to adjust the alarm hour.
3. While holding **ALARM**, press the **MIN** button to adjust the alarm minute.
4. Release the **ALARM** button once the desired alarm time is set.

Activating/Deactivating the Alarm

- To activate the alarm, slide the **ALARM ON/OFF** switch to the "ON" position. An alarm indicator (usually a small light or icon) should appear on the display.
- To deactivate the alarm, slide the **ALARM ON/OFF** switch to the "OFF" position. The alarm indicator will disappear.

Using the Snooze Function

- When the alarm sounds, press the large **SNOOZE** button. The alarm will temporarily stop and sound again after a few minutes (typically 5-9 minutes, depending on the model).
- To turn off the alarm completely after snoozing, slide the **ALARM ON/OFF** switch to "OFF".

MAINTENANCE

Proper care ensures the longevity of your alarm clock.

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If not in use for an extended period, unplug the device and store it in a cool, dry place.
- **Avoid Obstructions:** Ensure the speaker grille (on the top/rear) is not blocked to maintain clear alarm sound.

TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Display is blank or not lighting up.	No power connection.	Ensure the power adapter is securely plugged into the clock and the wall outlet. Check if the outlet is functional.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Check if the ALARM ON/OFF switch is in the "ON" position. Verify that the alarm time is set correctly.
Time is incorrect.	Time was not set or power interruption.	Reset the current time using the TIME, HOUR, and MIN buttons as described in the "Setup" section.
Snooze function not working.	Alarm was turned off instead of snoozed.	Ensure you press the SNOOZE button when the alarm sounds, not the ALARM ON/OFF switch.

SPECIFICATIONS

- **Model:** CLDK008BK
- **Display Type:** Digital LED (0.6 inch)
- **Color:** Black
- **Power Source:** Mains powered with adapter
- **Special Features:** Alarm, Snooze function
- **Dimensions (W x H x D):** Approximately 10.7 x 9 x 5 cm (4.2 x 3.5 x 2 inches)
- **Weight:** 276 g
- **Material:** Plastic
- **Manufacturer:** NEDIS
- **ASIN:** B07HFDHDL5

WARRANTY AND SUPPORT

This product comes with a limited warranty from NEDIS. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact NEDIS customer support.

For technical support or further assistance, please visit the official NEDIS website or contact their customer service department. You can find more information about NEDIS products at [NEDIS Brand Store](#).