



Manuals.plus /

› DISA HOME /

› DISA HOME PARCAMP-01 Portable Camping Stove User Manual

DISA HOME PARCAMP-01

DISA HOME PARCAMP-01 Portable Camping Stove User Manual

Model: PARCAMP-01

1. INTRODUCTION

Thank you for choosing the DISA HOME PARCAMP-01 Portable Camping Stove. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new stove. Please read all instructions carefully before use and retain this manual for future reference.

2. SAFETY INFORMATION

WARNING: Failure to follow these instructions may result in fire, explosion, property damage, personal injury, or death.

- **Outdoor Use Only:** This appliance is designed for outdoor use only. Do not operate indoors or in enclosed spaces.
- **Ventilation:** Ensure adequate ventilation when operating the stove.
- **Gas Canister:** Use only disposable butane or propane gas canisters as specified. Do not use refillable cylinders unless explicitly stated as compatible.
- **Leak Check:** Always perform a leak check after connecting a new gas canister. Apply soapy water to connections; bubbles indicate a leak. Do not use if a leak is detected.
- **Flammable Materials:** Keep the stove clear of flammable materials, liquids, and vapors. Maintain a safe distance from tents, trees, and other combustible items.
- **Stable Surface:** Operate the stove on a firm, level, non-combustible surface.
- **Children and Pets:** Keep children and pets away from the stove during operation and while it is cooling down.
- **Overpressure Protection:** The stove is equipped with an overpressure auto-off system. If activated, turn off the stove, disconnect the gas canister, and allow it to cool before inspecting.
- **Hot Surfaces:** Stove surfaces become extremely hot during use. Allow to cool completely before handling or storing.

- **Modifications:** Do not modify this appliance. Any modification may be dangerous and will void the warranty.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and undamaged:

- 1 x DISA HOME PARCAMP-01 Portable Camping Stove
- 1 x Hard Plastic Carrying Case



Figure 3.1: The DISA HOME PARCAMP-01 Portable Camping Stove packaged in its durable carrying case.

4. SETUP

1. **Unpack:** Remove the stove from its carrying case and place it on a stable, level, non-combustible surface outdoors.
2. **Open Gas Compartment:** Locate the gas canister compartment on the side of the stove. Open the cover.
3. **Insert Gas Canister:** Ensure the stove's control knob is in the 'OFF' position. Align the notch on the gas canister collar with the guide tab inside the gas compartment. Push the canister firmly into place.
4. **Lock Canister:** Push the gas canister locking lever (often labeled 'LOCK' or 'GAS LOCK') to the 'LOCK' position to secure the canister. Ensure it is fully engaged.



Figure 4.1: The gas compartment opened, showing the mechanism for inserting a butane or propane gas canister.

5. **Check for Leaks:** Before lighting, perform a leak check. Apply a soapy water solution to the gas canister connection point. If bubbles appear, there is a leak. Do not proceed; tighten the connection or replace the canister.
6. **Place Cookware:** Place your pot or pan securely on the pot supports.

5. OPERATING INSTRUCTIONS



Figure 5.1: Overview of the DISA HOME PARCAMP-01 stove, highlighting the control knob and ignition button.

1. **Ignition:** Ensure the gas canister is properly installed and locked. Turn the control knob counter-clockwise from 'OFF' to the 'ON' position while simultaneously pressing the ignition button (usually red or black, located near the control knob). You should hear a click and see the burner ignite.
2. **Flame Adjustment:** Once ignited, continue to turn the control knob to adjust the flame intensity. Turn towards 'MAX' for a stronger flame and towards 'MIN' for a weaker flame.

3. **Turning Off:** To turn off the stove, turn the control knob clockwise to the 'OFF' position. Ensure the flame is completely extinguished.
4. **After Use:** After the stove has cooled completely, push the gas canister locking lever to the 'UNLOCK' position and remove the gas canister. Close the gas compartment cover.

6. MAINTENANCE AND CARE

- **Cleaning:** Allow the stove to cool completely before cleaning. Wipe exterior surfaces with a damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads, as these can damage the porcelainized steel finish.
- **Burner:** Keep the burner clean and free of food debris. Use a soft brush if necessary. Ensure burner ports are not clogged.
- **Storage:** Store the stove in its original carrying case in a cool, dry place, away from direct sunlight and heat sources. Always remove the gas canister before storage.
- **Inspection:** Periodically inspect the stove for any signs of damage, wear, or gas leaks. If any issues are found, do not use the stove and contact customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stove does not ignite.	Gas canister not properly installed or empty. Ignition button not pressed or faulty.	Ensure canister is locked in place. Replace empty canister. Press ignition button firmly. Check for spark.
Weak or inconsistent flame.	Low gas pressure (canister nearly empty or cold). Burner ports clogged.	Replace gas canister. Allow canister to warm slightly (do not heat directly). Clean burner ports.
Gas smell detected.	Gas leak.	Immediately turn off stove and disconnect gas canister. Perform a leak check with soapy water. Do not use if leak persists.
Overpressure auto-off system activated.	Excessive pressure in gas canister (e.g., overheating).	Turn off stove, disconnect canister, and allow to cool. Ensure stove is not exposed to direct sunlight or excessive heat.

8. SPECIFICATIONS

- **Model:** PARCAMP-01
- **Fuel Type:** Butane / Propane (disposable canisters)
- **Material:** Porcelainized Steel
- **Thermal Flow:** 2.5 kW
- **Nominal Consumption:** 155 g/h
- **Ignition:** Electric Ignition
- **Features:** Flame Control, Wind Protection, Overpressure Auto-Off System
- **Dimensions:** 34 cm x 26 cm x 8 cm (approximately)

- **Color:** Black

9. WARRANTY AND SUPPORT

The DISA HOME PARCAMP-01 Portable Camping Stove comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or failure to follow the instructions in this manual.

For warranty claims, technical support, or any questions regarding your product, please contact DISA HOME customer service through your retailer or the official DISA HOME website.