

[Manuals.plus](#) /

› [Wireless Express](#) /

› Mini Boombox with LED Speakers - User Manual

Wireless Express WE-BB

Mini Boombox with LED Speakers - User Manual

Model: WE-BB | Brand: Wireless Express

INTRODUCTION

Thank you for purchasing the Wireless Express Mini Boombox with LED Speakers. This portable audio device combines classic boombox aesthetics with modern features, including Bluetooth connectivity, FM radio, and dynamic LED speaker lights. Designed for both home and outdoor use, it offers powerful stereo sound in a compact, easy-to-carry form factor. Please read this manual carefully to ensure proper operation and to maximize your enjoyment of this product.

PACKAGE CONTENTS

Please check the box for the following items:

- Mini Boombox Unit
- Remote Control
- Charging Cable

If any items are missing or damaged, please contact Wireless Express customer support.

PRODUCT OVERVIEW



Figure 1: Front view of the Mini Boombox, highlighting the LED speakers and central control panel.

The Mini Boombox features a robust design with a convenient carrying handle and a retractable antenna for enhanced FM reception. The front panel includes two main speakers with integrated LED lights that illuminate during operation, a digital display, and various control buttons and ports.

Key features include:

- **Bluetooth Connectivity:** Wirelessly stream audio from compatible devices.
- **FM Radio:** Enjoy your favorite radio stations with enhanced reception.
- **LED Light-Up Speakers:** Dynamic lights add a visual element to your music.
- **Multiple Inputs:** Supports SD card, USB drive, and Aux-in for versatile playback options.
- **Headphone Jack:** For private listening.
- **Remote Control:** Convenient operation from a distance.
- **Rechargeable Battery:** Provides portable power for on-the-go use.

SETUP

1. Charging the Boombox

Before first use, fully charge the boombox. Connect the provided charging cable to the charging port on the unit and the other end to a standard USB power adapter (not included) or a computer USB port. The charging indicator light will show the charging status. A full charge typically takes approximately 3-4 hours.



Figure 2: Side panel of the boombox, illustrating the various input ports including the charging port.

2. Powering On/Off

To power on the boombox, locate the power switch, usually on the back or side of the unit, and slide it to the "ON" position. The display will light up, and you will hear an audible prompt. To power off, slide the switch to the "OFF" position.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

1. Power on the boombox. It will automatically enter Bluetooth pairing mode, indicated by a "BLUE" message on the display and a flashing LED light.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "WE-BB" (or similar name) from the list of devices.
4. Once paired, the boombox will confirm with an audible sound, and the "BLUE" indicator will become solid.
5. You can now play music from your device through the boombox.

2. FM Radio Mode

1. Extend the retractable antenna for optimal reception.
2. Press the "M" (Mode) button on the boombox or remote control until "FM" appears on the display.
3. To auto-scan and save available stations, press and hold the "Play/Pause" button. The boombox will scan and store stations automatically.
4. Use the "Previous/Next" buttons to navigate through saved stations.

3. SD Card / USB Input Mode

1. Insert a USB flash drive or an SD card (TF card) into the corresponding slot.
2. The boombox will automatically switch to USB or SD card mode and begin playing audio files. If it doesn't, press the "M" (Mode) button to select the correct input.
3. Use the "Play/Pause" and "Previous/Next" buttons to control playback.

4. AUX Input Mode

1. Connect an external audio device (e.g., MP3 player, smartphone) to the AUX-in port using a 3.5mm audio cable (not included).
2. Press the "M" (Mode) button until "AUX" appears on the display.
3. Audio will now play from your connected device. Control playback from the external device.

5. Volume Control

Adjust the master volume using the large rotary knob on the front panel or the volume buttons on the remote control.

6. LED Speaker Lights

The boombox features integrated LED lights within the speakers that illuminate and change colors automatically during operation. These lights are designed to enhance the listening experience and cannot be independently turned off or controlled.



Figure 3: The Mini Boombox in an outdoor setting, showcasing its portability and suitability for group activities.

MAINTENANCE

Cleaning

Wipe the exterior of the boombox with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid getting moisture into any openings.

Battery Care

To prolong the life of the rechargeable battery, avoid fully discharging it frequently. Recharge the unit regularly, even if not in use, to maintain battery health. Store the boombox in a cool, dry place when not in use for extended periods.

Storage

When storing the boombox, ensure it is powered off. Keep it away from extreme temperatures, direct sunlight, and high humidity. Protect it from dust and physical impact.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power / Unit does not turn on.	Battery is depleted.	Connect the boombox to a power source using the charging cable and allow it to charge.
No sound.	Volume is too low; Incorrect mode selected; Device not properly connected.	Increase volume. Press "M" (Mode) button to select correct input (Bluetooth, FM, AUX, USB/SD). Ensure Bluetooth device is paired or AUX cable/USB/SD card is fully inserted.
Bluetooth not connecting.	Boombox not in pairing mode; Device too far; Interference.	Ensure boombox is in Bluetooth mode and "BLUE" is flashing. Move device closer to boombox. Turn off other Bluetooth devices nearby. Try unpairing and re-pairing.
FM radio static / Poor reception.	Antenna not extended; Weak signal.	Fully extend the retractable antenna. Try repositioning the boombox for better signal. Perform auto-scan again.
Remote control not working.	Battery depleted in remote; Obstruction.	Replace remote control battery. Ensure no objects are blocking the line of sight between the remote and the boombox's sensor.

SPECIFICATIONS

Feature	Detail
Model Number	WE-BB
Product Dimensions (L x W x H)	13 x 5 x 8 inches
Item Weight	3 pounds
Connectivity Technology	Bluetooth
Speaker Type	Portable Bluetooth Speakers
Color	Green Camo

Feature	Detail
Batteries	1 C batteries required (included) - <i>Note: This refers to the internal rechargeable battery.</i>
Manufacturer	Wireless Express

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Wireless Express directly. Refer to the product packaging or the official Wireless Express website for the most up-to-date contact details and warranty terms.

Note: Specific warranty terms may vary by region and retailer. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question