

ELECTROLUX EIV734

Electrolux EIV734 Induction Hob User Manual

Model: EIV734 | Brand: ELECTROLUX

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before installing and using the appliance. Keep this manual for future reference. The manufacturer is not responsible for any injuries or damages resulting from incorrect installation or use.

1.1 General Safety

- This appliance is intended for domestic use only.
- Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep children under 8 years of age away from the appliance unless continuously supervised.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- Do not store items on the cooking surfaces.
- Do not use a steam cleaner to clean the appliance.

1.2 Electrical Safety

- The appliance must be earthed.
- Only a qualified person must carry out the electrical installation.
- The appliance must be connected to the mains supply with a device that allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm.
- Ensure that the electrical specifications on the rating plate match your household's electrical supply.

2. PRODUCT OVERVIEW

The Electrolux EIV734 is a 71 cm induction hob featuring 4 cooking zones, each with a booster function, and advanced controls for efficient and flexible cooking.



Figure 1: Overview of the Electrolux EIV734 Induction Hob. This image displays the sleek black glass surface with four distinct cooking zones and the integrated control panel at the front.

2.1 Control Panel

The hob features sensitive individual controls with direct access for each cooking zone, allowing precise power adjustments and activation of special functions.

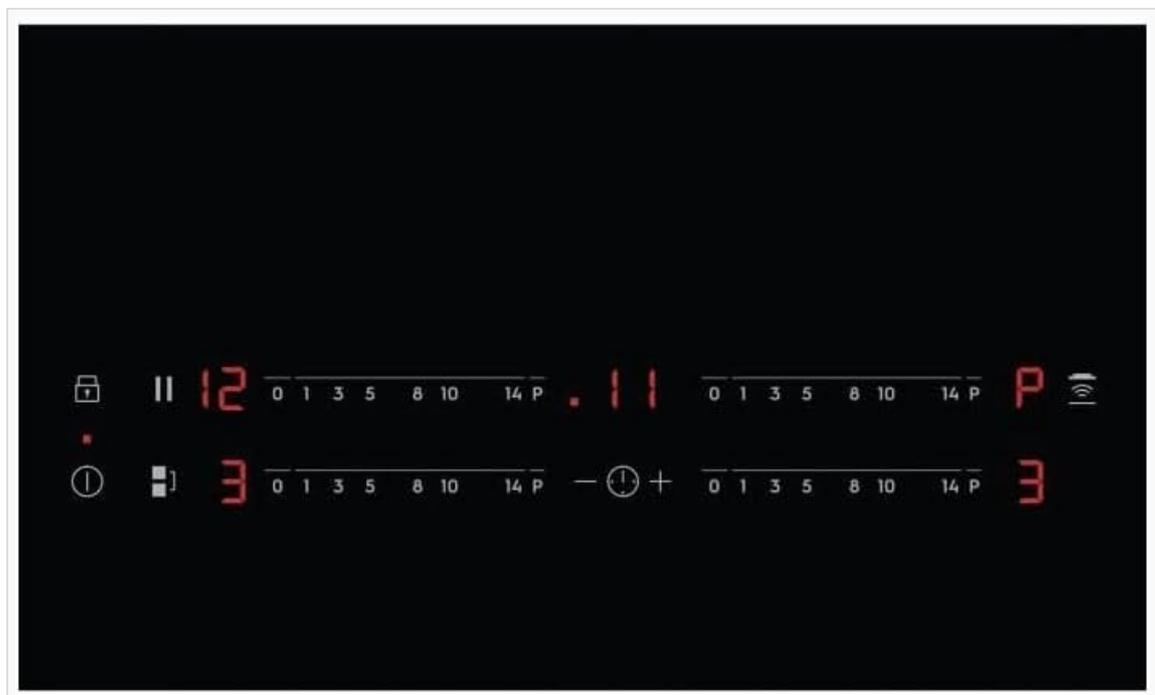


Figure 2: Close-up of the control panel. This image shows the touch-sensitive controls for power levels, timers, and special functions like the booster and bridge function, indicated by illuminated digits and symbols.

2.2 Cooking Zones

- **Left Zone:** Can be combined using the Bridge function.

- **Right Zones:** Two individual zones.
- **Rear Right Zone:** A larger zone, up to 24 cm, with higher power output.

3. SETUP AND INSTALLATION

Installation of this appliance must be performed by a qualified professional. Incorrect installation can lead to hazards and void the warranty. Refer to the separate installation guide for detailed instructions.

3.1 Before First Use

- Remove all packaging materials from the appliance.
- Clean the hob surface with a damp cloth and mild detergent.
- Ensure proper ventilation around the appliance.

4. OPERATING INSTRUCTIONS

4.1 Turning On/Off

- To turn on: Touch the main power symbol (⏻) for a few seconds.
- To turn off: Touch the main power symbol (⏻) again.

4.2 Selecting a Cooking Zone and Setting Power

- Place a suitable pan on the desired cooking zone.
- Touch the control for the specific cooking zone.
- Adjust the power level using the slider or '+' and '-' symbols. The hob offers 15 power positions.

4.3 Special Functions

- **Booster Function:** Activates maximum power for rapid heating. Touch the 'P' symbol for the selected zone.
- **Bridge Function:** Combines two cooking zones into one large zone, ideal for oversized cookware like grill pans. Activate by touching the bridge symbol for the left zones.



Figure 3: Electrolux EIV734 demonstrating the Bridge function with a grill pan. This image shows a large rectangular grill pan placed across two cooking zones, indicating the use of the bridge function for extended heating areas.

- **Timer Function:** Set a cooking duration for each zone. The hob has 4 independent timers.
- **Hob2Hood (H2H) Connection:** The hob can automatically control certain compatible cooker hoods based on cooking activity. Refer to your cooker hood manual for compatibility and setup.
- **Stop & Go (Pause Function):** Temporarily pauses cooking and resumes with the same settings.
- **Elapsed Time Function:** Displays the duration of cooking since the zone was activated.
- **Control Lock:** Locks the control panel to prevent accidental changes to settings.

4.4 Safety Features

- **Automatic Shut-off:** The hob automatically turns off after a certain period if no settings are changed.
- **Pan Detection:** The hob only heats when a suitable pan is placed on the cooking zone.
- **Anti-overflow:** Automatically reduces power or switches off if liquid overflows onto the control panel.
- **Anti-overheating:** Prevents damage by reducing power or switching off if a cooking zone becomes too hot.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your induction hob.

- Always switch off the appliance and allow it to cool down before cleaning.
- Clean the glass surface with a soft cloth and a non-abrasive cleaner specifically designed for ceramic or induction hobs.
- For stubborn stains, use a specialized hob scraper, holding it at a sharp angle.
- Do not use abrasive sponges, scouring pads, or harsh chemical cleaners.

6. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions before contacting service.

- **Hob does not turn on:** Check if the appliance is properly connected to the power supply. Ensure the control lock is not activated.
- **Cooking zone does not heat:** Verify that a suitable pan is placed on the zone. Ensure the power level is set correctly.
- **Error codes displayed:** Consult the full Electrolux service manual or contact customer support with the specific error code.
- **Unusual noises during operation:** A slight humming or buzzing sound is normal for induction hobs, especially at high power settings or when using the booster function. This is due to the electromagnetic field.

If the problem persists after attempting these solutions, contact Electrolux customer service.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	EIV734
Brand	Electrolux
Type	Induction Hob
Number of Heating Elements	4
Color	Black
Surface Material	Glass
Product Dimensions (D x W x H)	52 cm x 71 cm x 4 cm
Weight	11.3 kg
Maximum Total Electrical Power	7350 W
Voltage	220-240V
Special Features	Modular cooking zone, Combi-zone, Boost function, Pan recognition, Bridge function, Hob2Hood function

8. WARRANTY AND SUPPORT


This Electrolux appliance comes with a manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Electrolux website.


For technical assistance, spare parts, or service requests, please contact Electrolux customer support. Have your model number (EIV734) and serial number ready when contacting support.

You can find contact information for your region on the official Electrolux website: www.electrolux.com

© 2023 Electrolux. All rights reserved.

Related Documents - EIV734

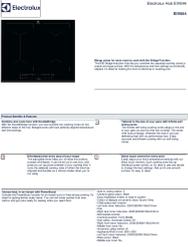	<p>Electrolux Hob EIV644 Induction Cooktop User Manual and Specifications</p> <p>Detailed information on the Electrolux Hob EIV644, an induction cooktop featuring DoubleBridge, Infinite self-sizing zones, and PowerBoost technology. Includes product benefits, features, and technical specifications for optimal use and installation.</p>
	<p>Electrolux Ceramic Glass Hob User Manual - EHC644BB, EHC944BB</p> <p>User manual for Electrolux Ceramic Glass Hobs, models EHC644BB and EHC944BB. This guide provides detailed instructions on operation, safety, cleaning, troubleshooting, and technical specifications.</p>
	<p>Electrolux EIS62453 Udhëzues Përdorimi</p> <p>Ky udhëzues përdoruesi ofron udhëzime të hollësishme për pllakën induktive Electrolux EIS62453, duke mbuluar instalimin, funksionimin, sigurinë dhe mirëmbajtjen.</p>
	<p>Electrolux HOI335F Hob User Manual</p> <p>This user manual provides comprehensive instructions for the Electrolux HOI335F hob, covering safety, installation, operation, maintenance, and troubleshooting.</p>
	<p>Electrolux EIS82453: Udhëzues Përdorimi</p> <p>Ky manual përdoruesi ofron udhëzime të plota për pllakën e gatimit me induksion Electrolux EIS82453. Ai mbulon instalimin, përdorimin e sigurt, funksionet dhe mirëmbajtjen, duke siguruar performancë optimale dhe siguri për përdoruesit. Për këshilla shtesë, zgjidhje problemesh dhe mbështetje, vizitoni Electrolux Support.</p>

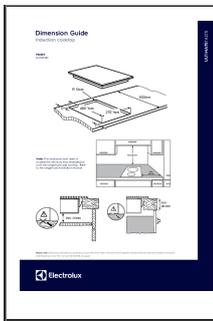

[Electrolux EHI3251BE Induction Cooktop Dimension Guide](#)

Provides essential installation dimensions and clearance requirements for the Electrolux EHI3251BE induction cooktop, including cut-out sizes, overhead, side, and rear clearances for safe and proper fitting.