

VINABTY ER-22601A

VINABTY ER-22601A Replacement Remote Control for Hisense TV User Manual

INTRODUCTION

This manual provides comprehensive instructions for the VINABTY ER-22601A replacement remote control. It is designed to operate various Hisense TV models without the need for programming. Please read this manual carefully to ensure proper use and to maximize the lifespan of your remote control.

COMPATIBLE TV MODELS

The ER-22601A remote control is compatible with the following Hisense TV models:

- 24F33, 32D33, 32D50, 40D50P, 40D50
- 32M2160, 40M2160P
- 32D60TSP, 40d60tsp
- HL24K20D, HL32K20D
- 24D33, 24E33
- LTDN40D50AU, LHD32D50AU
- 50D36P, 32D36
- LHD24D33SEU, LHD24W26CEU, LHD24D33EU
- LHD32A300JEU, LHD32A300JSEU, LHD32D33EU, LHD32W26CEU, LHD32D36EU, LHD32D33SEU, LHD32D31TUK
- LTDN40D36EU, LTDN40D36TUK, LTDN40D36SEU, LTDN40D50EU, LTDN40E139TUK
- H39N2110C

PACKAGE CONTENTS

- 1 x VINABTY ER-22601A Replacement Remote Control

Note: Batteries are not included and must be purchased separately.

SETUP INSTRUCTIONS

1. Install Batteries:

Locate the battery compartment on the back of the remote control. Slide the battery cover downwards or in the direction indicated by an arrow to open it. Insert two new AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment. Close the battery cover securely.



Image: The VINABTY ER-22601A remote control, displaying its full button layout. The battery compartment is located on the reverse side.

2. No Programming Required:

The VINABTY ER-22601A remote control is pre-programmed for compatible Hisense TV models. No

additional setup or code entry is required. Once batteries are installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

Point the remote control directly at your Hisense TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

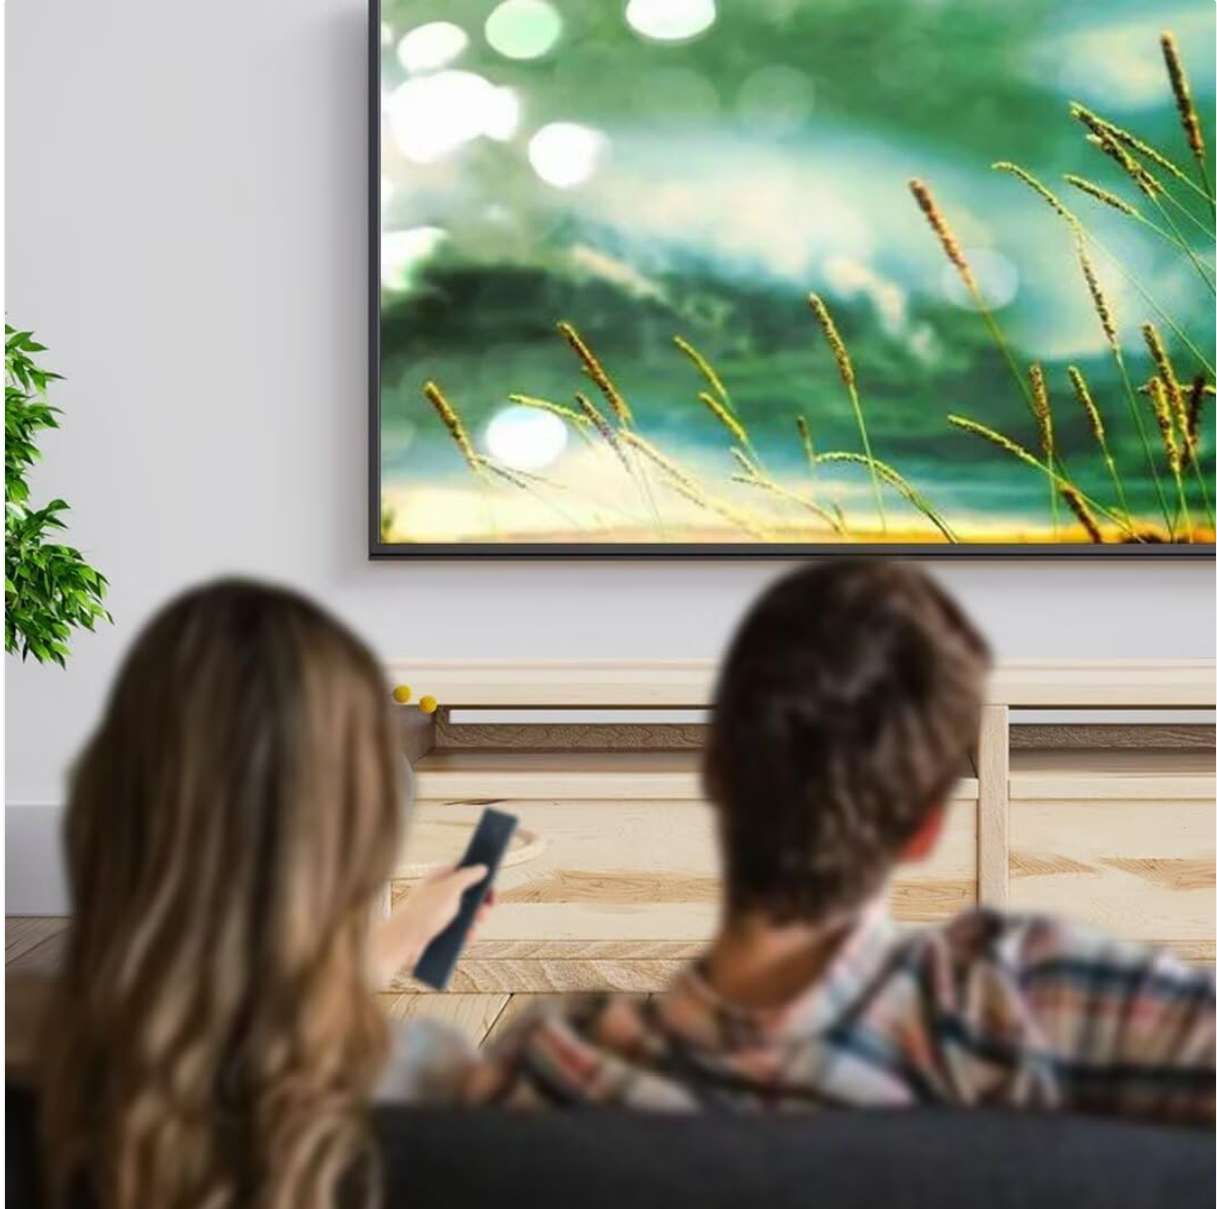


Image: A user operating a TV with the VINABTY ER-22601A remote control from a sofa.

Button Functions:

- **Power (●):** Turns the TV on or off.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **TV/DTV:** Switches between TV and Digital TV modes.
- **Zoom:** Adjusts the screen zoom level.
- **Mute:** Mutes or unmutes the TV sound.
- **Sleep:** Sets a sleep timer for the TV.
- **Media:** Accesses media playback functions.
- **I/II:** Audio language selection (for multi-audio broadcasts).

- **Lang.:** Language settings.
- **Subtitle:** Toggles subtitles on or off.
- **FAV+/FAV-:** Navigates through favorite channels.
- **Exit:** Exits the current menu or function.
- **Menu:** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **Info:** Displays program information.
- **EPG:** Opens the Electronic Program Guide.
- **CH+/CH-:** Changes channels up or down.
- **VOL+/VOL-:** Adjusts volume up or down.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **Still:** Pauses the current picture.
- **Text:** Accesses Teletext (if supported by TV/broadcast).
- **T.Shift:** Time Shift function (if supported by TV/recording device).
- **Hold:** Holds a Teletext page.
- **Index:** Accesses Teletext index.
- **Pvr list:** Opens the Personal Video Recorder list.
- **Size:** Changes Teletext display size.
- **Reveal:** Reveals hidden Teletext information.
- **Subpage:** Navigates Teletext subpages.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the TV menu or interactive service.

MAINTENANCE

- **Cleaning:**
Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive cleaners, as these can damage the remote's surface or internal components.
- **Battery Replacement:**
Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.
- **Storage:**
If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the remote.

TROUBLESHOOTING

- **Remote is not working:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.

- Ensure you are within the effective operating range (up to 33 feet) and pointing the remote directly at the TV.
- Verify that the TV is powered on.
- **Some buttons are not responding:**
 - This remote is designed for specific Hisense TV models. While most basic functions are universal, some advanced or TV-specific functions may not be fully supported or may require your TV's original remote.
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.

SPECIFICATIONS

Brand	VINABTY
Model Number	ER-22601A
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Hisense)
Max Number of Supported Devices	1
Battery Type	AA (2 required)
Maximum Range	33 Feet
Button Quantity	30
Item Dimensions (L x W x H)	5"L x 1.9"W x 0.5"H

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for this VINABTY product is not available in the provided product details. For warranty claims or technical assistance, please refer to the seller or manufacturer's contact information provided at the time of purchase.