

Smartby LC-RCRUS-18

Smartby Universal Remote Control for Sharp Roku TVs (Model LC-RCRUS-18) User Manual

Model: LC-RCRUS-18 | Brand: Smartby

[Introduction](#) [Setup](#) [Operating Instructions](#) [Maintenance Support](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

This manual provides instructions for the Smartby Universal Remote Control, Model LC-RCRUS-18. This remote is designed to be compatible with various Sharp Roku TV models without requiring any programming or pairing. Simply insert batteries, and it is ready for use.

Compatible Sharp Roku TV Models include:

- LC-32LB591U
- LC-32LB481U
- LC-43LB481C
- LC-43LB481U
- LC-43LBU591U
- LC-43LB601U
- LC-50LB601U
- LC-50LBU591U
- LC-55LBU591U
- LC-65LBU591U
- 398GR10BESPN0002

Note: This remote control is NOT compatible with Roku Stick or Roku Players.

2. SETUP

2.1. Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery installation. Insert two AAA batteries, matching polarity.

2.2. Initial Use

Once batteries are correctly installed, the remote control is ready for immediate use. No programming or pairing is required. Point the remote directly at your Sharp Roku TV and press the Power button to begin operation.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your Smartby Universal Remote Control. The layout is designed for intuitive navigation of your Sharp Roku TV.





Figure 2: Front view of the remote control with button layout.

3.1. Button Functions

Button	Function
Power ()	Turns the TV on or off.
Back (←)	Returns to the previous screen or menu.
Home (△)	Navigates to the Roku Home screen.
Navigation Pad (Up, Down, Left, Right)	Moves cursor or selection on screen.
OK	Confirms a selection or opens an item.
Volume Up/Down (/)	Adjusts the TV volume. Located on the side of the remote.
Mute ()	Mutes or unmutes the TV audio. Located on the side of the remote.
Replay (↺)	Replays the last few seconds of content.
Options (⌵)	Accesses additional options or settings within an app or menu.
Sleep ()	Activates the sleep timer function.
Rewind (⏮)	Rewinds playback.
Play/Pause (⏸)	Plays or pauses content.
Fast Forward (⏭)	Fast forwards playback.
Streaming Service Buttons (Netflix, Sling, Hulu, Starz)	Direct access buttons to launch specific streaming applications.

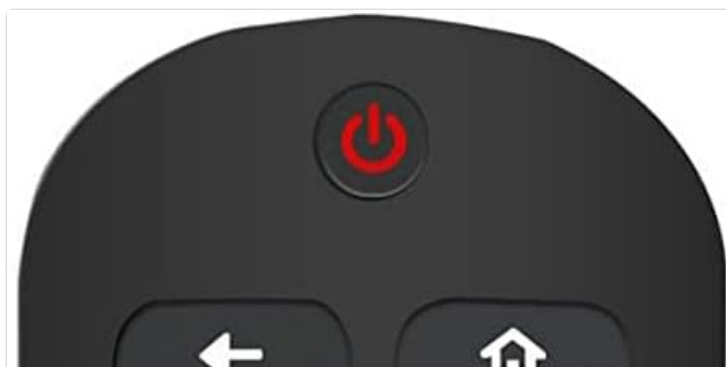




Figure 3: Side view of the remote control, showing volume and mute buttons.

4. MAINTENANCE

4.1. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's surface or internal components.

4.2. Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or damage.

If the remote will not be used for an extended period, remove the batteries to prevent potential leakage and damage.

5. TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none">• Ensure batteries are correctly installed with the correct polarity.• Replace old batteries with new AAA alkaline batteries.• Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Remove any obstructions.• Move closer to the TV.
Remote works intermittently.	<ul style="list-style-type: none">• Check battery connections. Remove and reinsert batteries to ensure a secure fit.• Replace batteries with new ones, even if they seem to have some power left.• Ensure no external interference (e.g., strong lights, other electronic devices) is affecting the signal.
Remote does not control my Roku device.	This remote is specifically designed for Sharp Roku TVs and is NOT compatible with standalone Roku Sticks or Roku Players.

6. SPECIFICATIONS

Feature	Detail
Model Number	LC-RCRUS-18
Brand	Smartby
Compatible Devices	Sharp Roku Televisions (specific models listed in Introduction)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)

Feature	Detail
Product Dimensions	6 x 1.8 x 0.6 inches (approximately 15.2 x 4.6 x 1.5 cm)
Item Weight	1.5 ounces (approximately 42.5 grams)
Color	Black
Special Feature	Universal (for specified Sharp Roku TV models)

7. SUPPORT

7.1. Return Policy

For information regarding returns, please refer to the retailer's return policy where the product was purchased. The product typically includes a 30-day return period from the date of purchase.

7.2. Manufacturer Contact

For further assistance or inquiries, please contact Smartby Factory, the manufacturer of this remote control. Specific contact details may be available through your retailer or the Smartby official website.