

[Manuals.plus](#) /

> [BOMAZ](#) /

> BOMAZ Replacement Remote Control Instruction Manual for Pioneer AV Receivers (Models VSX-30, VSX-1122, VSX-1122-K, VSX-1123, VSX-321-K, VSX-820, VSX-820-K)

BOMAZ 0db5e625-e6c0-47b1-8b5d-b8d10bcbba5e

BOMAZ Replacement Remote Control Instruction Manual

For Pioneer AV Receivers: VSX-30, VSX-1122, VSX-1122-K, VSX-1123, VSX-321-K, VSX-820, VSX-820-K

1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your BOMAZ replacement remote control. This remote is designed to be compatible with various Pioneer AV receiver models, including VSX-30, VSX-1122, VSX-1122-K, VSX-1123, VSX-321-K, VSX-820, and VSX-820-K. It offers a direct replacement solution, requiring no complex setup.

2. PRODUCT OVERVIEW

The BOMAZ replacement remote control is engineered for stable performance and ease of use. Its ergonomic design ensures comfortable handling and direct functionality with compatible Pioneer AV receivers.



Image 2.1: Front view of the BOMAZ replacement remote control, showing all buttons and their labels. The remote is black with white and grey buttons.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No additional setup or programming is required. The remote is ready for use immediately after battery installation.

Powered By IR3.0* Technology

Compatible Better



Upgraded chip



Higher matching



Improved stability

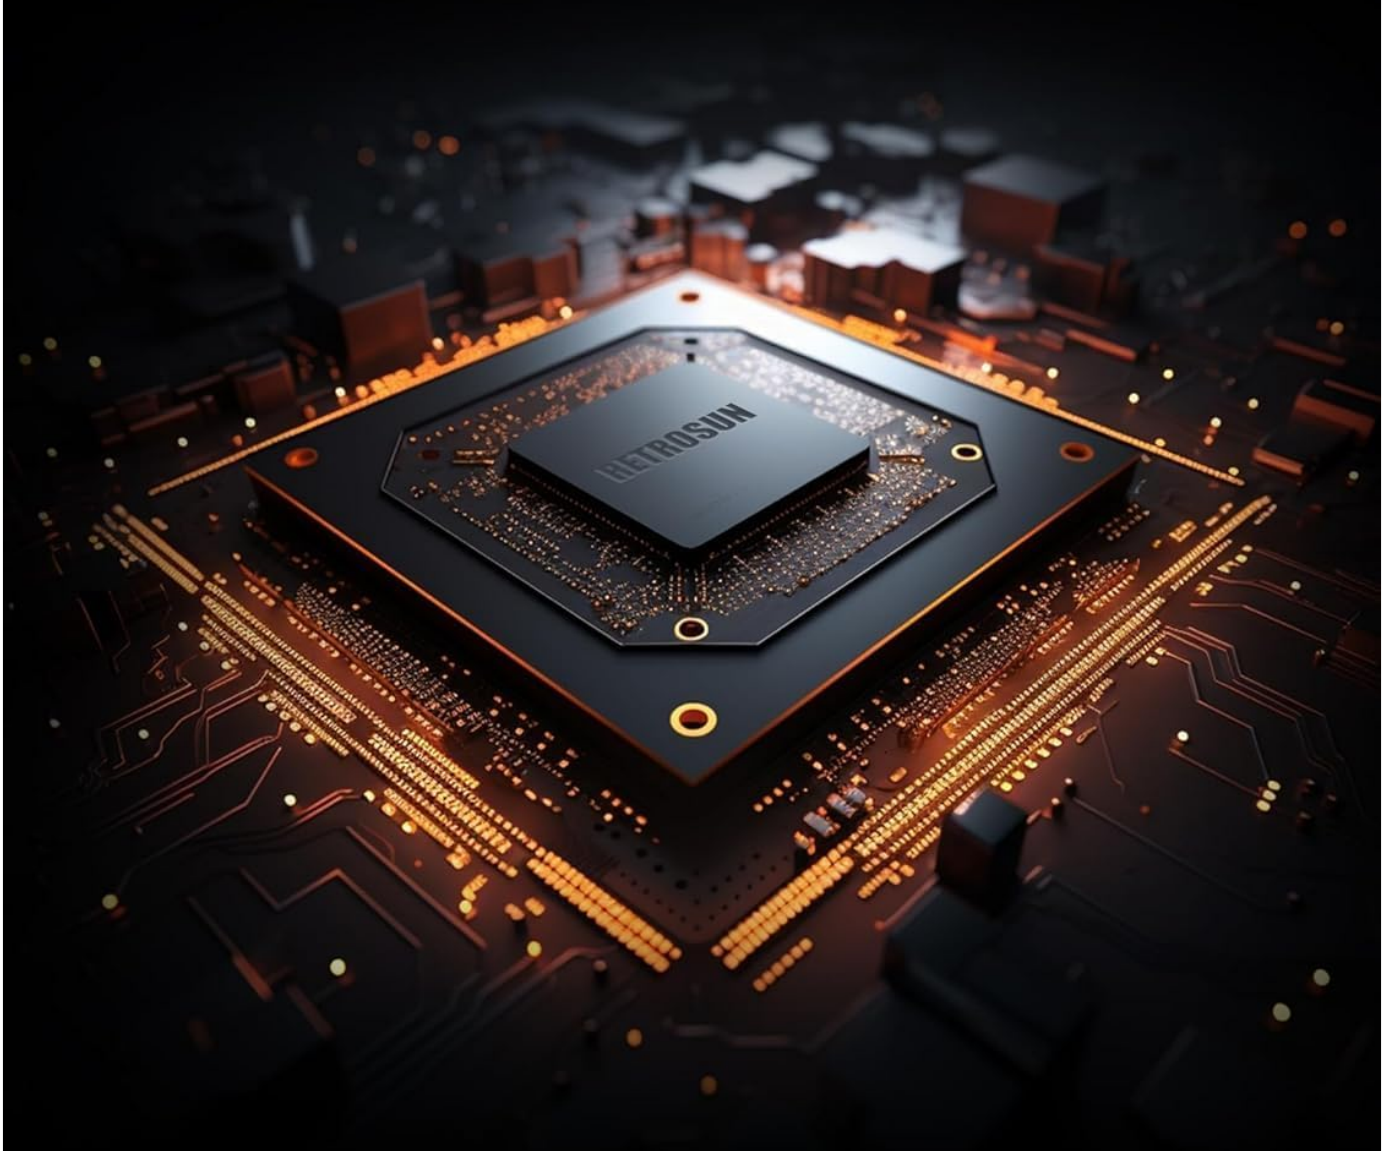


Image 3.1: Front and back view of the remote control. The back view clearly shows the battery compartment cover, indicating where to insert batteries.

4. OPERATING INSTRUCTIONS

This remote control functions identically to the original Pioneer remote for the specified models. Simply point the remote at your Pioneer AV receiver and press the desired function button.

4.1 Basic Functions

- **Power On/Off:** Press the **RECEIVER ON/OFF** button to power your AV receiver on or off.
- **Input Selection:** Use the **INPUT SELECT** buttons (e.g., BD, CD, TV, DVR, TUNER) to choose your desired audio/video source.
- **Volume Control:** Adjust the volume using the **MASTER VOLUME +/-** buttons.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to unmute.
- **Navigation:** Use the directional arrow buttons (**UP, DOWN, LEFT, RIGHT**) and **ENTER** button for menu navigation.

4.2 Advanced Functions

For specific advanced functions such as sound modes, speaker settings, or system setup, refer to your original Pioneer AV receiver's instruction manual. The buttons on this replacement remote correspond directly to the functions of the original remote.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's operational range decreases or if it stops responding. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote's surface or internal components.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the AV receiver's infrared sensor.
 - Ensure you are within the operable distance (more than 8 meters).
- **Some buttons not working:**
 - Verify that the remote is pointed directly at the AV receiver.
 - Ensure the batteries have sufficient power.
 - If only specific buttons are unresponsive, there might be a rare internal issue. Contact support if troubleshooting steps do not resolve the problem.

7. SPECIFICATIONS

Feature	Detail
Brand	BOMAZ

Feature	Detail
Compatible Devices	Pioneer AV Receivers (VSX-30, VSX-1122, VSX-1122-K, VSX-1123, VSX-321-K, VSX-820, VSX-820-K)
Power Source	2 x AAA Batteries (required)
Operable Distance	More than 8 meters
Material	ABS Material
Color	Black
Item Weight	3.2 ounces
Package Dimensions	8.7 x 3.4 x 0.8 inches

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This BOMAZ replacement remote control comes with a **120-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

If you encounter any issues or have questions regarding your remote control, please contact the seller directly. They are committed to providing assistance and resolving any problems you may experience.

For general inquiries or to report a problem, refer to the contact information provided by your retailer or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question