

[Manuals.plus](#) /

› [BOMAZ](#) /

› BOMAZ Replacement Remote Control for Pioneer VSX-521, VSX-1024, VSX-1020 AV Receivers

BOMAZ VSX-521

BOMAZ Replacement Remote Control Instruction Manual

For Pioneer VSX-521, VSX-1024, VSX-1020 Series AV Receivers

1. INTRODUCTION

This manual provides instructions for the BOMAZ replacement remote control, compatible with various Pioneer Home Theater AV Receiver models, including VSX-521, VSX-521-K, VSX-1024, VSX-1024-K, VSX-1020, and VSX-1020-K. This remote is designed for immediate use without requiring any programming.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Battery compartment with cover removed, ready for AAA battery insertion.

The remote is ready for use immediately after battery installation. No additional programming is required.

3. OPERATING INSTRUCTIONS

This replacement remote control provides essential functions for your Pioneer AV Receiver. Point the remote directly at your receiver for optimal performance.

3.1 Basic Functions

- **Power On/Off:** Use the **POWER** button to turn the receiver on or off.
- **Volume Control:** Use the **VOL +** and **VOL -** buttons to adjust the audio volume.
- **Input Selection:** Use the dedicated input buttons (e.g., DVD/LD, TV/SAT, CD, TUNER) to switch between different audio/video sources connected to your receiver.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore sound.

3.2 Navigation and Menu Control

The central directional pad (up, down, left, right arrows) and the **ENTER** button are used for navigating menus and confirming selections on your receiver's display. The **MENU** button typically accesses the main menu, while **RETURN** or **BACK** allows you to go back to the previous screen.



Figure 2: Overview of the remote control buttons and their functions.

3.3 Video Demonstration

Your browser does not support the video tag.

Video 1: A demonstration of a replacement remote control for Pioneer AV Receivers, showcasing its various buttons and their general operation. Note: Specific model numbers shown in the video may vary, but the functionality is similar.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote control, as this can damage internal components.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the AV receiver.
 - Confirm you are within the operable distance (more than 8 meters).
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the non-responsive buttons, to remove any dirt or debris that might be interfering.
 - While this remote is a direct replacement, some minor button functions might differ slightly from an original Pioneer remote. Refer to your receiver's original manual for specific advanced functions if needed.
- **Intermittent operation:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure a clear line of sight to the receiver's IR sensor.

If the issue persists after following these steps, please contact customer support for assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	BOMAZ
Compatible Devices	Pioneer VSX-521, VSX-521-K, VSX-1024, VSX-1024-K, VSX-1020, VSX-1020-K Home Theater Receiver AV Receiver

Feature	Detail
Model Number	VSX-521 (general compatibility reference)
Batteries Required	2 x AAA batteries
Operable Distance	More than 8 meters
Material	ABS Material
Special Feature	No Programming Required
Color	Black
Item Weight	3.2 ounces
Package Dimensions	9.69 x 4.49 x 1.14 inches

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This BOMAZ replacement remote control comes with a**120-day warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described under normal use.

7.2 Customer Support

For any questions, concerns, or issues with your remote control, please contact our customer support team. We test every remote before shipment to ensure quality. If you receive a remote with a problem, do not hesitate to reach out to us for assistance.

Contact information for customer support can typically be found on your purchase receipt or the seller's platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07HHV4R5D>

More documents and user manuals: <https://manuals.plus/>