

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Jakks Pacific Big Action Load 'N Go Ride-On Excavator Instruction Manual

Fisher-Price 97908

Fisher-Price Jakks Pacific Big Action Load 'N Go Ride-On Excavator Instruction Manual

Model: 97908

1. INTRODUCTION

Thank you for choosing the Fisher-Price Jakks Pacific Big Action Load 'N Go Ride-On Excavator. This manual provides essential information for the safe assembly, operation, maintenance, and care of your new ride-on toy. Please read all instructions carefully before use and retain this manual for future reference.



Image 1.1: The Fisher-Price Jakks Pacific Big Action Load 'N Go Ride-On Excavator.

2. SAFETY INFORMATION

Important Safety Guidelines:

- Recommended for children aged 2 to 4 years.
- Maximum weight capacity: 22 kg (50 lbs).
- Requires 2 AAA batteries for sound functions (not included).
- Adult supervision is required at all times during use.
- Use on flat, level surfaces only to ensure safe and efficient operation. Avoid sloped areas, stairs, or uneven terrain.
- Keep hands and feet clear of moving parts, especially the excavator arm and scoop.
- Do not use near roads, motor vehicles, swimming pools, or other bodies of water.
- Inspect the product regularly for loose parts, damage, or wear. Discontinue use if any damage is found.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Ensure all parts are present before proceeding. Dispose of all packaging materials responsibly.

3.2 Assembly

This product generally requires minimal assembly. Refer to the included assembly sheet for specific instructions if any components need to be attached. Ensure all connections are secure before use.

3.3 Battery Installation

The ride-on excavator requires 2 AAA batteries for its sound features. To install batteries:

1. Locate the battery compartment, typically found under the seat or near the control panel.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

Note: Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove exhausted batteries from the product.

4. OPERATING INSTRUCTIONS

4.1 Riding the Excavator

The Big Action Load 'N Go is a foot-to-floor ride-on toy. The child sits on the seat and propels the vehicle forward or backward using their feet. The wide wheels provide stability for confident movement.

4.2 Operating the Front Excavator

The front excavator arm and scoop are fully functional. Children can operate the scoop using the dual levers located near the steering wheel. These levers allow for picking up, transporting, and unloading lightweight items such as sand, small toys, or building blocks.



Image 4.1: Detail of the excavator scoop mechanism.

4.3 Sound Functions

Press the designated button on the control panel to activate realistic engine sounds and work alerts. This feature enhances the play experience, simulating a real construction site environment.



Image 4.2: Steering wheel and control panel, including the sound activation button.

4.4 Storage Compartment

The seat lifts up to reveal a convenient storage compartment. This space can be used by children to store small toys, tools, or other treasures they collect during play.

5. MAINTENANCE

- **Cleaning:** Wipe the ride-on toy with a damp cloth and mild soap. Do not use abrasive cleaners or solvents. Rinse thoroughly and dry completely before storage.
- **Storage:** Store the product in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the product will not be used for an extended period to prevent leakage.
- **Inspection:** Regularly check all parts for wear, damage, or loose fasteners. Tighten any loose screws. Replace damaged parts immediately.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Sounds not working	Dead or incorrectly installed batteries.	Check battery polarity. Replace with new AAA batteries.
Excavator arm not moving smoothly	Obstruction or dirt in the mechanism.	Clear any debris. Ensure levers are operated correctly.
Product unstable during use	Used on uneven surface or exceeding weight limit.	Ensure use on flat, level surfaces. Verify child's weight is within limits.

7. SPECIFICATIONS

Feature	Detail
Brand	Fisher-Price
Model Number	97908
Material	High-density Plastic
Product Dimensions (L x W x H)	35.6 x 71.1 x 40.6 cm (14 x 28 x 16 inches)
Item Weight	3.04 kg (6.7 lbs)

Feature	Detail
Recommended Age	2 to 4 years (Manufacturer minimum: 12 months)
Maximum Weight Capacity	22 kg (50 lbs)
Battery Requirement	2 x AAA (not included)
Assembly Required	No (Minimal assembly may be required for certain components)
UPC	039897979083

8. WARRANTY INFORMATION

Warranty information for this product is not specified in the provided details. Please refer to the product packaging or contact Fisher-Price customer support for warranty details.

9. CUSTOMER SUPPORT

For further assistance, questions, or to report issues, please contact Fisher-Price customer support. Contact details are typically available on the product packaging or the official Fisher-Price website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

