



Manuals.plus /

› ZAVOR /

› Zavor LUX LCD 6 Quart Programmable Electric Multi-Cooker Instruction Manual

ZAVOR Pressure Cookers748

Zavor LUX LCD 6 Quart Programmable Electric Multi-Cooker Instruction Manual

Model: Pressure Cookers748

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Zavor LUX LCD 6 Quart Programmable Electric Multi-Cooker. This appliance is designed to function as a pressure cooker, slow cooker, rice cooker, yogurt maker, steamer, and more, offering a versatile cooking experience. Please read all instructions thoroughly before first use and retain this manual for future reference.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The multi-cooker will not open if there is pressure inside, ensuring a safety mechanism is in place. Do not attempt to force the lid open while the unit is pressurized.
- Use only original Zavor replacement parts and accessories.
- This appliance is for household use only. Do not use outdoors.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Zavor LUX LCD Multi-Cooker.



Image: The Zavor LUX LCD 6 Quart Multi-Cooker, showcasing its stainless steel exterior, black lid, and the central LCD control panel with various function buttons.

- **Main Unit:** The base of the multi-cooker containing the heating element and control panel.
- **Removable Cooking Pot:** Stainless steel inner pot where food is cooked.
- **Lid:** Features a sealing gasket, pressure release valve, and lid handle.
- **Control Panel:** LCD screen and buttons for selecting functions and adjusting settings.
- **Power Cord:** Detachable cord for connecting the appliance to an electrical outlet.

4. BEFORE FIRST USE

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wash the removable cooking pot, lid, and sealing gasket with warm, soapy water. Rinse thoroughly and dry completely. The stainless steel inner pot and steamer are dishwasher safe.
3. **Wipe Down:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. **Assemble:** Ensure the sealing gasket is properly seated in the lid. Place the removable cooking pot inside the main unit.

5. OPERATING YOUR ZAVOR LUX LCD MULTI-COOKER

5.1 Control Panel Overview

The Zavor LUX LCD Multi-Cooker features an intuitive digital LCD screen and control buttons for easy operation.

PRESSURE & SLOW COOK

HIGH and LOW presets for faster food or slow flavor infusion.

YOGURT

2-step incubation program with on-screen prompts.

GRAINS FUNCTIONS

Makes barley, quinoa, risotto, and rice under pressure. White rice can also be cooked as a traditional rice cooker would.

FLEX FUNCTION

Fully programmable, this function lets you use the unit as a pressure cooker or a traditional stockpot.

PANEL LOCK

Disables all panel controls to prevent accidental adjustments or cancellations when cooking.



Image: A close-up of the Zavor LUX LCD Multi-Cooker's control panel, highlighting the LCD screen with a list of cooking functions such as Pressure Cook, Slow Cook, Yogurt, Grains, and Flex, along with the control knob and buttons.

- **LCD Screen:** Displays selected function, cooking time, pressure level, and status indicators.
- **MENU Button:** Cycles through available cooking functions.
- **ADJUST Knob:** Used to modify cooking time, temperature, or pressure settings.

- **START/STOP Button:** Initiates or cancels a cooking program.
- **KEEP WARM Button:** Activates or deactivates the Keep Warm function.
- **TIME DELAY Button:** Allows programming a delayed start for cooking.
- **PANEL LOCK Button:** Disables all panel controls to prevent accidental adjustments during cooking.

5.2 Cooking Functions

The Zavor LUX LCD Multi-Cooker offers a variety of cooking functions, each with preset times and temperatures/pressure levels for optimal results.

- **Pressure Cook (High and Low):** Ideal for faster cooking of meats, beans, soups, and more. Features over 33 programmable settings including Hard Boiled Eggs, Meat, Beans, Soup, Risotto, Vegetable, Omelette, and Cheesecake.
- **Slow Cook (High and Low):** Perfect for tenderizing ingredients over extended periods.
- **Steam:** Cooks vegetables and fish with steam to preserve nutrients.
- **Saute:** Allows browning or searing foods directly in the pot before cooking.
- **Flex:** A versatile function that allows the unit to be used for Sous Vide cooking or as a traditional stockpot.
- **Simmer:** Maintains a gentle cooking temperature.
- **Yogurt:** Prepares homemade yogurt with a simple two-step incubation process.
- **Grains:** Includes a White Rice setting that cooks rice using only steam, similar to a traditional rice cooker. Other grain settings are also available.
- **Eggs:** Dedicated setting for cooking eggs.
- **Dessert:** Specific program for preparing various desserts.
- **Keep Warm:** Automatically activates at the end of a cooking cycle to maintain food temperature until manually shut off.
- **Time Delay:** Program cooking to start up to 6 hours later, offering convenience for meal preparation.

CONVENIENT

Program and save your own cooking times and temperature/pressure.

SAFE

Lid alarm tells you when the lid is not properly on. It won't open with pressure inside.

EASY TO READ

Panel includes a full menu plus cooking/preheating call outs and a preheating bar.

EASY TO CLEAN

Stainless steel inner pot and steamer are dishwasher safe.



Image: The Zavor LUX LCD Multi-Cooker with text overlays describing its convenient programming, lid safety alarm, easy-to-read panel with preheating bar, and dishwasher-safe stainless steel inner pot.

5.3 Cooking Examples

The Zavor LUX LCD Multi-Cooker can prepare a wide range of dishes efficiently.



EGGS
IN 9 MINUTES



SOUP
IN 10 MINUTES



BEEF STEW
IN 20 MINUTES



YOGURT
IN 8 HOURS



PULLED PORK
IN 1 HOUR



CHILI
IN 15 MINUTES



FLAN
IN 10 MINUTES

Image: A collage displaying various meals prepared using the Zavor Multi-Cooker, including eggs (9 minutes), soup (10 minutes), beef stew (20 minutes), yogurt (8 hours), pulled pork (1 hour), chili (15 minutes), and flan (10 minutes).



Image: The Zavor Multi-Cooker with its lid open, revealing a meal of cooked chicken pieces topped with diced tomatoes and herbs inside the stainless steel inner pot, ready to be served.



Image: The Zavor Multi-Cooker containing tender, sauced ribs in its inner pot, with a separate plate holding a serving of ribs, demonstrating the appliance's capability for preparing hearty meat dishes.

6. CARE AND MAINTENANCE

Proper care and maintenance will ensure the longevity and performance of your multi-cooker.

- **Cleaning the Inner Pot and Steamer:** The stainless steel inner pot and steamer are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
- **Cleaning the Lid:** Wash the lid, including the sealing gasket and pressure release valve, with warm, soapy water. Ensure all food particles are removed from the gasket and valve mechanism.
- **Cleaning the Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or any other liquid.
- **Storage:** Ensure all parts are clean and dry before storing. Store the multi-cooker in a dry place.

7. TROUBLESHOOTING

If you encounter issues with your Zavor LUX LCD Multi-Cooker, refer to the following common solutions:

- **Unit Not Turning On:** Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Check if the outlet is functional by plugging in another appliance.
- **Lid Not Sealing Properly:** Verify that the sealing gasket is correctly installed in the lid and is free from food debris or damage. Ensure the lid is properly aligned and locked into place.
- **Pressure Not Building:** Check that the pressure release valve is in the sealed position. Ensure there is sufficient liquid in the cooking pot as required by the recipe.
- **Error Codes:** If an error code appears on the LCD screen, consult the full user manual (available as a PDF via the provided link) for specific instructions related to that code.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	ZAVOR
Model Number	Pressure Cookers748
Capacity	6.3 Quarts (6 Liters)
Material	Stainless Steel
Color	Stainless Steel
Wattage	1000 watts
Product Dimensions	11.4"D x 12.2"W x 13.8"H
Item Weight	14.4 Pounds
Control Method	Touch
Operation Mode	Automatic
Dishwasher Safe Parts	Inner Pot, Steamer
UPC	850834008259

9. WARRANTY AND SUPPORT

Your Zavor LUX LCD Multi-Cooker comes with a **1-year warranty** from the date of purchase, covering defects in materials and workmanship under normal household use.

For warranty claims, technical assistance, or to purchase replacement parts, please contact Zavor customer support. Refer to the official Zavor website or the original packaging for the most current contact information. You can also find additional resources, including a detailed user guide, at the following link [Zavor LUX LCD User Guide \(PDF\)](#)