

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Nespresso](#) /
- › [Nespresso Lattissima Plus EN520T Espresso Machine User Manual](#)

Nespresso EN520T

Nespresso Lattissima Plus EN520T Espresso Machine User Manual

BRAND: NESPRESSO BY DE'LONGHI

Model: EN520T

1. INTRODUCTION

Welcome to the Nespresso Lattissima Plus EN520T espresso machine user manual. This guide provides essential information for the safe and efficient operation of your new appliance. Please read all instructions carefully before first use and keep this manual for future reference.



Figure 1: Front view of the Nespresso Lattissima Plus espresso machine in titanium finish, showcasing its compact design and control panel.

2. SETUP

Follow these steps to set up your Nespresso Lattissima Plus machine for the first time:

1. **Unpacking:** Carefully remove the machine and all components from the packaging. Ensure all parts are present and undamaged.
2. **Positioning:** Place the machine on a flat, stable, and heat-resistant surface, away from water splashes and heat sources.
3. **Water Tank:** Remove the water tank from the back of the machine. Rinse it thoroughly with fresh water and fill it to the MAX level with potable water. Place the water tank back into position.
4. **Milk Frother Assembly:** Attach the milk frother container to the side of the machine. Ensure it is securely connected.
5. **Initial Rinse:** Plug the machine into a grounded power outlet. Turn on the machine by pressing the power button. Allow

the machine to heat up (buttons will stop blinking). Place a container under the coffee outlet and press any coffee button to perform an initial rinse cycle. Repeat this process for the milk frother by filling the milk container with water and pressing a milk beverage button.

Your browser does not support the video tag.

Video 1: Official Nespresso Lattissima Plus overview video demonstrating basic operation, including water tank filling, capsule insertion, espresso brewing, and used capsule disposal.

3. OPERATING INSTRUCTIONS

Your Lattissima Plus machine offers a variety of coffee and milk-based beverages. Here's how to prepare them:

3.1. Preparing Espresso or Lungo

1. Ensure the water tank is filled.
2. Turn on the machine and wait for the buttons to stop blinking (ready state).
3. Lift the lever, insert a Nespresso Original capsule into the capsule slot, and close the lever.
4. Place a cup under the coffee outlet.
5. Press either the **Espresso** button (small cup icon) for a short coffee or the **Lungo** button (large cup icon) for a longer coffee. The machine will automatically stop when the desired volume is reached.

3.2. Preparing Milk-Based Beverages (Cappuccino, Latte Macchiato)

1. Fill the milk container with fresh, cold milk up to the desired level.
2. Attach the milk container to the machine.
3. Adjust the milk foam regulator knob on the milk container lid to your preferred foam consistency (from minimal to maximum foam).
4. Lift the lever, insert a Nespresso Original capsule, and close the lever.
5. Place a suitable cup under the coffee and milk outlets.
6. Press either the **Cappuccino** button (small cup with foam icon) or the **Latte Macchiato** button (tall glass with foam icon). The machine will first froth and dispense milk, then brew the coffee.
7. After preparation, remove the milk container and store it in the refrigerator if there is remaining milk.

3.3. Programming Coffee Volume

You can customize the volume for each coffee button:

1. Insert a Nespresso capsule.
2. Press and hold the desired coffee button (Espresso or Lungo).
3. Release the button when the desired volume of coffee is reached in your cup. The machine will remember this setting for future use.

4. MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your machine.

4.1. Daily Cleaning

- **Milk System:** After each milk-based preparation, press the **Clean** button on the milk frother. This will flush the milk spout with hot water. For thorough cleaning, disassemble the milk container components and wash them with warm soapy water or in a dishwasher.
- **Drip Tray and Used Capsule Container:** Empty and rinse the drip tray and used capsule container daily.
- **Exterior:** Wipe the machine's exterior with a damp cloth. Do not use abrasive cleaning agents or immerse the machine in water.

4.2. Descaling

Descaling is crucial to remove mineral deposits and maintain machine efficiency. The machine will indicate when descaling is needed (refer to your machine's specific light indicators for descaling alerts).

1. Refer to the Nespresso descaling kit instructions for detailed steps.
2. Always use the recommended Nespresso descaling solution.
3. Follow the on-screen or indicator light prompts during the descaling process.

5. TROUBLESHOOTING

If you encounter issues with your machine, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
No coffee flow	Water tank empty; machine not heated; air in system; clogged nozzle.	Fill water tank; wait for heating; perform a rinse cycle; descale machine.
Milk not frothing correctly	Milk system dirty; milk type/temperature; milk frother not correctly assembled.	Clean milk system thoroughly; use cold, fresh milk (dairy or suitable plant-based); ensure milk frother is correctly assembled.
Machine not turning on	No power; power button not pressed.	Check power cord connection and outlet; press the power button firmly.
Coffee is cold	Cups not preheated; machine not fully heated.	Preheat cups with hot water; wait for machine to fully heat up.

6. SPECIFICATIONS

Feature	Detail
Brand	Nespresso
Model Name	Lattissima Plus
Item Model Number	EN520T
Color	Titanium
Coffee Maker Type	Espresso Machine
Special Feature	Programmable

Feature	Detail
Specific Uses For Product	Espresso
Recommended Uses For Product	Home
Exterior Finish	Metallic
Included Components	Milk Frother
Operation Mode	Fully Automatic
Number of Items	1
Unit Count	1.0 Count
Manufacture Year	2014
Coffee Input Type	capsules
Is Dishwasher Safe	Yes (Milk Frother components)
Manufacturer	Nespresso by De'Longhi
Power Source	AC adapter
Compatible Coffee Pods	Nespresso Original
Product Dimensions	6.7 x 12.59 x 10.23 inches
Item Weight	11.03 pounds
Capacity	1100 Milliliters (Water Tank)

7. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your machine or visit the official Nespresso or De'Longhi website. Contact customer service for assistance with any issues not covered in this manual.