

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Riwbox](#) /

› Riwbox CT-7S Kids Wireless Headphones Instruction Manual

Riwbox CT-7S

Riwbox CT-7S Kids Wireless Headphones Instruction Manual

Model: CT-7S | Brand: Riwbox

INTRODUCTION

Thank you for choosing the Riwbox CT-7S Kids Wireless Headphones. These headphones are designed with children in mind, featuring a fun cat-ear design with LED lights, 85dB volume limiting for hearing protection, and versatile wired/wireless connectivity. This manual provides detailed instructions to help you get the most out of your new headphones.



Image: Riwbox CT-7S Kids Wireless Headphones in purple and green, showcasing the cat-ear design and soft earcups.

WHAT'S IN THE BOX

- Volume limiting cat ear headphones (Wireless)
- 3.5mm Anti-Tangle Audio Cable with Mic
- USB-C charging cable
- User Manual

USE AS WIRED HEADPHONES WHEN
BATTERY IS RUN OUT. 



Image: The included 3.5mm audio cable and USB-C charging cable.

SETUP

1. Charging the Headphones

Before first use, fully charge the headphones. Connect the provided USB-C charging cable to the charging port on the headphone and the other end to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status. A full charge takes approximately 2 hours and provides up to 40 hours of playback.

2. Powering On/Off

Locate the ON/OFF switch on the side of the headphone. Slide the switch to the "ON" position to power on. Slide to "OFF" to power off.

3. Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Slide the ON/OFF switch to the "ON" position. The headphones will automatically enter pairing mode, and the LED indicator will flash.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "CT-7S" from the list of devices.
5. Once paired, the LED indicator will stop flashing and remain solid, and a voice reminder will confirm the connection.

6. The connection status and battery level will be shown on your smartphone screen.



Image: Detailed diagram showing the location of the ON/OFF switch, microphone, LED indicator, USB charge port, and 3.5mm audio AUX port on the headphones.

OPERATING INSTRUCTIONS

1. Wired Mode (Optional)

If the headphone battery runs out, or if you prefer a wired connection, you can use the provided 3.5mm anti-tangle audio cable. Simply plug one end into the headphone's AUX port and the other end into your device's 3.5mm audio jack. The cable includes a built-in microphone for phone calls.

2. Volume Control

In Bluetooth mode, use the volume control buttons on the headphone to adjust the sound level. The 85dB volume limiting feature ensures safe listening levels for children.

3. Music Playback & Call Management

- **Play/Pause:** Short press the Play/Pause button.
- **Next Song:** Long press the Volume Up (+) button.
- **Previous Song:** Long press the Volume Down (-) button.
- **Answer/End Call:** Short press the Play/Pause button.

4. LED Light Control

The cat ears and side panels feature colorful LED lights that can blink and change color with the rhythm of the music. To turn the LED lights ON or OFF, press and hold the 'M' button for 3 seconds. Turning off the LED lights can help conserve battery for longer music playback.

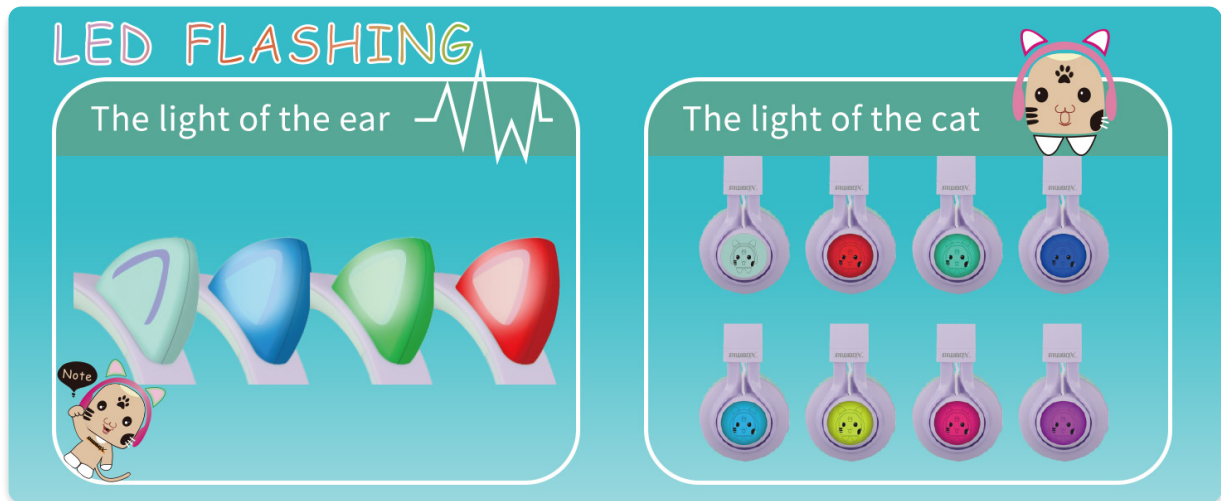


Image: Illustration showing the LED lights on the cat ears and side panels of the headphones.

MAINTENANCE

- Keep the headphones clean by wiping them with a soft, dry cloth.
- Avoid exposing the headphones to extreme temperatures or direct sunlight.
- Store the headphones in a cool, dry place when not in use. The foldable design allows for compact storage.
- Do not attempt to disassemble or repair the headphones yourself, as this may void the warranty.
- Keep away from water. While the product description mentions "Waterproof" in one specification, it's generally safer to avoid direct water exposure for electronic devices.



Image: Riwbbox CT-7S headphones shown in their folded position, highlighting portability.

TROUBLESHOOTING

Problem	Solution
Headphones won't turn on.	Ensure the headphones are charged. Connect the USB-C charging cable and try again.
Cannot pair via Bluetooth.	<ul style="list-style-type: none"> ◦ Ensure headphones are in pairing mode (LED flashing). ◦ Make sure Bluetooth is enabled on your device. ◦ Move headphones closer to your device. ◦ Forget the device from your Bluetooth list and try pairing again.
No sound in wireless mode.	<ul style="list-style-type: none"> ◦ Check if the headphones are properly paired and connected. ◦ Adjust the volume on both the headphones and your device. ◦ Ensure the headphones are charged.

Problem	Solution
No sound in wired mode.	<ul style="list-style-type: none"> ◦ Ensure the 3.5mm audio cable is fully inserted into both the headphone and the device. ◦ Check if the cable is damaged. ◦ Adjust the volume on your device.
LED lights are not working.	Press and hold the 'M' button for 3 seconds to toggle the LED lights on/off. Ensure headphones are charged.

SPECIFICATIONS

Feature	Detail
Model Number	CT-7S
Brand	Riwbox
Connectivity Technology	Bluetooth, Wired, Wireless
Bluetooth Version	5.3
Bluetooth Range	50 Feet
Audio Driver Size	40 Millimeters
Sensitivity	85 dB (Volume Limiting)
Frequency Response	2 KHz
Battery Charge Time	2 Hours
Battery Average Life	40 Hours
Control Type	Volume Control, Touch, Button
Ear Placement	On Ear
Form Factor	Over Ear, Foldable
Material	Plastic
Item Weight	0.35 Pounds

WARRANTY & SUPPORT

Riwbox offers a **1-year warranty** for products purchased from Amazon. To register for warranty service, please email support@riwbox.com within one week of purchase. Don't forget to offer your order number for verification. For further assistance or inquiries, please visit the official Riwbox website or contact their customer support.

