

[Manuals.plus](#) /

> [Bosch](#) /

> Bosch DWB64BC52 Wall-Mounted Cooker Hood User Manual

Bosch DWB64BC52

Bosch DWB64BC52 Wall-Mounted Cooker Hood User Manual

Model: DWB64BC52

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient operation of your Bosch DWB64BC52 wall-mounted cooker hood. This appliance is designed to extract cooking fumes and odors from your kitchen, ensuring a fresh environment. It features a maximum extraction capacity of 365 m³/h, 3 speed settings, and durable stainless steel construction.



Figure 1: Bosch DWB64BC52 Wall-Mounted Cooker Hood.

Please read these instructions carefully before installation and use, and keep them for future reference.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the power supply voltage matches the rating label on the appliance.
- Installation must be carried out by a qualified technician in accordance with local regulations.
- Do not flambé under the cooker hood.
- Never leave frying pans unattended during use, as overheated fat or oil can ignite.
- Clean the grease filters regularly to prevent fire hazards.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure adequate ventilation in the room when the cooker hood is used simultaneously with appliances burning gas or other fuels.

3. SETUP AND INSTALLATION

The Bosch DWB64BC52 cooker hood is designed for wall-mounted installation. Proper installation is crucial for optimal performance and safety.

3.1 Unpacking

- Carefully remove the cooker hood from its packaging.
- Check for any damage during transit. If damaged, do not install and contact your supplier.
- Ensure all components listed in the packing list are present.

3.2 Mounting the Cooker Hood

Refer to the installation diagram below for precise measurements and mounting instructions. The hood should be mounted at a safe and effective distance above your cooking surface.

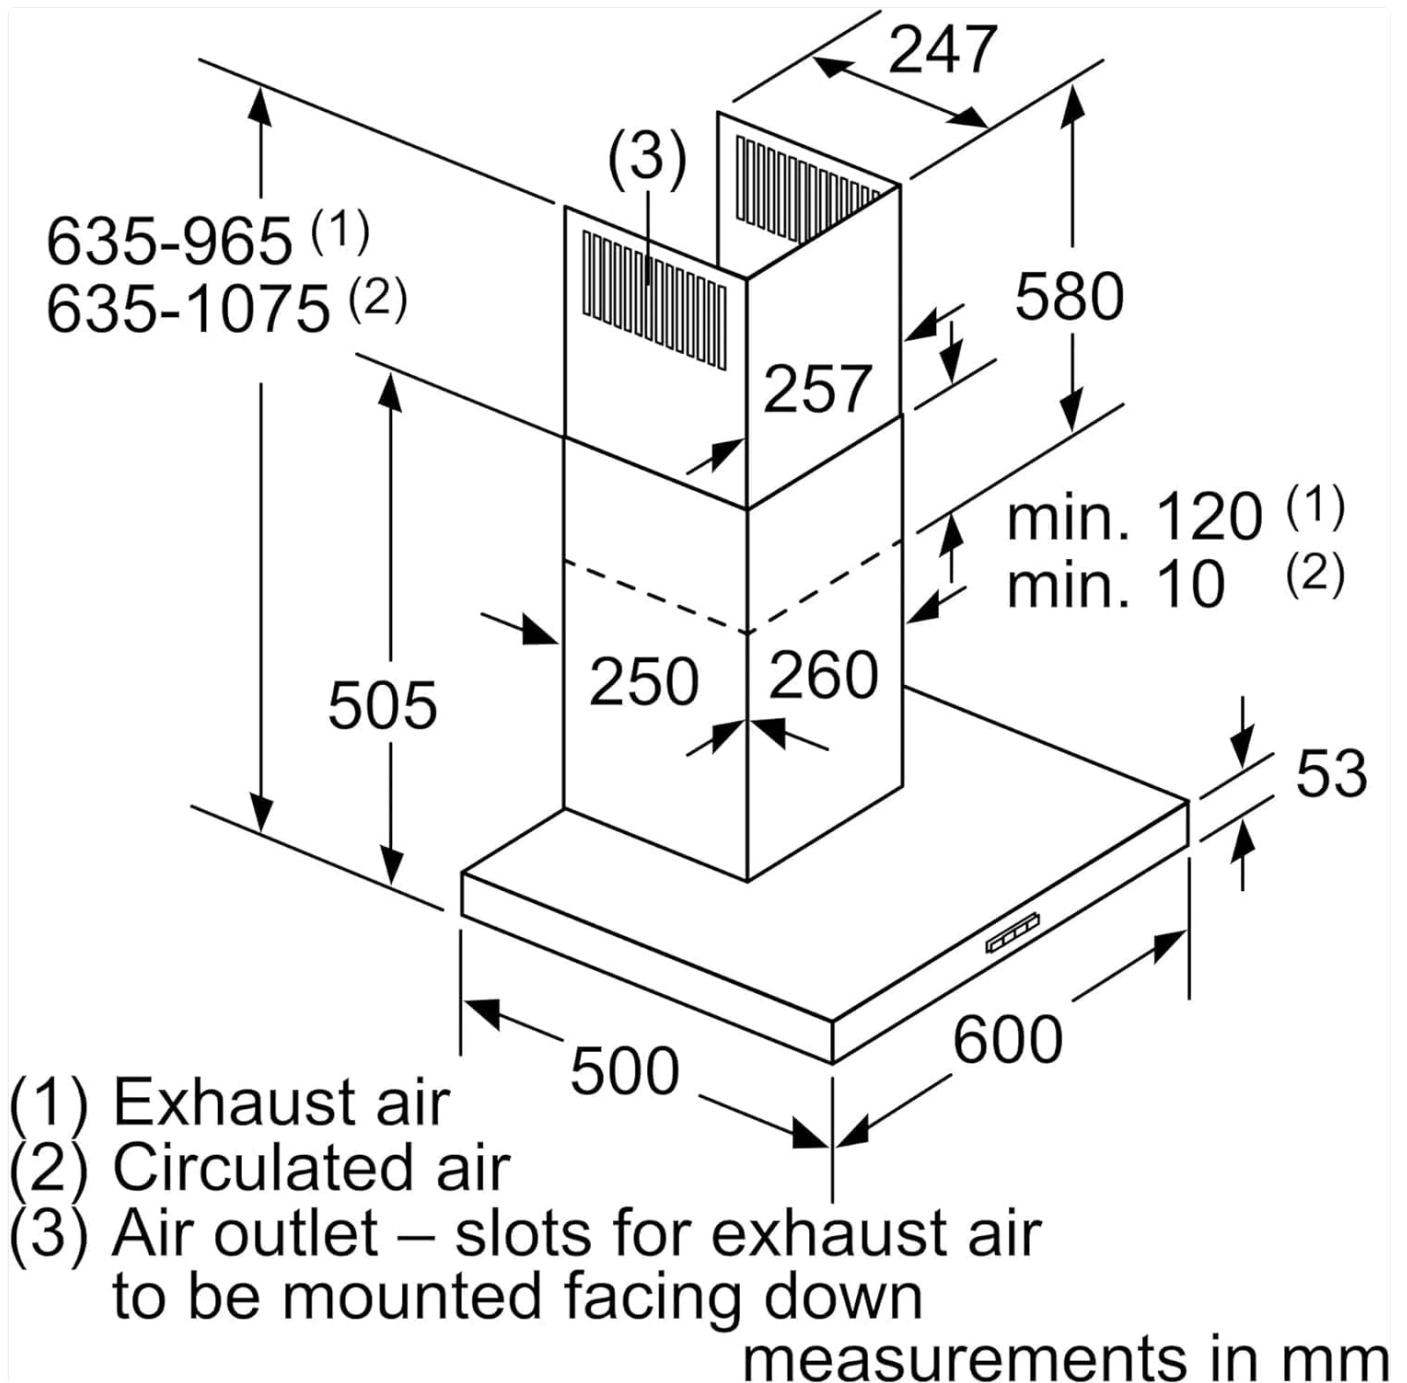


Figure 2: Installation dimensions for the DWB64BC52 cooker hood. Measurements are in millimeters. (1) Exhaust air, (2) Circulated air, (3) Air outlet slots for exhaust air to be mounted facing down.

- The hood dimensions are approximately 60 cm (width) x 50 cm (depth) x 107.5 cm (height, maximum).
- Ensure the wall is strong enough to support the weight of the cooker hood.
- Connect the exhaust ducting according to the chosen ventilation mode (exhaust air or recirculated air).
- Connect the appliance to a grounded electrical outlet (240 Volts).

4. OPERATING INSTRUCTIONS

Your Bosch DWB64BC52 cooker hood is equipped with intuitive controls for easy operation.

4.1 Power On/Off

Locate the power button on the control panel. Press once to turn the hood on, and press again to turn it off.

4.2 Speed Settings

The hood features 3 speed settings to adjust the extraction power according to your cooking needs.

- **Speed 1 (Low):** Ideal for simmering or light cooking.
- **Speed 2 (Medium):** Suitable for general cooking and moderate fumes.
- **Speed 3 (High):** Use for intense frying or when producing a large amount of steam and odors.

4.3 Lighting

The cooker hood is equipped with two 1.5 Watt LED lights to illuminate your cooking area. Press the light button on the control panel to turn the lights on or off.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your cooker hood.

5.1 Cleaning Grease Filters

The metal grease filters should be cleaned regularly (approximately every 3-4 weeks, depending on usage) to prevent grease buildup and maintain extraction efficiency.

1. Switch off the appliance and disconnect it from the power supply.
2. Open the filter locking mechanism and remove the grease filters.
3. Wash the filters by hand in hot soapy water or in a dishwasher on a low-temperature cycle.
4. Allow the filters to dry completely before reinserting them.
5. Ensure the filters are securely locked in place.

5.2 Cleaning the Exterior

Clean the stainless steel exterior with a soft cloth and a mild, non-abrasive cleaning agent. Do not use harsh chemicals or abrasive pads, as these can damage the finish.

5.3 Replacing LED Lights

The cooker hood uses long-life LED lights. If replacement is necessary, contact a qualified service technician. Do not attempt to replace the LED modules yourself.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions.

Problem	Possible Cause	Solution
Cooker hood does not turn on.	No power supply.	Check if the power cord is properly plugged in and the circuit breaker has not tripped.
Poor extraction performance.	Grease filters are dirty.	Clean the grease filters as described in the Maintenance section.
	Ducting is blocked or improperly installed.	Check the ducting for obstructions or kinks. Ensure proper installation.
Lights are not working.	LED lights require replacement.	Contact a qualified service technician for LED light replacement.
Excessive noise during operation.	Loose components or improper installation.	Ensure all mounting screws are tight. Check for any loose parts within the hood.

7. SPECIFICATIONS

Detailed technical specifications for the Bosch DWB64BC52 cooker hood.

Brand Name	Bosch
Model Name	DWB64BC52
Mounting Type	Wall-Mounted
Product Dimensions (Depth x Width x Height)	50 cm x 60 cm x 107.5 cm
Capacity (Maximum Extraction)	365 m ³ /h
Special Features	LED Lighting
Color	Silver
Material	Stainless Steel
Noise Level (Maximum)	63 dB
Finish Type	Polished
Voltage	240 Volts
Number of Settings	3 (Speed Settings)
Power	95 Watts
LED Light Power	2 x 1.5 Watts
Manufacturer	Bosch
Country of Origin	Germany

8. WARRANTY AND SUPPORT

Your Bosch DWB64BC52 cooker hood comes with a manufacturer's warranty provided by Bosch.

8.1 Warranty Information

For detailed information regarding the warranty period and terms, please refer to the warranty card included with your product or visit the official Bosch website. Keep your proof of purchase for warranty claims.

8.2 Customer Support

If you encounter any issues that cannot be resolved using the troubleshooting guide, or for technical assistance, please contact Bosch customer service. Contact details can typically be found on the Bosch website or in the product packaging.

