

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UTALENT](#) /

› [UTALENT 5-in-1 Immersion Hand Blender Instruction Manual](#)

UTALENT U3373-G5

UTALENT 5-in-1 Immersion Hand Blender Instruction Manual

Model: U3373-G5

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- To protect against risk of electrical shock, do not put the motor unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Blades are sharp. Handle carefully.
- Always ensure the appliance is properly assembled before use.
- Do not process hot liquids without proper ventilation to prevent pressure buildup.

PRODUCT OVERVIEW

The UTALENT 5-in-1 Immersion Hand Blender is a versatile kitchen tool designed for various food preparation tasks. It features a powerful motor and multiple interchangeable attachments.

Included Components:

- **Main Motor Unit:** Houses the 300W motor with 8-speed settings and a Turbo button.
- **Immersion Blending Wand:** Stainless steel shaft with a 4-blade system for blending.
- **500ml Food Chopper:** For chopping ingredients like vegetables, nuts, and meat.
- **600ml Beaker:** A measuring cup suitable for blending liquids.
- **Egg Whisk Attachment:** For whipping eggs, cream, and batters.
- **Milk Frother Attachment:** For frothing milk for coffee and other beverages.



Image: The complete UTALENT 5-in-1 Immersion Hand Blender set, including the main motor unit, blending wand, food chopper, beaker, egg whisk, and milk frother.




Chopper



Milk frother



Blender

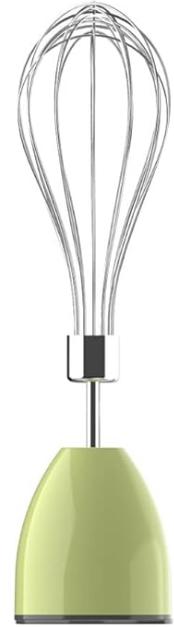

Whisk



Image: A detailed view of each component: Chopper, Milk Frother, Blender (main unit with blending wand), and Whisk. Examples of their uses are shown below each component.

SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food. Ensure the appliance is unplugged from the power outlet before assembly or disassembly.

Attaching the Blending Wand:

1. Align the motor unit with the blending wand.
2. Twist the motor unit clockwise until it clicks securely into place.
3. To detach, twist counter-clockwise and pull apart.



Image: Illustration of how to detach the blending shaft from the main motor unit by twisting and pulling.

Attaching the Chopper, Whisk, and Milk Frother:

1. For the chopper, place the blade assembly onto the central pin inside the chopper bowl. Secure the chopper lid, then attach the motor unit to the lid by aligning and twisting clockwise.
2. For the whisk and milk frother, insert the whisk/frother into its respective adapter, then attach the adapter to the motor unit by aligning and twisting clockwise.

OPERATING INSTRUCTIONS

Always ensure the appliance is plugged into a suitable power outlet (120V) before operation.

Speed Control and Turbo Function:

- The motor unit features an 8-speed dial at the top for precise control. Rotate the dial to select your desired speed from 1 to 8.
- Press the "ON" button to start operation at the selected speed.
- For maximum power, press and hold the "TURBO" button. This will activate the highest speed regardless of the dial setting. Release the button to return to the dial-selected speed or stop operation.



Image: Close-up of the hand blender's control panel, showing the "ON" and "TURBO" buttons, and the 8-speed adjustment dial.

Using the Immersion Blending Wand:

- Ideal for blending soups, smoothies, sauces, and baby food directly in pots, bowls, or the included beaker.
- Submerge the blending wand into the ingredients before turning on the appliance.
- Move the blender up and down gently to ensure even blending.
- Do not operate continuously for more than 1 minute to prevent overheating. Allow a short break between cycles.



Image: The immersion blending wand actively blending ingredients within a clear beaker, demonstrating its direct use.



Image: A visual guide showing the hand blender's versatility for making smoothies, baby food, sauces, soups, whipped cream, and milk froth.

Using the Food Chopper:

- Suitable for chopping vegetables, herbs, nuts, and small amounts of cooked meat.
- Cut large ingredients into smaller pieces before placing them in the chopper bowl.
- Do not overfill the chopper bowl.
- Use pulse action (short bursts) for coarse chopping, or continuous operation for finer results.



Image: The food chopper attachment actively processing meat, demonstrating its capability for grinding and chopping.

Using the Egg Whisk:

- Perfect for whipping cream, beating eggs, and mixing light batters.
- Use in a deep bowl to prevent splashing.
- Start at a lower speed and gradually increase as needed.



Image: The egg whisk attachment being used to mix ingredients in a bowl, illustrating its function for whipping and beating.

Using the Milk Frother:

- Designed for creating foam for coffee, lattes, and cappuccinos.
- Submerge the frother head just below the surface of the milk.
- Turn on and move the frother up and down gently until desired foam consistency is achieved.



Image: The milk frother attachment actively frothing milk in a glass, demonstrating its use for creating creamy foam.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your appliance. Always unplug the unit before cleaning.

- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- **Detachable Attachments:** The blending wand, chopper bowl and blade, beaker, egg whisk, and milk frother are detachable and dishwasher safe for easy cleaning.
- **Blades:** Handle the chopper blade and blending wand blades with extreme care as they are very sharp.
- **Storage:** Store the appliance and its attachments in a dry place, away from direct sunlight and heat.

TROUBLESHOOTING

If you encounter issues with your UTALENT Immersion Hand Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; motor unit not properly attached.	Ensure plug is securely in outlet. Test outlet with another appliance. Re-attach motor unit to attachment until it clicks.
Poor blending/chopping performance.	Ingredients too large; too much liquid/solid; incorrect speed setting.	Cut ingredients into smaller pieces. Adjust liquid/solid ratio. Increase speed or use Turbo function.
Motor stops during operation.	Overheating due to continuous use; overload.	Unplug and let cool down for 10-15 minutes. Reduce load or process in smaller batches.
Attachments difficult to attach/detach.	Misalignment; new unit stiffness.	Ensure proper alignment before twisting. With new units, this may ease with use. Apply gentle force.

If the problem persists after trying these solutions, please contact UTALENT customer support.

SPECIFICATIONS

Feature	Detail
Brand	UTALENT
Model Number	U3373-G5
Color	Green
Power Source	AC/DC
Voltage	120.0 V

Feature	Detail
Number of Speeds	8 + Turbo
Capacity (Beaker)	0.6 Liters (600ml)
Capacity (Chopper)	500ml
Product Dimensions	2.4"D x 2.4"W x 15"H
Item Weight	1.66 pounds
Blade Material	Stainless Steel
Material Type Free	BPA Free
Included Components	Egg Whisk, Milk Frother, Chopper, Container (Beaker), Blending Wand
Recommended Uses	Blending, Chopping, Coffee, Ice Crush, Whipping, Whisking



Image: A diagram illustrating the dimensions of the chopper, beaker, main blender unit, whisk, and milk frother.

WARRANTY AND SUPPORT

This UTALENT product comes with a limited warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your purchase or contact UTALENT customer support.

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact the manufacturer, Utalent, directly. Contact information can typically be found on the product packaging or the official UTALENT website.

Note: As per the provided data, specific contact details are not available in this manual. Please refer to the product packaging or manufacturer's website for the most current support information.

