

Alessi MDL06 B

Alessi Plissé MDL06 B Electric Kettle User Manual

Model: MDL06 B

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact the manufacturer for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.
- Ensure the kettle is placed on a stable, flat surface away from the edge of the countertop.
- This kettle is designed for boiling water only. Do not fill with other liquids.

2. PRODUCT OVERVIEW

The Alessi Plissé MDL06 B Electric Kettle, designed by Michele de Lucchi, combines functional aspects with a distinctive pleated design. Made from durable thermoplastic resin, this kettle is both a practical kitchen appliance and a sculptural object. It features a 2400 W heating element and a capacity of 170 cl

(1.7 liters).

Key Features:

- Electric kettle with a European plug (2400 W).
- Designed by Michele de Lucchi.
- Constructed from high-quality thermoplastic resin.
- Dimensions: height 29 cm (11.42"), length 21 cm (8.27"), width 16 cm (6.3").
- Capacity: 170 cl (1.7 liters).
- Features an automatic shut-off for safety.
- Non-toxic material.



Figure 2.1: Alessi Plissé MDL06 B Electric Kettle, front view.



Figure 2.2: Alessi Plissé MDL06 B Electric Kettle, angled view showing handle and spout.

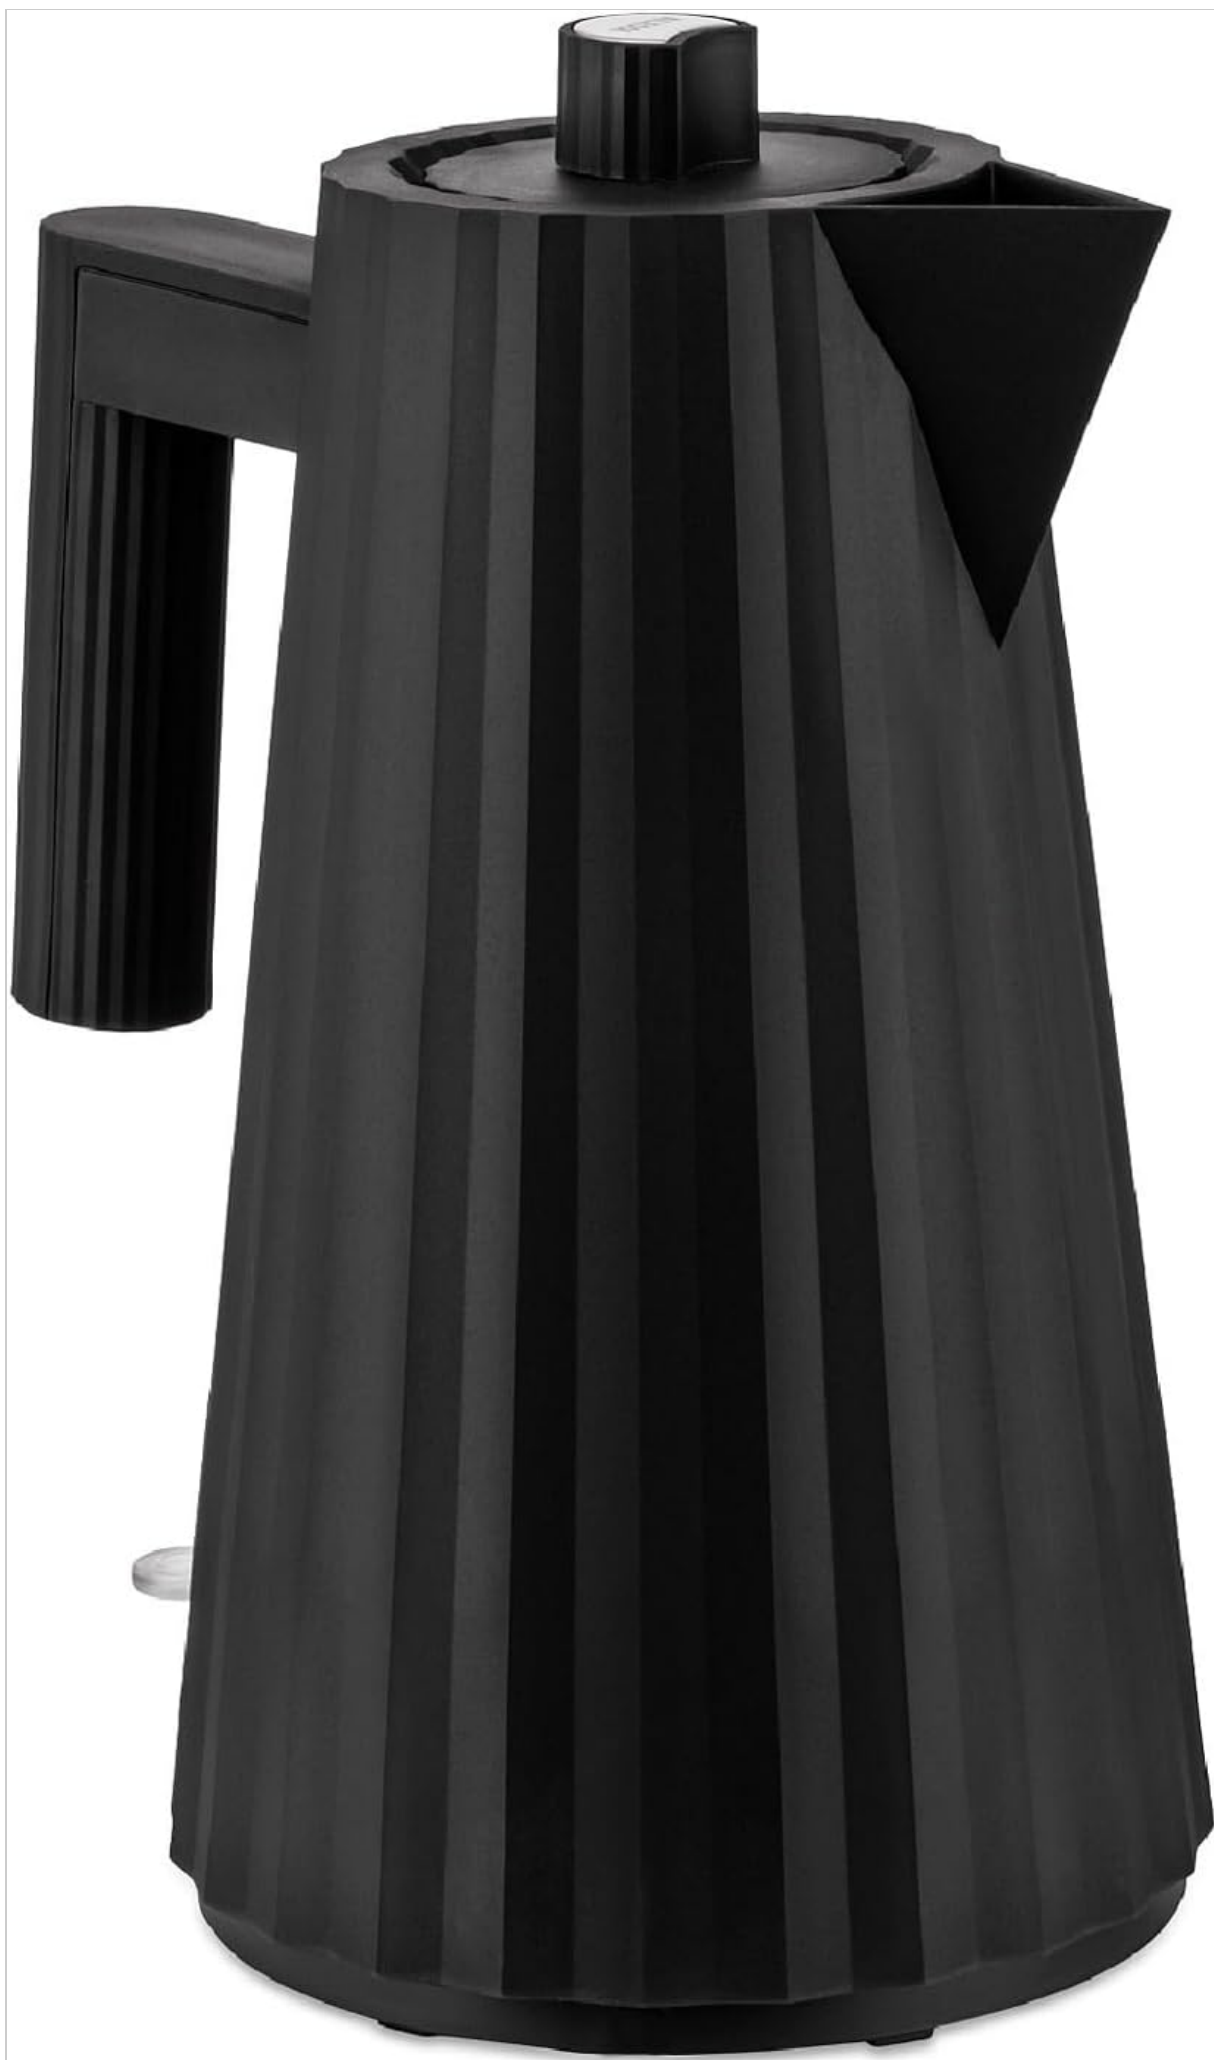


Figure 2.3: Top-down view of the Alessi Plissé MDL06 B Electric Kettle, highlighting the lid and spout.



Figure 2.4: Close-up of the Alessi Plissé MDL06 B Electric Kettle's spout and lid mechanism.



Figure 2.5: Alessi Plissé MDL06 B Electric Kettle displayed in a kitchen setting.



Figure 2.6: Alessi Plissé MDL06 B Electric Kettle positioned on a window sill.



Figure 2.7: Dimensional diagram of the Alessi Plissé MDL06 B Electric Kettle.

3. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the kettle and its base from the packaging. Retain packaging for future storage or transport.
2. **Inspect:** Check the kettle for any signs of damage. Do not use if damaged.
3. **Clean:** Before first use, fill the kettle with cold water to the MAX fill line. Boil the water, then discard

it. Repeat this process two to three times to remove any manufacturing residues.

4. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the kettle is positioned away from the edge of the counter and out of reach of children.
5. **Power Connection:** This kettle is equipped with a European plug. Ensure you have the appropriate power outlet or a certified adapter if required for your region. Plug the power cord into a grounded electrical outlet.

4. OPERATION

1. **Fill the Kettle:** Open the lid and fill the kettle with the desired amount of fresh cold water. Do not fill below the MIN mark or above the MAX mark. Overfilling may cause boiling water to spill out.
2. **Close the Lid:** Ensure the lid is securely closed before operating the kettle.
3. **Place on Base:** Position the kettle firmly onto its power base.
4. **Switch On:** Press the ON/OFF switch located at the bottom of the handle. The indicator light will illuminate, signaling that the kettle is heating.
5. **Automatic Shut-Off:** The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
6. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Be cautious of steam escaping from the spout.
7. **Re-boiling:** If you need to re-boil water immediately after it has boiled, wait a few seconds for the internal thermostat to reset before pressing the switch again.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Alessi Plissé Electric Kettle.

Cleaning Instructions:

- **Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.**
- **Exterior:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the thermoplastic resin finish.
- **Interior:** The manufacturer recommends hand washing for the interior. Do not immerse the kettle or its power base in water or any other liquid.
- **Lid:** The lid can be removed for easier cleaning of the interior. Wash with warm soapy water and rinse thoroughly.

Descaling:

Over time, mineral deposits (limescale) can build up inside the kettle, especially in areas with hard water. This can affect performance and taste. Descale your kettle regularly (e.g., monthly or bi-monthly depending on water hardness).

1. **Vinegar Method:** Fill the kettle with 1 part white vinegar and 2 parts water. Let it stand for at least 30 minutes, or boil the mixture. Allow to cool, then discard the solution. Rinse the kettle thoroughly several times with fresh water.
2. **Citric Acid Method:** Dissolve 1 tablespoon of citric acid in 1 liter of water. Pour the solution into the kettle and boil. Let it stand for 15-20 minutes, then discard and rinse thoroughly.

3. **Commercial Descaler:** Follow the instructions provided with a commercial kettle descaling product.

After descaling, boil fresh water in the kettle and discard it at least twice to remove any residual descaling agent and ensure no taste transfer.

6. TROUBLESHOOTING

If you encounter any issues with your Alessi Plissé Electric Kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply; Kettle not properly seated on base; ON/OFF switch not pressed.	Check if the plug is securely in the outlet. Ensure the kettle is correctly placed on its power base. Press the ON/OFF switch firmly. Check the circuit breaker.
Water is not heating.	Kettle has already boiled and auto-shut off; Limescale buildup.	Wait a few seconds for the thermostat to reset, then press the ON/OFF switch again. Descale the kettle as per the maintenance instructions.
Kettle leaks water.	Overfilling; Lid not properly closed; Damage to the kettle.	Do not fill above the MAX line. Ensure the lid is securely closed. If leakage persists, discontinue use and contact customer support.
Water tastes strange or has particles.	First use residues; Limescale buildup.	Perform the initial cleaning steps (boil and discard water several times). Descale the kettle regularly.

7. SPECIFICATIONS

Feature	Detail
Brand	Alessi
Model Name	Plissé
Item Model Number	H9-FV7X-OBNY
ASIN	B07HLSFW46
Color	Black
Material	Thermoplastic Resin (Non-Toxic)
Special Feature	Automatic Shut-Off
Product Dimensions (L x W x H)	8.27" x 6.3" x 11.42" (21 cm x 16 cm x 29 cm)
Capacity	170 cl (1.7 Liters)
Power	2400 W
Plug Type	European Plug
Item Weight	3.39 pounds (1.54 Kilograms)

Feature	Detail
Manufacturer	ALEZN
Recommended Uses	Boiling Water

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Alessi website. Keep your proof of purchase for any warranty claims. You can also visit the [Alessi Store on Amazon](#) for more product information and support resources.