

[Manuals.plus](#) /

> [RYOBI](#) /

> RYOBI 18-Volt ONE+ Hybrid Portable Fan (Model PCL811KIT) Instruction Manual

## RYOBI PCL811KIT

# RYOBI 18-Volt ONE+ Hybrid Portable Fan (Model PCL811KIT) Instruction Manual

## INTRODUCTION

Thank you for choosing the RYOBI 18-Volt ONE+ Hybrid Portable Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your fan. Please read it thoroughly before use and retain it for future reference.

## SAFETY INFORMATION

**WARNING:** To reduce the risk of injury, always follow basic safety precautions when using this product.

- Keep away from children. This product is not a toy.
- Do not operate the fan with a damaged cord or plug.
- Avoid placing fingers or other objects through the fan guard.
- Ensure the fan is placed on a stable, level surface during operation.
- Disconnect power before cleaning or performing maintenance.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- RYOBI 18-Volt ONE+ Hybrid Portable Fan (Model PCL811KIT)
- 18-Volt Lithium-Ion Battery (P163, 2.00Ah)
- Battery Charger

*Note: An extension cord is sold separately and is required for AC power operation. This fan is not a misting fan.*

## SETUP

### 1. Battery Installation

1. Ensure the fan is turned off.
2. Locate the battery port on the base of the fan.
3. Align the 18-Volt Lithium-Ion Battery with the battery port and slide it in until it clicks securely into place.
4. To remove the battery, press the release latches on the sides of the battery and slide it out.

## 2. AC Power Connection (Hybrid Operation)

1. Ensure the fan is turned off.
2. Locate the AC power port on the fan.
3. Insert a compatible extension cord (sold separately) into the AC power port.
4. Plug the other end of the extension cord into a standard 120V AC outlet.
5. The fan will automatically switch to AC power when connected, conserving battery life.



Image: The RYOBI 18-Volt ONE+ Hybrid Portable Fan, showing its main components including the fan unit, battery, and charger.

## 1. Powering On/Off and Speed Control

1. To turn the fan on, rotate the variable speed dial located on the front base of the fan clockwise.
2. Continue rotating the dial clockwise to increase the fan speed. The fan offers variable speeds up to 2100 RPM.
3. To decrease the fan speed, rotate the dial counter-clockwise.
4. To turn the fan off, rotate the dial fully counter-clockwise until it clicks into the OFF position.

## 2. Adjusting Fan Head Angle

The fan head can be manually tilted to direct airflow as needed. Gently grasp the fan housing and adjust it to the desired angle. The fan head will hold its position once set.

## MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your fan.

- **Cleaning:** Disconnect the fan from all power sources (battery and AC cord) before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. Do not immerse the fan in water or use abrasive cleaners.
- **Storage:** When not in use, store the fan in a clean, dry place, away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Always use the RYOBI-approved charger for the 18-Volt Lithium-Ion Battery. Do not expose batteries to water or extreme heat.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is not installed correctly or is discharged. AC cord is not plugged in or power outlet is faulty.	Ensure battery is fully charged and properly seated. If using AC power, check the cord connection and try a different outlet.
Low airflow.	Fan speed setting is too low. Obstruction in front or behind the fan.	Increase the fan speed using the variable speed dial. Clear any obstructions from the fan intake and output.
Unusual noise during operation.	Debris caught in the fan blades. Loose components.	Disconnect power and carefully inspect the fan blades for debris. Remove any foreign objects. If noise persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	RYOBI
Model Number	PCL811KIT
Power Source	Battery Powered / AC (Hybrid)
Voltage	18 Volts
Special Feature	Portable, Hybrid

Feature	Detail
Noise Level	59 Decibels
Item Weight	3.5 Pounds
Material	ABS Plastic
Maximum Speed	2100 RPM
Wattage	45 watts
Included Components	Fan, Battery, Charger

## WARRANTY AND SUPPORT

---

This RYOBI product comes with a **30 Day Limited Warranty** from the manufacturer. For warranty claims, technical assistance, or to purchase replacement parts, please refer to the official RYOBI website or contact their customer service directly.

*Please retain your proof of purchase for warranty validation.*

