

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Amazon Basics](#) /

› [Amazon Basics Outdoor Portable Folding Rocking Chair JC041 User Manual](#)

Amazon Basics JC041

Amazon Basics Outdoor Portable Folding Rocking Chair JC041 User Manual

Comprehensive user manual for the Amazon Basics Outdoor Portable Folding Rocking Chair with Headrest (Model JC041). Includes setup, operation, maintenance, troubleshooting, and specifications.

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Amazon Basics Outdoor Portable Folding Rocking Chair (Model JC041). Please read all instructions carefully before use and retain this manual for future reference.

Key Features:

- Outdoor rocking chair suitable for porch, patio, or travel.
- Padded back and headrest for enhanced comfort.
- Ergonomic design with armrests for added support.
- Weather-resistant Textilene mesh seat with elastic cording and a powder-coated steel frame for durability.
- Folds down easily for compact storing or moving.

2. SAFETY INFORMATION

- **Maximum Weight Capacity:** 300 lbs (136 kg). Do not exceed this limit.
- Ensure the chair is fully unfolded and the safety lock is engaged before sitting.
- Use on a stable, level surface to prevent tipping.
- Keep hands and fingers clear of moving parts when folding or unfolding the chair.
- For outdoor use only. Store indoors during extreme weather conditions to prolong product life.

3. SETUP

The Amazon Basics Folding Rocking Chair requires no assembly and comes pre-assembled.

Unfolding the Chair:

1. Place the folded chair on a flat, stable surface.
2. Gently pull the armrests apart to begin unfolding the chair.
3. Continue to open the chair until it is fully extended and stable.
4. Locate the safety lock mechanism on the side of the chair frame (refer to Figure 1).
5. Engage the safety lock by pushing the lever into the locked position to prevent accidental folding.



Step 1: Locate the safety lock



Step 2: Separate the metal plates



Step 3: Lock one metal plate in place



Step 4: Secure the other metal plates

Figure 1: Steps to unfold and secure the chair's safety lock.

Adjusting the Headrest:

The padded headrest can be adjusted up or down along the back of the chair for optimal comfort. It can also be removed if preferred.

Adjustable Folding Rocker

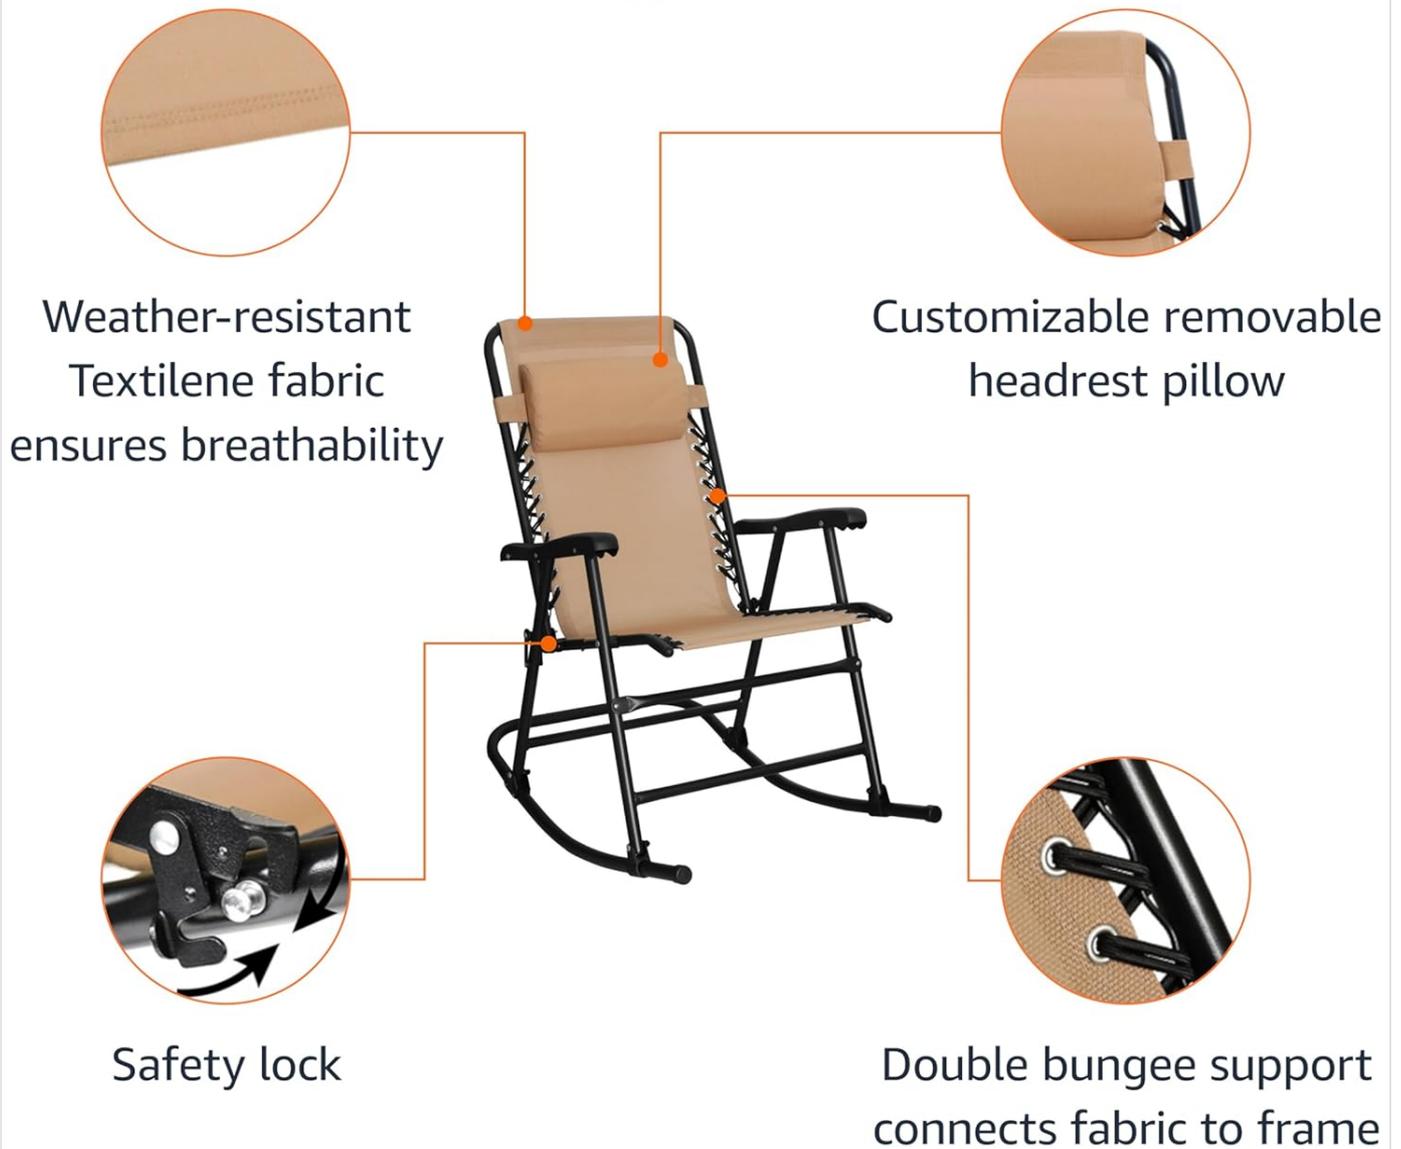


Figure 2: Features of the adjustable folding rocker, including the headrest and safety lock.

Official Product Video: Setup and Features

Your browser does not support the video tag.

Video 1: This official Amazon Basics video demonstrates the key features of the Zero Gravity Folding Lounge Rocker, including its Textilene material, alloy steel frame, outdoor suitability, padded headrest, and easy folding mechanism for compact storage and transport.

4. OPERATING INSTRUCTIONS

Rocking Function:

Once the chair is securely set up, sit comfortably and gently push off with your feet to initiate the rocking motion. The ergonomic design allows for a smooth and relaxing rock.

Official Product Video: In Use

Your browser does not support the video tag.

Video 2: This official Amazon Basics video showcases the comfort and rocking motion of the Foldable Rocking Chair in an outdoor setting.

5. MAINTENANCE

Cleaning:

- Wipe clean with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners.
- Allow the chair to air dry completely before folding and storing.

Storage:

- To fold the chair, disengage the safety lock and bring the sides together until it is compact.
- Store in a dry, protected area when not in use or during inclement weather to prevent damage and prolong its lifespan.

Material Care:

The Textilene mesh seat and powder-coated steel frame are designed for weather resistance. However, regular cleaning and proper storage will help maintain its appearance and durability.

Durable Metal Frame

Resilient 20D foam pillow
for comfort



Heavy-duty frame with
strong pull cords



Weather-resistant, breathable
fabric for comfort

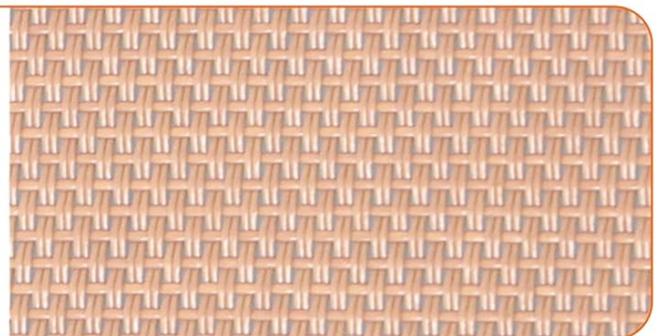


Figure 3: Details of the durable materials used in the chair's construction.

6. TROUBLESHOOTING

- **Chair does not rock smoothly:**

- Ensure the chair is on a level surface.
- Check for any obstructions under the rocking base.

- **Chair feels unstable:**

- Verify that the chair is fully unfolded and the safety lock is securely engaged on both sides.
- Ensure all frame connections are tight.

7. SPECIFICATIONS

Feature	Detail
Brand	Amazon Basics
Model Number	JC041
Color	Beige
Product Dimensions (D x W x H)	37.4" x 26" x 38.6" (95 cm x 66 cm x 98 cm)
Item Weight	16.09 pounds (7.3 kg)
Maximum Weight Recommendation	300 Pounds (136 kg)
Material	Textilene, Alloy Steel (Powder Coated)
Style	Foldable Rocking Chair
Indoor/Outdoor Usage	Outdoor
Assembly Required	No
Included Components	Cushion (Headrest)



Figure 4: Product dimensions and folded state for storage.

amazon basics



Zero-gravity chair offers a weightless relaxation experience



Weather-resistant, durable
Textilene fabric and steel frame



Supports up to 300 lbs / 136 kg

Lounge Rocker

Beige

Figure 5: Overview of the chair's design and weight capacity.

8. WARRANTY AND SUPPORT

For detailed warranty information and customer support regarding your Amazon Basics Outdoor Portable Folding Rocking Chair, please refer to the product's purchase page on Amazon.com or contact Amazon Basics customer service directly. Please retain your proof of purchase for any warranty claims.