

Swan 5055322531539

Swan Nordic Digital Microwave User Manual

Model: 5055322531539

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Swan Nordic Digital Microwave. Please read these instructions thoroughly before using the appliance and retain them for future reference. The Swan Nordic Digital Microwave offers 800W of power and a 20L capacity, designed for convenient food preparation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the microwave if the cord or plug is damaged, or if it has been dropped or damaged.
- Ensure the appliance is placed on a stable, level surface.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is intended for household use only.
- Always ensure the turntable and roller ring are correctly positioned before operation.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Swan Nordic Digital Microwave.



Image: Front view of the Swan Nordic Digital Microwave in white, featuring a dark grey door, a wooden-effect handle, and a digital control panel with a large central dial.



Image: Angled view of the Swan Nordic Digital Microwave, showcasing its sleek design and the wooden-effect handle and control knob.



Image: The Swan Nordic Digital Microwave placed on a kitchen counter, surrounded by plants, highlighting its aesthetic integration into a modern kitchen.



Image: Front view of the Swan Nordic Digital Microwave on a kitchen counter, showing its clean lines and minimalist design.



Image: A hand turning the central wooden-effect dial on the microwave's control panel, demonstrating user interaction.



Image: Close-up view of the digital display showing "2:00" and the control buttons for "Micro Power" and "Express", along with the Swan logo.



Image: The Swan Nordic Digital Microwave positioned on a kitchen counter alongside a matching Swan Nordic toaster and kettle, illustrating a cohesive kitchen aesthetic.

SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packaging materials. Check for any damage such as dents or a broken door. Do not operate the appliance if it is damaged.
2. **Placement:** Place the microwave on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it. Ensure there is adequate ventilation space around the unit (at least 20cm above, 10cm at the back, and 5cm on the sides).
3. **Turntable Installation:** Place the roller ring in the center of the microwave cavity. Position the glass turntable securely on top of the roller ring.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Clock Setting:** Upon first use or after a power outage, the display will show "0:00". Refer to the "Operating Instructions" section for setting the clock.

OPERATING INSTRUCTIONS

Setting the Clock

1. Press the "Defrost/Clock" button once.
2. Turn the "Time/Weight" dial to set the hour.
3. Press "Defrost/Clock" again.
4. Turn the "Time/Weight" dial to set the minutes.
5. Press "Defrost/Clock" to confirm the setting.

Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door.
3. Press the "Micro Power" button repeatedly to select the desired power level (P100, P80, P60, P40, P20, P0).
4. Turn the "Time/Weight" dial to set the cooking time.
5. Press "Instant/Start" to begin cooking.

Express Cooking

For quick cooking at full power:

- Press the "Express" button repeatedly to add 30 seconds, 1 minute, or 1 minute 30 seconds of cooking time.
- The microwave will start immediately at full power.

Defrost Function

This function allows you to defrost food by weight or time.

1. Press the "Defrost/Clock" button twice for defrost by weight, or three times for defrost by time.
2. Turn the "Time/Weight" dial to select the weight (for defrost by weight) or time (for defrost by time).
3. Press "Instant/Start" to begin defrosting.

Auto Cooking

The microwave has pre-set cooking programs for various food types.

1. Press the "Auto Cooking" button repeatedly to select the desired program (e.g., Popcorn, Potato, Pizza, Beverage, Meat, Vegetable).
2. Turn the "Time/Weight" dial to select the quantity or weight.
3. Press "Instant/Start" to begin auto cooking.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** Wipe the inside of the oven with a damp cloth after each use. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Turntable and Roller Ring:** The glass turntable and roller ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seal:** Regularly clean the door seal and adjacent parts to remove any spills or debris.
- **Odor Removal:** To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Microwave on high for 5 minutes, then let it sit in the oven for 10 minutes before wiping clean.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microwave does not start.	Door not closed properly; Plug not inserted firmly; Fuse blown or circuit breaker tripped.	Ensure door is securely closed; Check plug connection; Check household fuse/circuit breaker.
Food is not heating.	Incorrect cooking time/power level; Door not closed properly.	Adjust cooking time/power; Ensure door is securely closed.
Turntable is noisy or not rotating.	Turntable or roller ring not positioned correctly; Debris under turntable.	Re-position turntable and roller ring; Clean under the turntable.
Oven light not working.	Light bulb needs replacement.	Contact qualified service personnel for bulb replacement.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Brand	Swan
Model Number	5055322531539
Color	White
Product Dimensions	32 x 44.1 x 25.5 cm
Capacity	20 Liters
Power / Wattage	800 watts
Voltage	230 Volts
Material	Glass (Turntable)
Item Weight	11 Kilograms
Special Features	Auto Cook, Defrost, Digital Control, Timer, Turntable

WARRANTY AND SUPPORT

Your Swan Nordic Digital Microwave comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects and faulty materials under normal household use.

For warranty claims, technical support, or any inquiries regarding your product, please contact Swan customer service. Keep your proof of purchase for warranty validation.

For more information, visit the official Swan website or refer to the contact details provided with your product packaging.

© 2024 Swan. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07HN5RQ9W>

More documents and user manuals: <https://manuals.plus/>