

[Manuals.plus](#) /

› [Walfront](#) /

› Walfront Digital Wooden Alarm Clock (Model: Wal frontghi5ydnru8-01) User Manual

Walfront Wal frontghi5ydnru8-01

Walfront Digital Wooden Alarm Clock User Manual

Model: Wal frontghi5ydnru8-01

1. INTRODUCTION

This manual provides detailed instructions for the Walfront Digital Wooden Alarm Clock. It covers setup, operation, maintenance, and troubleshooting to ensure optimal use of your device. This multifunctional clock displays time and temperature, features multiple alarms, and offers voice-control functionality.



Overview of the Walfront Digital Wooden Alarm Clock, highlighting its features like time, temperature, alarm, voice control, brightness adjustment, power-off memory, and dual power supply.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x Walfront Digital Wooden Alarm Clock
- 1 x USB Power Cable

3. SETUP

3.1 Powering the Device

The Walfront Digital Wooden Alarm Clock can be powered in two ways:

- **Batteries:** Insert 3 AAA batteries (not included) into the battery compartment located on the back of the clock.
- **USB Power:** Connect the provided USB power cable to the DC 5V/500mA input port on the back of the clock and plug the other end into a compatible USB power adapter (not included) or a USB port.

For continuous display and to prevent data loss during power outages, it is recommended to use both battery and USB power simultaneously.



Rear view of the Walfront Digital Wooden Alarm Clock showing the battery compartment and USB power input. The USB cable is also displayed.

Your browser does not support the video tag.

This video demonstrates how to power the Walfront Digital Wooden Alarm Clock using the USB cable and how to access the battery compartment.

3.2 Initial Configuration

Once powered, the clock display will activate. You may need to set the current time and date. Locate the control buttons on the back of the clock, typically labeled 'SET', 'UP', and 'DOWN'.

- Press the **SET** button to enter the setting mode.
- Use the **UP** and **DOWN** buttons to adjust the values (e.g., hour, minute, year, month, day).
- Press **SET** again to confirm each setting and move to the next parameter.

4. OPERATING INSTRUCTIONS

4.1 Time Display Settings

The clock supports both 12-hour (with AM/PM indicator) and 24-hour time formats. You can switch between these modes through the clock's settings, usually by pressing the 'UP' or 'DOWN' button while in time setting mode, or a dedicated button.



Illustration showing the 12-hour (PM 2:00) and 24-hour (14:00) time display options on the Walfront Digital Wooden Alarm Clock.

4.2 Temperature Display

The clock displays the ambient temperature. You can switch between Celsius (°C) and Fahrenheit (°F) units in the settings menu. This is typically done by pressing a specific button (e.g., 'UP' or 'DOWN') when the temperature is displayed, or within the general settings.

4.3 Alarm Function

The clock allows you to set up to three independent alarms. Each alarm will sound for one minute with a beep. To set an alarm:

- Press the **SET** button repeatedly until you reach the alarm setting mode (e.g., A1, A2, A3).
- Use the **UP** and **DOWN** buttons to set the desired alarm time.
- Press **SET** to confirm and move to the next alarm or exit the setting mode.
- To activate/deactivate an alarm, navigate to the alarm setting and use the 'UP' or 'DOWN' button to toggle it on or off.

Wooden Electronic Digital Alarm Desk Clock



Time



Temperature



Alarm Clock



Voice Control



*Brightness
Adjustment*



*Power off
Memory*



*USB Battery Dual
Power Supply*



Diagram illustrating the setting of three distinct alarms (6:00, 10:00, 12:00) on the Walfront Digital Wooden Alarm Clock.

4.4 Display Modes

The clock offers two display modes to suit your preference and power consumption needs:

- **Voice-control Mode:** In this mode, the LED display remains off until activated by sound, such as clapping your hands or tapping the table. This mode is highly recommended when the clock is powered by batteries to extend battery life.
- **Always-bright Mode:** The LED display remains continuously lit. This mode is best used when the clock is connected to a USB power source.

To switch between modes, refer to the specific button on the back of the clock, often labeled 'UP' or 'DOWN', or a dedicated mode button.

***Powered By: 3 x AAA Battery
(NOT included) OR USB power supply***



Image demonstrating the voice-control mode, where the clock's display activates in response to sound, such as clapping hands.

5. MAINTENANCE

5.1 Cleaning

To clean your Walfront Digital Wooden Alarm Clock, gently wipe the surface with a soft, dry, or slightly damp cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the wooden finish and electronic components.

5.2 Storage

If you plan to store the clock for an extended period, remove the AAA batteries to prevent potential leakage and damage to the device.

6. TROUBLESHOOTING

6.1 Clock Does Not Turn On or Display is Dim

- **Check Batteries:** Ensure 3 AAA batteries are correctly inserted with the proper polarity and are not depleted. Replace with new batteries if necessary.
- **Verify USB Connection:** Confirm the USB power cable is securely connected to both the clock and a functional DC 5V/500mA power source.
- **Display Mode:** If using batteries, the clock defaults to voice-control mode to save power, meaning the display will turn off. Tap the clock or make a sound to activate the display. For a continuously bright display, use USB power and switch to 'Always-bright mode'.

6.2 Difficulty Setting Time/Alarm

- **Button Functionality:** Familiarize yourself with the 'SET', 'UP', and 'DOWN' buttons on the back of the clock.

- **Setting Sequence:** Press 'SET' to cycle through different settings (time, date, alarms). Use 'UP' and 'DOWN' to adjust values. Press 'SET' again to confirm each step.

6.3 Display is Too Bright at Night

- The clock's brightness may not be adjustable. To reduce light disturbance at night, switch the clock to 'Voice-control mode'. The display will remain off until activated by sound.

6.4 Clock Does Not Stay On (Battery Mode)

- This is normal behavior for battery operation. In 'Voice-control mode', the display turns off after a short period to conserve power. If you require a continuously lit display, connect the clock to a USB power source and select 'Always-bright mode'.

7. SPECIFICATIONS

7.1 Product Details

- **Brand:** Walfront
- **Model:** Wal frontghi5ydnru8-01
- **Color:** Black
- **Material:** Wood
- **Display Type:** Digital LED
- **Power Source:** 3 x AAA Batteries (not included) or DC 5V/500mA USB power supply
- **Time Display:** 12-hour or 24-hour mode
- **Temperature Display:** Celsius/Fahrenheit
- **Alarm Function:** Three alarms
- **Display Modes:** Voice-control mode, Always-bright mode
- **Product Dimensions:** 6 x 6 x 6 cm (2.36"W x 2.36"H)
- **Item Weight:** 0.15 Kilograms



Diagram illustrating the compact cube dimensions of the Walfront Digital Wooden Alarm Clock: 6cm (2.36 inches) on each side.

8. WARRANTY AND SUPPORT

8.1 Customer Support

For any issues, questions, or technical support regarding your Walfront Digital Wooden Alarm Clock, please contact the seller directly through the platform where you made your purchase. They can provide specific assistance and information regarding warranty claims, if applicable.

Please retain your purchase receipt or order details as proof of purchase for any support inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question