

Ikea 902.267.97 / 70226798

IKEA UPPLEVA Fixed TV Wall Mount Instruction Manual

Model: 902.267.97 / 70226798

1. INTRODUCTION

Thank you for choosing the IKEA UPPLEVA Fixed TV Wall Mount. This manual provides important information for the safe and correct assembly, operation, and maintenance of your product. Please read this manual thoroughly before installation and keep it for future reference.

This wall mount is designed to securely hold flat-screen televisions within the specified size and weight limits, providing a clean and integrated look for your entertainment area.

2. SAFETY INFORMATION

WARNING: Incorrect installation may result in serious personal injury or damage to property. If you are unsure about the installation process, please consult a qualified professional.

- Ensure the wall structure can safely support the combined weight of the mount and the television. Different wall materials require different types of wall fixings. Use fixings suitable for the walls in your home.
- Do not exceed the maximum weight capacity of 45 kg (99 lbs).
- This mount is designed for flat-screen TVs between 37 inches (94 cm) and 55 inches (139.7 cm).
- Always use appropriate safety gear during installation, including eye protection.
- Keep children and pets away from the work area during installation.
- Check all connections periodically to ensure they remain secure.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact IKEA customer service.

- Wall mounting bracket (main metal part)
- TV attachment rails (two vertical metal parts)

- Integrated spirit level
- Various screws, washers, and spacers for TV attachment (specific types and quantities may vary, refer to included hardware pack)
- Pull cords for release mechanism
- Assembly instructions (this manual)



Image: Main components of the IKEA UPPLEVA Fixed TV Wall Mount, showing the wall bracket, TV attachment rails, and integrated level.

4. SETUP AND INSTALLATION

Follow these steps carefully for proper installation. It is recommended to have two people for the installation of the TV.

1. Prepare the Wall:

- Determine the desired height for your TV. Mark the drilling points on the wall.
- Use a stud finder to locate wall studs if mounting on a wooden stud wall. For concrete or brick walls, use appropriate anchors.
- *Important:* The type of wall fixings required depends on your wall material. Wall fixings are typically sold separately. Consult a hardware store if unsure.

2. Attach Wall Bracket:

- Position the main wall bracket against the marked points.
- Use the integrated spirit level on the bracket to ensure it is perfectly horizontal.
- Drill pilot holes as per the instructions for your chosen wall fixings.
- Securely fasten the wall bracket to the wall using appropriate screws and anchors. Ensure it is firmly attached and does not wobble.

3. Attach TV Rails to Television:

- Lay your TV face down on a soft, clean surface to prevent scratches.
- Identify the VESA mounting holes on the back of your TV.
- Attach the two vertical TV attachment rails to the back of your TV using the provided screws, washers, and spacers. Ensure the rails are oriented correctly so they can hook onto the wall bracket. The pull cords should hang downwards.
- Choose the correct screw length that fits your TV without damaging internal components.

4. Mount the TV:

- With assistance, carefully lift the TV with the attached rails.
- Hook the top of the TV rails onto the top edge of the wall bracket.
- Gently lower the TV until the bottom of the rails clicks into place, securing the TV to the wall bracket.
- Pull the release cords to ensure the locking mechanism is engaged and the TV is securely mounted. The cords should hang freely behind the TV.

5. OPERATING

The IKEA UPPEVA Fixed TV Wall Mount is designed for a static, fixed position. Once installed, your TV will remain flush against the wall.

- **To Remove the TV:** Gently pull the two release cords downwards and outwards simultaneously. This will disengage the locking mechanism, allowing you to lift the TV off the wall bracket. Ensure you have assistance when removing the TV to prevent damage or injury.

6. MAINTENANCE

Regular maintenance ensures the longevity and safety of your wall mount.

- **Cleaning:** Wipe the metal parts with a damp cloth. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and connections to ensure they are tight and secure. Over time, vibrations or movement can loosen fasteners.

- **Damage:** If any part of the mount appears damaged or worn, do not use it. Contact IKEA customer service for replacement parts or advice.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
TV not level after mounting.	Wall bracket not installed level.	Remove TV, re-check wall bracket level with spirit level, adjust and re-secure.
TV does not click into place.	Rails not properly aligned with wall bracket; obstruction; locking mechanism not engaging.	Ensure rails are correctly hooked onto the top edge of the wall bracket. Check for any cables or objects obstructing the locking mechanism. Gently push the bottom of the TV towards the wall until it clicks.
TV feels loose on the mount.	Screws attaching rails to TV are loose; wall fixings are loose; locking mechanism not engaged.	Remove TV, check tightness of screws on TV rails. Check tightness of wall fixings. Re-mount TV ensuring locking mechanism engages.

8. SPECIFICATIONS

- **Product Name:** IKEA UPPEVA Fixed TV Wall Mount
- **Model Numbers:** 902.267.97, 70226798
- **Maximum TV Load:** 45 kg (99 lbs)
- **Compatible Screen Sizes:** 37 inches (94 cm) to 55 inches (139.7 cm)
- **Type of Fixation:** Wall Mount
- **Type of Movement:** Fixed
- **Materials:** Steel (epoxy/polyester powder coating), Acrylic, ABS plastic, Polyamide, Steel spring
- **Color:** White
- **Assembly Required:** Yes
- **Integrated Features:** Spirit level for easy installation

9. WARRANTY AND SUPPORT

For information regarding warranty, returns, or technical support, please refer to your purchase receipt or visit the official IKEA website for your region. You can also contact IKEA customer service directly.

IKEA Customer Service: Please visit www.ikea.com and navigate to the 'Contact Us' or 'Customer Service' section for local contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question