

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nokia](#) /

› [Nokia 230 Dual-SIM 16MB \(GSM Only | No CDMA\) Factory Unlocked 2G Keypad Cell-Phone \(Dark Blue\) - International Version User Manual](#)

## Nokia 16PCML01A01

# Nokia 230 Dual-SIM User Manual

Model: 16PCML01A01

## 1. INTRODUCTION

---

Welcome to the user manual for your Nokia 230 Dual-SIM mobile phone. This guide provides essential information on how to set up, operate, and maintain your device. The Nokia 230 is a classic feature phone designed for reliable communication, featuring a 2.8-inch QVGA full-color screen and support for 2.5G data for basic web browsing. It also includes dual SIM capability, allowing you to manage two different network connections simultaneously.



Figure 1: Front view of the Nokia 230 Dual-SIM phone, displaying its screen with various application icons and the physical alphanumeric keypad below.

## 2. SETUP

---

### 2.1. Inserting the SIM Card(s) and Battery

1. **Remove the back cover:** Gently pry open the back cover of the phone from the notch located at the bottom or side.
2. **Insert SIM cards:** Locate the SIM card slots. The Nokia 230 supports two SIM cards. Insert your SIM cards into the designated slots with the gold contacts facing down and the cut corner aligned correctly.
3. **Insert the battery:** Place the battery into its compartment, ensuring the gold contacts on the battery align with the contacts in the phone.
4. **Replace the back cover:** Press the back cover firmly until it clicks into place.

### 2.2. Charging the Device

Connect the charger cable to the charging port on your phone. Plug the charger into a wall outlet. The battery indicator on the screen will show the charging status. It is recommended to fully charge the battery before first use.

## 2.3. Powering On/Off

- **To power on:** Press and hold the Power/End call key (red button) until the phone vibrates and the Nokia logo appears.
- **To power off:** Press and hold the Power/End call key until the power off options appear, then select "Power off" or simply hold until the phone shuts down.

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Basic Navigation

Use the navigation key (the central square button) to move through menus and select items. The left soft key typically acts as "Options" or "Select", and the right soft key as "Back" or "Cancel".

### 3.2. Making Calls

1. From the home screen, enter the phone number using the keypad.
2. Press the Call key (green button) to initiate the call.
3. To end a call, press the End call key (red button).

### 3.3. Sending Text Messages (SMS)

1. Go to **Menu > Messaging**.
2. Select **Create message** or **New message**.
3. Type your message using the keypad.
4. Enter the recipient's phone number or select from contacts.
5. Select **Send**.

### 3.4. Using the Camera

The Nokia 230 features front and rear cameras. To access the camera, navigate to the Camera icon from the main menu.

- **To take a photo:** Frame your shot and press the central navigation key to capture.
- **To switch cameras:** Look for an option on the screen to switch between front and rear cameras.

### 3.5. Dual SIM Management

With dual SIM support, you can manage calls and messages from two different numbers. You can set a preferred SIM for calls, messages, or data, or be prompted to choose each time.

- Navigate to **Menu > Settings > Dual SIM** to configure your preferences.

## 4. MAINTENANCE

---

### 4.1. Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials. Do not expose the phone to excessive moisture.

### 4.2. Battery Care

- Avoid extreme temperatures, as they can affect battery life.
- Do not leave the battery fully discharged for long periods.

- Use only original Nokia chargers and batteries.

### 4.3. Software Updates

Periodically check for software updates to ensure optimal performance and security. Updates can typically be found in the phone's settings menu under "Phone updates" or "Software update".

## 5. TROUBLESHOOTING

Problem	Possible Solution
Phone does not power on.	Ensure the battery is charged. Connect the charger and try again. Check if the battery is properly inserted.
No network signal.	Check if SIM cards are correctly inserted. Ensure you are in an area with network coverage. Restart the phone.
Cannot make or receive calls.	Verify network signal. Check if call barring is active. Ensure sufficient balance if using a prepaid SIM.
Battery drains quickly.	Reduce screen brightness. Close unused applications. Limit background data usage. Consider replacing an old battery.
SIM card not detected.	Remove and reinsert the SIM card(s). Clean the SIM card contacts gently. Try the SIM card in another compatible device to rule out SIM card issues.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	16PCML01A01
Product Dimensions	4.91 x 2.1 x 0.43 inches
Item Weight	3.24 ounces (91.8 Grams)
Display Size	2.8 Inches
Resolution	320 x 240 (QVGA)
RAM	16 MB (0.02 GB)
Battery Capacity	1200 Milliamp Hours
Phone Talk Time	Up to 23 Hours
Phone Standby Time	Up to 528 Hours
Operating System	Proprietary OS

Feature	Detail
Wireless Technologies	Cellular (2G GSM 850/900/1800/1900), Wi-Fi (for connectivity technologies, though 2.5G data is mentioned in description, Wi-Fi is listed in specs)
Audio Jack	3.5 mm
What's in the box	Phone, Charger

## 7. WARRANTY AND SUPPORT

---

Your Nokia 230 Dual-SIM phone comes with a manufacturer's limited warranty. Please refer to the warranty card included in the product packaging for specific terms and conditions, including warranty period and coverage details. For technical support, service, or further inquiries, please visit the official Nokia support website or contact their customer service line. Keep your proof of purchase for warranty claims.

For the most up-to-date support information, please visit: [Nokia Phones Support](#)