



Manuals.plus /

› E.ZICLEAN /

› E.ziclean SWEEPER ANIMAL Robotic Vacuum Cleaner Instruction Manual

## E.ZICLEAN SWEEPER ANIMAL

# E.ziclean SWEEPER ANIMAL Robotic Vacuum Cleaner Instruction Manual

Model: SWEEPER ANIMAL

## 1. INTRODUCTION

Thank you for choosing the E.ziclean SWEEPER ANIMAL Robotic Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before using the product and retain it for future reference.

The E.ziclean SWEEPER ANIMAL is designed to provide efficient cleaning for your home, featuring both vacuuming and mopping capabilities, especially suited for households with pets.

## 2. IMPORTANT SAFETY INSTRUCTIONS

**WARNING: To reduce the risk of injury or damage, read these safety instructions carefully before setting up, using, and maintaining your robot.**

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Use only the original power adapter provided by the manufacturer.
- Do not operate the robot in environments with open flames or explosive materials.
- Do not allow the robot to pick up large objects, sharp objects, or liquids.
- Ensure the charging base is placed on a flat surface against a wall, with no obstacles within 1 meter to the front and 0.5 meters to the sides.
- Unplug the robot from the power outlet before cleaning or performing maintenance.
- Do not immerse the robot or its electronic components in water.

## 3. PACKAGE CONTENTS

Please check the contents of your package. If any items are missing or damaged, contact customer support.

- E.ziclean SWEEPER ANIMAL Robotic Vacuum Cleaner
- Charging Dock
- Power Adapter
- Side Brushes (2 pairs)
- Dust Bin
- Water Tank with Mopping Pad
- Cleaning Tool
- User Manual

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components of your E.ziclean SWEEPER ANIMAL.

### Top View



**Image 1:** Top view of the E.ziclean SWEEPER ANIMAL robotic vacuum cleaner. It shows the circular black body with blue accents, a central control panel with an 'AUTO' button, and two side brushes visible.

- **Control Panel:** Power/Auto Clean button, Charging indicator.

- **Dust Bin Release Button:** For removing the dust bin.
- **Bumper:** Detects obstacles.

## Side View



Image 2: Side view of the E.ziclean SWEEPER ANIMAL robotic vacuum cleaner. It highlights the main power switch located on the side of the unit.

- **Main Power Switch:** Turns the robot on or off.
- **Charging Contacts:** Connects with the charging dock.

## Bottom View (General Components)

- **Side Brushes:** Sweep debris into the cleaning path.
- **Driving Wheels:** Allow the robot to move.
- **Universal Wheel:** Provides directional movement.
- **Charging Contacts:** For docking.
- **Drop Sensors:** Prevent the robot from falling down stairs.
- **Main Brush (if applicable):** Collects dirt and debris.

## 5. SETUP

### 5.1 Unpacking and Charging Dock Placement

1. Remove all packaging materials and protective films from the robot and charging dock.
2. Place the charging dock against a wall on a hard, level surface. Ensure there are no obstacles within 1 meter (3 feet) in front of the dock and 0.5 meters (1.5 feet) on either side.
3. Connect the power adapter to the charging dock and plug it into a wall outlet. Ensure the cable is neatly tucked away to prevent entanglement.

### 5.2 Installing Side Brushes

Press the side brushes onto the square posts at the bottom of the robot until they click into place. Ensure the brushes are

correctly aligned (L for left, R for right, if marked).

### **5.3 Initial Charge**

Place the robot onto the charging dock, ensuring the charging contacts on the robot align with those on the dock. The robot will emit a sound and the indicator light will illuminate, indicating it is charging. For first-time use, charge the robot for at least 6 hours to ensure optimal battery life.

### **5.4 Preparing for Mopping (Optional)**

If using the mopping function, fill the water tank with clean water. Attach the mopping pad securely to the water tank. Insert the filled water tank into the robot until it clicks into place.

## **6. OPERATING THE ROBOT**

---

### **6.1 Starting a Cleaning Cycle**

1. Ensure the main power switch on the side of the robot is in the "ON" position.
2. Press the "AUTO" button on the robot's control panel or the corresponding button on the remote control (if applicable) to start a cleaning cycle. The robot will automatically begin cleaning in its default mode.
3. The robot will automatically return to its charging dock when the battery is low or when a cleaning cycle is complete.



Image 3: The E.ziclean SWEEPER ANIMAL robotic vacuum cleaner operating, cleaning along a baseboard in a room with wooden flooring.

## 6.2 Stopping/Pausing a Cleaning Cycle

Press the "AUTO" button again on the robot or the remote control to pause the cleaning cycle. Press it again to resume. To send the robot back to the charging dock, press the Home button on the remote control (if applicable) or hold the "AUTO" button for a few seconds.

## 6.3 Cleaning Modes

Your E.ziclean SWEEPER ANIMAL may feature various cleaning modes:

- **Auto Clean:** The robot automatically cleans in a systematic pattern.
- **Spot Clean:** The robot cleans a specific area more intensely.
- **Edge Clean:** The robot cleans along walls and furniture edges.
- **Scheduled Clean:** Set a specific time for the robot to start cleaning automatically (requires remote control or app, if available).

The robot features automatic water flow control for efficient mopping, adapting to the cleaning needs.

## 7. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your robot. Always turn off the robot and unplug it from the charging dock before performing any maintenance.

### 7.1 Emptying the Dust Bin

Press the dust bin release button and pull out the dust bin. Open the dust bin cover and empty its contents into a trash can. Clean the dust bin with water if necessary, ensuring it is completely dry before reinserting.

### 7.2 Cleaning Filters

Remove the filters from the dust bin. Tap them gently to remove dust. The primary filter can be rinsed with water, but the HEPA filter should only be dry cleaned. Allow all filters to air dry completely before reassembling.

### 7.3 Cleaning Side Brushes

Periodically remove the side brushes by pulling them upwards. Remove any hair or debris wrapped around them. If brushes are worn or damaged, replace them with new ones.

### 7.4 Cleaning the Main Brush (if applicable)

Remove the main brush cover and then the main brush. Use the provided cleaning tool to cut and remove any hair or debris tangled around the brush. Reinstall the main brush and cover.

### 7.5 Cleaning Sensors and Charging Contacts

Wipe the drop sensors (located on the bottom of the robot) and the charging contacts (on both the robot and the charging dock) with a clean, dry cloth. This ensures proper navigation and charging.

### 7.6 Cleaning the Water Tank and Mopping Pad

After each mopping session, empty any remaining water from the tank. Rinse the water tank and allow it to air dry. Remove the mopping pad, wash it by hand or machine, and let it dry completely before reuse.

## 8. TROUBLESHOOTING

---

If you encounter issues with your E.ziclean SWEEPER ANIMAL, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Robot does not turn on.	Main power switch is off; battery is depleted.	Ensure main power switch is ON. Place robot on charging dock for initial charge.
Robot does not charge.	Charging contacts are dirty; charging dock is not powered.	Clean charging contacts on both robot and dock. Ensure power adapter is securely plugged in.
Robot gets stuck frequently.	Obstacles in cleaning path; robot getting caught on cables or rugs.	Clear the cleaning area of loose cables, small objects, and thick rugs.
Poor cleaning performance.	Dust bin is full; filters are clogged; brushes are tangled or worn.	Empty dust bin. Clean or replace filters. Clean or replace side/main brushes.
Robot makes unusual noise.	Debris caught in brushes or wheels.	Inspect and clean main brush, side brushes, and wheels for tangled hair or debris.

## 9. SPECIFICATIONS

<b>Brand</b>	E.ZICLEAN
<b>Model Name</b>	SWEEPER ANIMAL
<b>Model Number</b>	localization_B07HNWNSHS
<b>Color</b>	Black
<b>Item Weight</b>	2.9 Kilograms
<b>Battery Composition</b>	Lithium
<b>Power Source</b>	Battery Powered
<b>Dust Bin Capacity</b>	0.2 Liters
<b>Noise Level</b>	55 dB
<b>Coverage Area</b>	Up to 150 m <sup>2</sup>
<b>Special Features</b>	Pet-friendly, Vacuums and Mops in one pass, Automatic Water Flow Control

## 10. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official E.ziclean website. Please have your model number (SWEEPER ANIMAL) and purchase details ready when contacting support.

*Note: Specific warranty terms may vary by region and retailer.*

## 11. PRODUCT VIDEOS

No official product videos from the seller were provided for embedding in this manual.

