

[Manuals.plus](#) /

> [multicode](#) /

> Multi-Code 3089 Garage Gate Door Opener Remote Instruction Manual

## multicode 3089

# Multi-Code 3089 Garage Gate Door Opener Remote Instruction Manual

Model: 3089 | Brand: Multi-Code

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of your Multi-Code Model 3089 Garage Gate Door Opener Remote. This remote operates at a 300 MHz frequency and is designed to replace Multi-Code Model 1089 and Multi Elmac 3089 remotes with 10 dip switches. Please read this manual thoroughly before use to ensure proper functionality and safety.



Image: Front view of the Multi-Code 3089 remote, showing the single oval button and the Multi-Code logo.

## SAFETY INFORMATION

---

- Keep the remote control out of reach of children.
- Do not allow children to operate the garage door or gate opener.
- Ensure the garage door or gate path is clear before operating.
- This remote is not a universal remote. It is specifically designed for 300 MHz Multi-Code systems with 10 dip switches.
- Dispose of batteries properly according to local regulations.

## PACKAGE CONTENTS

---

Your Multi-Code 3089 remote package should contain the following items:

- One (1) Multi-Code Model 3089 Remote Transmitter
- One (1) 9V Alkaline Battery (may or may not be included, check packaging)
- Visor Clip (optional, may be included)

## SETUP

---

### 1. Battery Installation

The Multi-Code 3089 remote requires one 9V alkaline battery. Follow these steps to install or replace the battery:

1. Locate the battery compartment cover on the back of the remote.
2. Slide the cover off or open it using a small screwdriver if necessary.
3. Insert a new 9V alkaline battery, ensuring the positive (+) and negative (-) terminals align correctly with the battery clips.
4. Replace the battery compartment cover securely.

### 2. Dip Switch Configuration

The Multi-Code 3089 remote uses 10 dip switches to match the code of your existing garage door opener or gate receiver. This is a critical step for the remote to function correctly.

1. Open the remote's casing to access the internal dip switches. This usually involves removing the battery cover and then carefully separating the two halves of the remote.
2. Locate the 10 small switches inside the remote. They will be numbered or clearly identifiable.
3. Identify the dip switches on your existing Multi-Code remote or directly on your garage door opener/gate receiver. Note the ON/OFF (or +/0/-) positions of each of the 10 switches.
4. Carefully set the 10 dip switches on your new Multi-Code 3089 remote to exactly match the pattern of your existing device. Ensure each switch is firmly in its desired position.
5. Once the dip switches are set, carefully reassemble the remote's casing, ensuring it snaps securely into place.

**Note:** If your existing remote or receiver uses a different number of dip switches (e.g., 8 or 12), this remote may not be compatible. The Multi-Code 3089 is designed for 10-position dip switch systems.

## OPERATING INSTRUCTIONS

---

Once the dip switches are correctly configured and the battery is installed, your Multi-Code 3089 remote is ready for use.

1. Point the remote towards your garage door opener or gate receiver.
2. Press and hold the single oval button on the front of the remote.
3. The garage door or gate should activate (open or close).
4. Release the button once the door/gate begins to move.

For optimal range, ensure there are no significant obstructions between the remote and the receiver.

## MAINTENANCE

---

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If the remote's range decreases significantly or the indicator light (if present) does not illuminate when the button is pressed, it's likely time to replace the 9V battery. Refer to the "Battery Installation" section for instructions.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote does not activate opener.	Dead or low battery.	Replace the 9V battery.
Remote does not activate opener.	Incorrect dip switch settings.	Verify and re-match the dip switch settings with your opener/receiver.
Remote does not activate opener.	Remote is out of range or obstructed.	Move closer to the opener/receiver and ensure a clear line of sight.
Remote works intermittently.	Weak battery.	Replace the 9V battery.
Remote works intermittently.	Interference from other devices.	Ensure no other 300 MHz devices are causing interference.

## SPECIFICATIONS

---

**Model:** 3089

**Frequency:** 300 MHz

**Number of Dip Switches:** 10

**Battery Type:** 9V Alkaline (1 required)

**Dimensions:** Approximately 4"W x 1"H

**Weight:** Approximately 1.92 ounces

**Compatibility:** Multi-Code 300 MHz systems with 10 dip switches. Replaces Multi-Code 1089 and Multi Elmac 3089.

## WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your Multi-Code 3089 remote, please refer to the documentation provided with your purchase or contact Multi-Code customer service directly. Contact details are typically available on the manufacturer's official website or product packaging.

For further assistance, you may visit the [product page on Amazon](#).

