

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Bosch Electroménager](#) /
- › Bosch Electroménager - MultiTalent 8 MC812M844 – Versatile Food Processor with Over 50 Functions – 1250 W – Large Capacity 3.9 L – Colour: Black

Bosch Electroménager MC812M844

Bosch MultiTalent 8 MC812M844 Food Processor User Manual

Model: MC812M844 | Brand: Bosch Electroménager

1. INTRODUCTION AND PRODUCT OVERVIEW

The Bosch MultiTalent 8 MC812M844 is a versatile food processor designed to simplify various kitchen tasks. With a powerful 1250W motor and a large 3.9L bowl capacity, it is equipped to handle a wide range of preparations, from kneading dough to chopping vegetables and blending smoothies. Its intelligent accessory detection system ensures optimal power and speed for precise results.

Key features include:

- Powerful 1250W motor for demanding tasks.
- Large 3.9L bowl capacity, suitable for up to 1.5 kg of cake dough.
- Intelligent accessory detection system for optimized performance.
- Over 50 functions, including whipping, mixing, beating, chopping, kneading, slicing, grating, and ice crushing.
- Includes a 1.5L plastic blender and a mini chopper with 4 stainless steel blades.
- Dishwasher-safe parts for easy cleaning.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Keep hands and utensils out of the processing bowl while operating to prevent injury and damage to the appliance.
- Never process hot liquids in the blender or food processor bowl. Allow hot ingredients to cool before processing.
- Ensure all parts are correctly assembled and locked into place before switching on the appliance.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Blades are sharp. Handle with extreme care when assembling, disassembling, or cleaning.
- This appliance is for household use only. Do not use outdoors.

- Supervise children to ensure they do not play with the appliance.

3. COMPONENTS AND ACCESSORIES

The Bosch MultiTalent 8 MC812M844 comes with a comprehensive set of accessories to perform various functions. Familiarize yourself with each component:



Figure 3.1: Overview of the Bosch MultiTalent 8 Food Processor and its included accessories.

- **Main Unit:** The motor base with control dial.
- **Food Processor Bowl (3.9L):** Large capacity bowl for processing ingredients.
- **Lid with Pusher:** For covering the bowl and safely adding ingredients during operation.
- **Supercut Stainless Steel Multifunction Knife:** For chopping, mixing, and pureeing.
- **Plastic Dough Arm:** For kneading various types of dough.
- **Plastic Blender Bowl (1.5L):** For blending liquids, smoothies, and crushing ice.
- **Reversible Slicing Disc (thin/thick):** For slicing vegetables and fruits.
- **Reversible Grating Disc (thin/thick):** For grating cheese, vegetables, etc.
- **Whisk:** For whipping cream, egg whites, and light batters.
- **Disc Holder:** To securely attach slicing and grating discs.
- **Universal Grinder:** For grinding small amounts of ingredients.
- **Bosch Juicer:** For extracting juice from citrus fruits.

4. SETUP AND ASSEMBLY

Before first use, wash all removable parts in warm soapy water, rinse thoroughly, and dry. Ensure the main unit is

unplugged from the power outlet.





Figure 4.1: The main unit of the Bosch MultiTalent 8 Food Processor.

1. **Place the Main Unit:** Position the main unit on a stable, flat, and dry surface.
2. **Assemble the Food Processor Bowl:**
 - Place the food processor bowl onto the motor base, aligning the handle with the locking mechanism on the right side of the base.
 - Rotate the bowl clockwise until it clicks securely into place.
3. **Insert Accessories:**
 - For chopping/mixing: Place the multifunction knife onto the central shaft inside the bowl.
 - For kneading: Attach the dough arm to the central shaft.
 - For slicing/grating: Place the disc holder onto the central shaft, then place the desired slicing or grating disc onto the disc holder.
 - For whisking: Attach the whisk to the central shaft.
4. **Secure the Lid:** Place the lid onto the bowl, aligning the tab on the lid with the slot on the bowl handle. Rotate the lid clockwise until it locks into place. The appliance will not operate unless the bowl and lid are correctly locked.
5. **Blender Assembly:** If using the blender, ensure the blade assembly is securely attached to the bottom of the blender jug. Place the jug onto the motor base and twist to lock.

5. OPERATING INSTRUCTIONS

The Bosch MultiTalent 8 features an electronic speed dimmer with LED and a pulse function for precise control.

5.1 General Operation

1. Ensure the appliance is correctly assembled and locked.
2. Plug the appliance into a suitable power outlet.
3. Turn the control dial to the desired speed setting (min to max) or to the "Pulse" setting for short bursts of power. The intelligent accessory detection system will adjust power as needed.
4. To stop the appliance, turn the dial to "0/off".
5. Always wait for the blades or discs to stop completely before removing the lid or bowl.

5.2 Specific Functions

Kneading Dough



Figure 5.1: The food processor in action, kneading dough.

Use the plastic dough arm. Add ingredients to the food processor bowl. Select a medium speed setting. The appliance can handle up to 1.5 kg of cake dough.

Blending and Smoothies



Figure 5.2: The blender attachment preparing a fruit smoothie.

Attach the 1.5L plastic blender bowl to the main unit. Add liquids and ingredients. Use the "Pulse" function for crushed ice or short bursts, or a continuous high speed for smooth blending.

Chopping, Slicing, and Grating

Use the Supercut multifunction knife for chopping or the reversible slicing/grating discs with the disc holder. Add ingredients to the bowl. For slicing and grating, use the pusher to guide ingredients through the feed tube. Start with a lower speed and increase as needed.

Juicing

Attach the Bosch juicer accessory. Place a container under the spout. Press citrus halves onto the reamer to extract juice.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Bosch MultiTalent 8 food processor.

- **Always unplug** the appliance before cleaning.

- **Main Unit:** Wipe the motor base with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Removable Parts:** The bowl, lid, blades, discs, and other accessories are dishwasher safe. Alternatively, wash them in warm soapy water, rinse thoroughly, and dry immediately.
- **Blades:** Handle the Supercut knife and other blades with extreme care as they are very sharp. Use a brush for cleaning hard-to-reach areas if necessary.
- **Storage:** Store the appliance and its accessories in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Bowl/lid not correctly assembled; Overload protection activated.	Check power connection; Ensure bowl and lid are securely locked; Unplug, wait 30 minutes, then try again. Reduce load if overloaded.
Motor stops during operation.	Overload protection activated; Too much food in the bowl.	Reduce the amount of ingredients; Unplug and let the motor cool down for 30 minutes before restarting.
Ingredients not processing evenly.	Too many ingredients; Ingredients too large; Incorrect speed setting.	Process in smaller batches; Cut ingredients into smaller pieces; Adjust speed or use pulse function.
Loud noise or vibration.	Appliance not on a stable surface; Bowl/lid not properly secured; Accessory not correctly installed.	Place on a flat, stable surface; Re-secure bowl and lid; Check accessory installation.

If the problem persists after trying these solutions, please contact Bosch customer support.

8. SPECIFICATIONS

Brand	Bosch Electroménager
Model Name	MultiTalent MC812M44 (MC812M844)
Power	1250 W
Bowl Capacity	3.9 Liters
Blender Capacity	1.5 Liters
Color	Black / Silver
Product Dimensions (L x W x H)	11.81 x 9.84 x 16.93 inches (300 x 250 x 430 mm)
Item Weight	12.54 pounds (5.7 kg)
Blade Material	Stainless Steel
Dishwasher Safe Parts	Yes

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Bosch Home Appliances website. Keep your proof of purchase for warranty claims.

You can also visit the Bosch Store on Amazon for more information: [Bosch Home Appliances Store](#)