



[Manuals.plus](#) /

> [KLARSTEIN](#) /

> Klarstein Aromatica Nuovo Coffee Machine User Manual

KLARSTEIN Aromatica Nuovo

Klarstein Aromatica Nuovo Coffee Machine User Manual

Model: Aromatica Nuovo | Brand: KLARSTEIN

1. INTRODUCTION

Welcome to the user manual for your Klarstein Aromatica Nuovo Coffee Machine. This appliance is designed to provide fresh, aromatic coffee with its integrated grinder, programmable timer, and customizable brewing options. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Image 1.1: Front view of the Klarstein Aromatica Nuovo Coffee Machine. The machine features a sleek black and silver design with a visible coffee bean hopper on top and a glass carafe below the brewing unit.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Read all instructions before operating the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Keep the appliance out of reach of children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been

damaged in any manner.

- Use only manufacturer-recommended attachments.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.
- Exercise extreme caution when handling hot steam or hot water.

3. PACKAGE CONTENTS

Verify that all items are present in the packaging:

- 1 x Klarstein Aromatica Nuovo Coffee Machine
- 1 x Glass Jug (Carafe)
- 1 x Cleaning Brush
- 1 x Permanent Filter Holder
- User Manual (English and Spanish)



EVERYTHING INCLUDED

Including glass jug, cleaning brush
and removable filter holder



Image 3.1: The included glass jug, permanent filter holder, and cleaning brush.

4. SETUP

4.1 Unpacking and Placement

1. Remove all packaging materials and labels from the coffee machine.
2. Place the coffee machine on a stable, flat, heat-resistant surface, away from water sources and heat.

4.2 Initial Cleaning

1. Wash the glass jug, permanent filter holder, and cleaning brush with warm, soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of the coffee machine with a damp cloth.

3. Run two full cycles with only water (no coffee) to clean the internal components. Discard the water after each cycle.

4.3 Filling the Water Tank

1. Open the lid of the water tank.
2. Fill the water tank with fresh, cold water up to the desired level, using the markings on the side of the tank. Do not exceed the 'MAX' line.
3. Close the water tank lid securely.





PERFECT COFFEE STRENGTH

9 grinding degrees for a completely individual coffee enjoyment

Image 4.1: The water tank features a clear measuring scale for accurate filling.

4.4 Loading Coffee Beans or Ground Coffee

1. **For Coffee Beans:** Open the lid of the bean hopper located on top of the machine. Pour fresh coffee beans into the hopper. The hopper has a capacity of approximately 0.3 lbs (136g). Close the lid securely.
2. **For Ground Coffee:** If using pre-ground coffee, bypass the grinder. Place the permanent filter holder into its designated slot. Add the desired amount of ground coffee directly into the permanent filter.

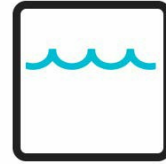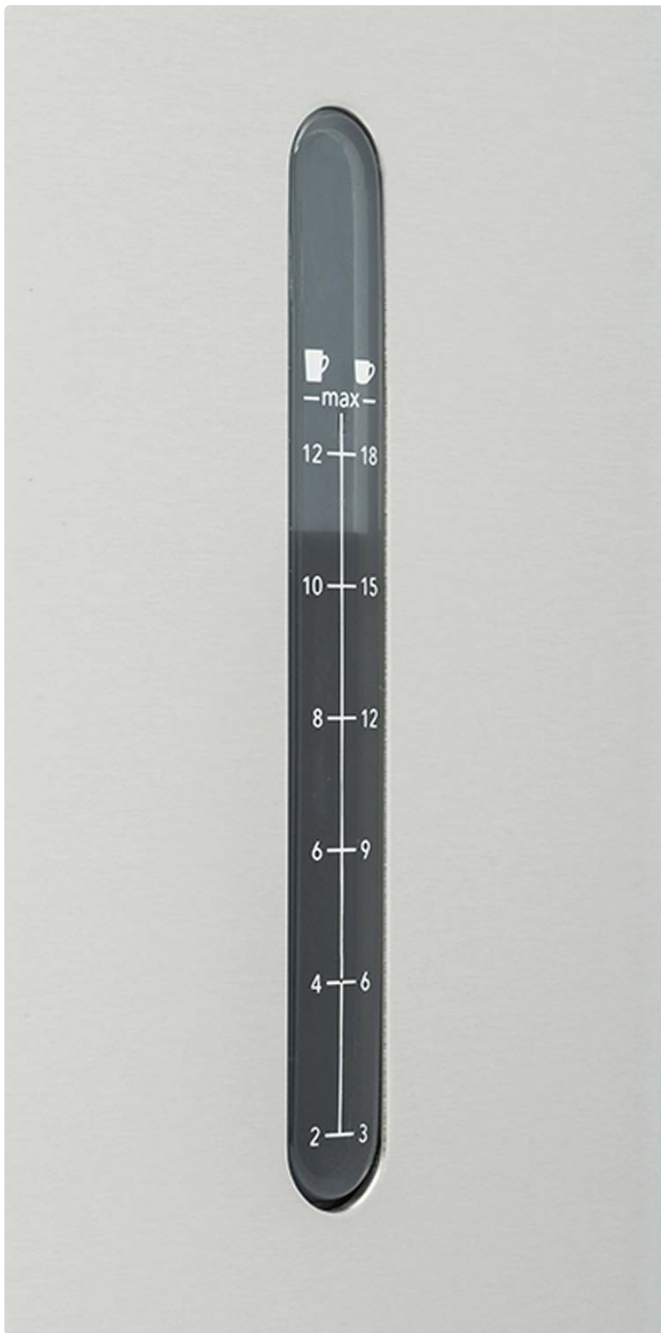

CLEAR FILLING

Water tank with
visible measuring scale

Image 4.2: Coffee beans being poured into the integrated grinder's hopper.

5. OPERATION

5.1 Basic Brewing (Using Beans)

1. Ensure the water tank is filled and coffee beans are in the hopper.
2. Place the empty glass jug on the warming plate.
3. Select the desired number of cups using the control panel.
4. Press the 'Start' button (often indicated by a coffee cup icon) to begin the grinding and brewing process. The machine will grind the beans, then brew the coffee.

5.2 Adjusting Grind Settings

The Klarstein Aromatica Nuovo features a five-stage grinder with 9 grinding degrees for personalized coffee strength.

1. Locate the grind adjustment dial on the top of the machine, near the bean hopper.
2. Rotate the dial to select your preferred grind fineness. A finer grind typically results in stronger coffee, while a coarser grind yields a milder taste.



EASY TO CLEAN

Removable filter holder
for easy and
drip-free emptying



Image 5.1: The grind adjustment dial allows selection of 9 different grind fineness levels.

5.3 Setting the 24-Hour Timer

Program your coffee machine to start brewing at a specific time:

1. Press the 'Timer' button (often labeled with a clock icon).
2. Use the 'Hour' and 'Minute' buttons to set the desired start time.
3. Confirm the setting by pressing the 'Timer' button again or waiting a few seconds for it to auto-confirm. The timer indicator will illuminate.
4. Ensure water and coffee are loaded before setting the timer.



Image 5.2: The control panel displaying the digital clock and timer setting buttons.

5.4 Selecting Aroma Levels

Choose your preferred coffee strength from Light, Medium, or Strong:

1. Before brewing, use the 'Aroma' or 'Strength' button on the control panel to cycle through the available options.
2. The selected aroma level will be displayed on the LCD screen.

6. MAINTENANCE

6.1 Daily Cleaning

1. After each use, unplug the machine and allow it to cool.
2. Remove the glass jug and wash it with warm, soapy water.

3. Remove the permanent filter holder. Discard used coffee grounds and rinse the filter holder thoroughly. The included cleaning brush can assist with this.
4. Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners.



Image 6.1: The permanent filter holder is easily removable for cleaning, ensuring drip-free emptying.

6.2 Descaling

Regular descaling is essential to maintain performance and extend the lifespan of your coffee machine. The frequency depends on water hardness and usage.

1. Prepare a descaling solution according to the descaler manufacturer's instructions (e.g., white vinegar and water, or a commercial descaling agent).
2. Pour the solution into the water tank.
3. Place the empty glass jug on the warming plate.
4. Run a brewing cycle without coffee.
5. After the cycle, let the machine sit for 15-30 minutes (if recommended by descaler).
6. Run two full cycles with fresh, clean water to rinse out any descaling residue.

6.3 Activated Carbon Filter

The built-in activated carbon filter helps ensure high water quality and protects against calcification. Replace the filter regularly as per manufacturer recommendations (typically every 2-3 months, or after a certain number of brewing cycles).

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; machine not plugged in; timer set incorrectly.	Fill water tank; check power connection; verify timer settings.
Coffee is too weak.	Insufficient coffee grounds; coarse grind setting; aroma level set to 'Light'.	Add more coffee; select a finer grind; choose 'Medium' or 'Strong' aroma level.
Coffee is too strong.	Too many coffee grounds; fine grind setting; aroma level set to 'Strong'.	Reduce coffee; select a coarser grind; choose 'Light' or 'Medium' aroma level.
Grinder not working.	Bean hopper empty; beans jammed; grinder clogged.	Fill hopper; gently shake machine to dislodge beans; clean grinder area with brush.
Water overflows.	Water tank overfilled; filter basket clogged.	Do not exceed MAX fill line; clean filter basket and ensure it's not blocked.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	KLARSTEIN
Model Name	Aromatica Nuovo
Power	1000 watts
Power Supply	120 V / 60 Hz
Coffee Maker Type	Drip Coffee Machine
Coffee Input Type	Beans / Ground Coffee
Grinder	Built-in, Five-stage, 9 grinding degrees
Capacity	10 Cups (Glass Jug)

Feature	Specification
Bean Container Capacity	Approx. 0.3 lbs (136g)
Special Features	Activated Carbon Filter, Drip Protection, 24-hour Timer, 3 Aroma Levels
Dimensions (WxHxD)	Approx. 8.8" x 16.5" x 11.8"
Weight	Approx. 11 lbs (5 kg)

9. WARRANTY AND SUPPORT

Your Klarstein Aromatica Nuovo Coffee Machine comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Klarstein customer service. Contact information can typically be found on the Klarstein official website or on your product's packaging.

No official product videos were available for embedding in this manual.