

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Ultrasonic Air Humidifier User Manual

Fisher-Price HC115

Ultrasonic Air Humidifier User Manual

Brand: **Fisher-Price** | Model: **HC115**

1. INTRODUCTION

The Fisher-Price Ultrasonic Air Humidifier is designed to provide immediate relief in dry environments, helping to reduce dry coughs, nasal congestion, and respiratory issues. With a 3.4-liter capacity and 25W power, it ensures efficient humidification for extended periods. This humidifier also features a customizable surface, allowing for creative expression, and operates continuously and silently for a peaceful environment.

Key Features:

- Aids in relieving dry coughs, nasal congestion, and respiratory difficulties, promoting a healthier and more comfortable environment.
- Continuous and silent operation for up to 48 hours, ensuring a tranquil and comfortable environment throughout the day or night.
- Automatic shut-off system when the water level reaches the minimum, providing enhanced safety and preventing energy waste.
- Fully compatible with essential oils, allowing for the creation of a relaxing and therapeutic atmosphere customized to your preferences.
- High-capacity 3.4-liter reservoir, ideal for maintaining constant humidity for long periods, suitable for both small and medium-sized rooms.



Image 1.1: Fisher-Price Ultrasonic Air Humidifier (Model HC115).

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the humidifier. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the humidifier on a firm, flat, waterproof surface at least 12 inches (30 cm) away from walls and appliances.
- Do not place the humidifier directly on carpet, wood floors, or surfaces that are susceptible to water damage.
- Use only clean, cool tap water. Distilled or demineralized water is recommended to prevent mineral buildup and white dust.

- Do not add essential oils directly into the water tank. Use the designated essential oil tray/compartment if available.
- Unplug the humidifier from the power outlet before filling, cleaning, or moving it.
- Keep the humidifier out of reach of children and pets.
- Do not block the mist outlet or air vents.
- Do not immerse the base unit in water or other liquids.
- Regularly clean the humidifier to prevent mold and bacteria growth.
- If the humidifier is damaged, do not operate it. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Fisher-Price Ultrasonic Air Humidifier Unit
- 1 x User Manual



Image 3.1: Humidifier components including the base, water tank, and mist nozzle.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the humidifier on a flat, stable, and water-resistant surface. Ensure it is at least 30 cm (12 inches) away from walls, furniture, and electronic devices.
3. **Fill Water Tank:**
 - Remove the water tank from the base.
 - Unscrew the tank cap at the bottom of the tank.

- Fill the tank with clean, cool tap water. Distilled or demineralized water is recommended to prolong the life of the unit and reduce mineral residue. Do not fill past the MAX line.
- Securely screw the tank cap back on.
- Place the filled water tank back onto the humidifier base, ensuring it is seated correctly.

4. **Connect Power:** Plug the power cord into a suitable electrical outlet (110V or 220V, as the unit is Bivolt).



Image 4.1: The humidifier features a 3.4-liter water tank capacity.

5. OPERATING INSTRUCTIONS

1. Power On/Off and Mist Control:

- Turn the control knob clockwise to power on the humidifier and adjust the mist output. The mist output will increase as you turn the knob further clockwise.
- Turn the control knob counter-clockwise until it clicks to power off the humidifier.

2. Essential Oil Function (if applicable):

- Locate the essential oil tray, usually a small drawer or pad located near the base of the unit.
- Add a few drops of your preferred essential oil onto the aroma pad (do not add oil directly into the water tank).
- Slide the tray back into place. The aroma will diffuse with the mist.

3. **Automatic Shut-off:** The humidifier is equipped with an automatic shut-off feature that activates when the water level in the tank is too low, ensuring safety and preventing damage to the unit.



Image 5.1: The humidifier provides a comfortable environment, ideal for use in a child's room.



Image 5.2: The humidifier features a customizable surface, allowing children to draw on it.

6. MAINTENANCE AND CLEANING

Regular cleaning is essential to prevent mineral buildup and the growth of mold or bacteria, ensuring optimal performance and healthy mist output.

Daily Maintenance:

- Empty the water tank and base reservoir daily.
- Rinse the water tank and base reservoir with fresh water.
- Wipe down all surfaces with a clean, dry cloth.

Weekly Cleaning:

1. **Unplug:** Always unplug the humidifier before cleaning.
2. **Disassemble:** Remove the water tank and any other removable parts.
3. **Clean Water Tank:**

◦ Fill the tank with 1 cup of white vinegar and 1 cup of water.

◦ Shake gently and let it sit for 30 minutes.

◦ Empty the tank and rinse thoroughly with clean water until the vinegar smell is gone.
4. **Clean Base Reservoir:**

◦ Pour 1 cup of white vinegar into the base reservoir, ensuring it covers the heating element/ultrasonic disk.

◦ Let it soak for 30 minutes.

◦ Use a soft brush or cloth to gently clean any mineral buildup.

◦ Rinse the base reservoir thoroughly with clean water. Do not immerse the base in water.
5. **Dry:** Allow all parts to air dry completely before reassembling or storing the humidifier.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output.	Water tank empty. Mineral buildup on ultrasonic disk. Unit not plugged in or powered on.	Refill water tank. Clean the ultrasonic disk as per cleaning instructions. Ensure power cord is securely plugged in and unit is turned on.
Water leakage.	Water tank cap not tightened. Water tank not seated correctly. Unit placed on an uneven surface.	Tighten the water tank cap securely. Remove and re-seat the water tank properly. Place the humidifier on a flat, stable surface.
Unusual noise.	Low water level. Mineral buildup. Unit not level.	Refill water tank. Clean the unit thoroughly. Ensure the humidifier is on a level surface.
White dust around the humidifier.	Hard water used.	Use distilled or demineralized water. Clean the unit regularly to remove mineral deposits.

8. SPECIFICATIONS

Feature	Detail
Brand	Fisher-Price

Feature	Detail
Model Number	HC115
Color	White
Product Dimensions	23.5 x 23.5 x 30.5 cm (9.25 x 9.25 x 12 inches)
Product Weight	1.13 kg (2.49 lbs)
Capacity	3.4 Liters
Voltage	110 Volts, 220 Volts (Bivolt)
Special Features	Humidity Controller, Automatic Shut-off, Aroma Diffuser, Silent Operation
Included Components	1 Ultrasonic Air Humidifier, User Manual



Image 8.1: Product dimensions for the humidifier.

9. WARRANTY AND SUPPORT

This Fisher-Price Ultrasonic Air Humidifier comes with a manufacturer's warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your product or contact the manufacturer directly.

Customer Support:

If you encounter any issues or have questions not covered in this manual, please contact Fisher-Price customer support. Keep your purchase receipt and product model number (HC115) ready when contacting support. For more information, you may visit the official Fisher-Price website or the brand's store on Amazon:

- [Fisher-Price Official Amazon Store](#)

© 2025 Fisher-Price. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question