

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LG](#) /

› [Original LG AKB75095307 Smart TV Remote Control User Manual](#)

LG AKB75095307

Original LG AKB75095307 Smart TV Remote Control User Manual

Model: AKB75095307

INTRODUCTION

This manual provides detailed instructions for the use and maintenance of your Original LG AKB75095307 Smart TV Remote Control. Designed for seamless compatibility with all LG LCD, LED, and OLED Smart TVs, this remote offers intuitive control without the need for reprogramming.

KEY FEATURES

- Part type: TV Remote Control
- Part Number: AKB75095307
- NO NEED TO REPROGRAM
- Universal compatibility with LG LCD, LED, OLED Smart TVs
- Ergonomic design for comfortable grip
- Direct access buttons for popular streaming services (e.g., Netflix, Amazon)

WHAT'S IN THE Box

- 1 x LG AKB75095307 Remote Control

Note: AAA Batteries are NOT included and must be purchased separately.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and - ends match the diagram inside the

compartment).

4. Slide the battery cover back into place until it clicks securely.

This remote control requires no programming and is ready for use with your LG Smart TV immediately after battery installation.



Image: Rear view of the LG remote control, highlighting the battery cover.

OPERATING INSTRUCTIONS

Remote Control Layout





Image: Front view of the LG remote control, displaying all buttons and their labels.

Basic Functions

- **Power (Red Button):** Press to turn your LG TV On or Off.
- **Number Buttons (0-9):** Use to directly input channel numbers or other numerical selections.
- **VOL (+/-):** Adjusts the volume level. Press '+' to increase, '-' to decrease.
- **CH (Page Up/Down):** Changes TV channels. Press 'Page Up' to go to the next channel, 'Page Down' to go to the previous.
- **Mute (Speaker with X):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up/Down/Left/Right/OK):** Use the directional arrows to navigate menus and select options. The 'OK' button confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.

Smart TV and Streaming App Access

- **Netflix Button:** Provides direct access to the Netflix streaming application.
- **Amazon Button:** Provides direct access to the Amazon Prime Video streaming application.
- **Home Button (House Icon):** Opens the Smart TV home screen, allowing access to all installed applications and settings.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid or aerosol cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Remote not responding.	Check battery polarity. Replace batteries if they are old or depleted. Ensure there are no obstructions between the remote and the TV's IR receiver.

Problem	Solution
Buttons are sticky or unresponsive.	Clean the remote control surface and around the buttons with a soft, dry cloth. Avoid spills.
Remote works intermittently.	This could indicate low battery power. Replace batteries. Ensure you are within the effective range of the TV.

SPECIFICATIONS

- Product Dimensions:** 7 x 2 x 0.7 inches
- Item Weight:** 2.4 ounces
- Model Number:** AKB75095307 (also listed as 8541715288)
- Batteries:** 2 AAA batteries required (not included)
- Manufacturer:** LG
- Compatible Devices:** Television (LG LCD, LED, OLED Smart TVs)
- Color:** Black

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official LG website or contact LG customer service directly. Keep your purchase receipt for warranty claims.