

Intex 26165EH+28023E

Intex Inflatable Easy Set Above Ground Round Swimming Pool Instruction Manual

Model: 26165EH+28023E

INTRODUCTION

This manual provides essential information for the safe and efficient setup, operation, and maintenance of your Intex Inflatable Easy Set Above Ground Round Swimming Pool. Please read all instructions carefully before assembly and use. Retain this manual for future reference.



Image: The Intex Easy Set Pool shown with its included accessories: filter pump, ladder, pool cover, and ground cloth.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions can result in serious injury or death.

- Always supervise children in and around the pool.
- Do not dive or jump into the pool. The water depth is 36 inches (91 cm).
- Ensure the pool is set up on a completely level surface to prevent collapse.
- Keep all electrical cords, pumps, and filters away from water and out of reach of children.

- Review your HOA rules and restrictions before purchasing and setting up this product. Not all housing agencies permit private above-ground pools.
- Empty the pool completely when not in use for extended periods or during cold weather.

PACKAGE CONTENTS

Your Intex Easy Set Pool package includes the following components:

- Inflatable Pool Liner (15 ft x 42 in)
- Krystal Clear™ Cartridge Filter Pump (Model 28637EG)
- Filter Cartridges (Type A)
- Removable Pool Ladder
- Pool Cover
- Ground Cloth



Image: Diagram showing the dimensions of the Intex Easy Set Pool: 15 ft diameter, 42 inches height, and 36 inches water depth. Water capacity is 3,736 gallons.

SETUP INSTRUCTIONS

The Intex Easy Set Pool is designed for quick and simple setup, typically ready for water in as little as 30 minutes.

1. Site Preparation

1. Choose a firm, level surface free of sharp objects, debris, or loose soil. The ground must be completely level to ensure proper pool structure and prevent collapse.
2. Clear the area of any grass, roots, or rocks.
3. Ensure the chosen location is near a power outlet for the filter pump and a water source for filling.



Image: An Intex Easy Set Pool set up on a blue ground cloth on a grassy lawn, demonstrating proper site preparation.

2. Laying the Ground Cloth

1. Unfold the ground cloth and spread it evenly over the prepared level surface. This provides added protection for the pool bottom.

3. Unfolding the Pool Liner

1. Carefully unfold the pool liner on top of the ground cloth.
2. Spread it out completely, ensuring the drain plug is facing the desired drainage area.
3. Inflate the top ring of the pool using an air pump (not included). Ensure it is firm but not over-inflated.

4. Filling the Pool

1. Begin filling the pool with water. As the water level rises, the pool walls will rise and take shape.
2. Smooth out any wrinkles in the bottom of the pool as it fills.
3. Fill the pool to approximately 80% capacity, or to the fill line indicated on the pool liner. This pool holds up to 3,739 gallons of water when 80% full.

5. Filter Pump Installation

1. Connect the Krystal Clear™ Cartridge Filter Pump (Model 28637EG) according to the pump's separate instruction manual.
2. Ensure all connections are secure and leak-free.
3. The pump has a flow rate of 1,000 gallons per hour and comes with filter cartridges.

INCLUDED FILTER PUMP



Krystal Clear™ Cartridge Filter Pump

Includes one replaceable cartridge. Replacement every 2 weeks is recommended for best results.

Image: A close-up of the Krystal Clear Cartridge Filter Pump, showing its design and hose connections.

6. Ladder Assembly and Placement

1. Assemble the removable pool ladder following its specific instructions.
2. Place the ladder securely against the pool wall. Always ensure the ladder is stable before use.



Image: A standalone image of the Intex pool ladder, featuring its grey frame and white steps.

OPERATING YOUR POOL

Filter Pump Operation

- Once the pool is filled and the pump is connected, plug in the filter pump.
- Run the pump daily to circulate and filter the water. The duration depends on pool usage and water quality, but typically 2-10 hours per day is recommended.
- The Krystal Clear™ system uses Hydro Aeration Technology to improve filtration, clarity, and freshness by injecting air into the water, accelerating circulation, and clumping fine particles for better filtration.



Image: A visual representation of Intex's Hydro Aeration Technology, showing air bubbles being introduced into the pool water to enhance filtration and clarity.

Water Chemistry

- Regularly test your pool water for pH, chlorine, and alkalinity levels using a pool test kit (not included).
- Add appropriate pool chemicals as needed to maintain balanced water chemistry.

MAINTENANCE

Filter Cartridge Cleaning and Replacement

- Turn off and unplug the filter pump before performing any maintenance.
- Remove the filter cartridge and rinse it with a garden hose to remove debris.
- Replace the filter cartridge every two weeks for best results, or more frequently if the water appears cloudy or the pump flow rate decreases.



Image: The Krystal Clear Cartridge Filter Pump alongside a Type A filter cartridge, indicating that one replaceable cartridge is included and replacement every two weeks is recommended.

Pool Cleaning

- Use a pool skimmer net to remove leaves and other floating debris from the water surface.
- Periodically vacuum the pool bottom to remove settled dirt and debris.

Pool Cover Usage

- Use the included pool cover when the pool is not in use to keep it free of dirt and debris.
- The cover is constructed of high-quality, durable vinyl with drain holes to prevent water buildups and features a 12-inch overhang for a secure fit.



Image: An Intex Easy Set Pool covered with its grey pool cover, demonstrating how it protects the pool from debris.

Winterization and Storage

- Before freezing temperatures, completely drain the pool using the drain plug.
- Clean and dry all components thoroughly before storing them in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pool losing air from top ring	Small puncture or leak in the inflatable ring.	Locate the leak using soapy water, then patch with the included repair kit (if applicable) or a vinyl repair kit.

Problem	Possible Cause	Solution
Water not clear/cloudy	Insufficient filtration, dirty filter cartridge, unbalanced water chemistry.	Run pump longer, clean or replace filter cartridge, test and adjust water chemistry (chlorine, pH).
Pump not running	Power issue, clogged impeller, airlock.	Check power connection, ensure GFCI is not tripped. Refer to pump manual for impeller cleaning and airlock removal.
Pool walls leaning/uneven water level	Pool not set up on a level surface.	This requires draining the pool, re-leveling the ground, and refilling. This is critical for pool stability.

SPECIFICATIONS

Feature	Detail
Brand	Intex
Model Number	26165EH+28023E
Pool Dimensions (Diameter x Height)	15 ft x 42 in (180"L x 180"W x 42"H)
Water Depth	36 inches (91 cm)
Water Capacity (80% full)	3,736 gallons (14,142 L)
Material	Durable 3-ply Vinyl (Puncture-resistant)
Filter Pump Model	Krystal Clear™ 28637EG
Pump Flow Rate	1,000 gallons per hour (3,785 L/hr)
System Flow Rate	750 gph (2,839 lph)
Filter Cartridge Type	Type A
Ladder Weight Capacity	300 lbs. (136 kg)
UPC	078257397648



Pool Size
15' x 42" (4.57 m. x 106.7 cm.)

Image: Diagram illustrating the pool size of 15' x 42" (4.57 m x 106.7 cm).

**Water Depth**

36" (91 cm.)

Image: Diagram illustrating the water depth of 36" (91 cm).

**Water Capacity**

3,736 gal. (14,142 L)

Image: Diagram illustrating the water capacity of 3,736 gallons (14,142 L).

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Intex website.

You can also visit the [Intex Store on Amazon](#) for more product information and support resources.

© 2024 Intex Recreation Corp. All rights reserved.

For more information, visit www.intexcorp.com