

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PERFASCIN](#) /

› [PERFASCIN AKB73756565 Replacement Remote Control User Manual for LG LED 3D Smart TVs](#)

PERFASCIN AKB73756565

PERFASCIN AKB73756565 Replacement Remote Control User Manual

For LG LED 3D Smart TVs

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your PERFASCIN AKB73756565 replacement remote control. This remote is designed to be compatible with various LG LED 3D Smart TV models, offering a direct replacement without the need for complex programming.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Rear view of the remote control with the battery compartment open, illustrating where to insert the two AAA batteries.

2. Initial Use and Compatibility

This replacement remote control is designed for immediate use with compatible LG TV models without any programming. Simply install the batteries, and it should function directly with your television.

Compatible LG TV Models include:

- AKB73756502, AKB73756506, AKB73756504, AKB73756567, AKB73615362, AKB73615309, AKB72914207
- 32LM620T, 42LM620T, 47LM620T
- 32LB650, 39LB650, 42LB650, 47LB650, 50LB650, 55LB650, 60LB650, 70LB650
- 42LB650V, 50LB650V, 55LB650V, 60LB650V, 32LB650V
- 32LA620V, 55LY570H, 47LA6200, 60LA6205, 42LA6200, 55LM8600, 47LA6200-UA, 60LM8600, 50LA6200, 55LA6200, 42LM6700, 55LA6205, 60LA6200, 65UF7650

Important: Always verify your TV's model number, typically found on the back of the television, to ensure compatibility before use. If your specific model is not listed, please contact customer support for assistance.

OPERATING INSTRUCTIONS

The PERFASCIN AKB73756565 remote control provides full functionality for your compatible LG TV. Below is a general overview of key buttons and their functions.





Figure 2: Front view of the remote control with all buttons labeled.

- **Power (●):** Turns the TV on or off.
- **INPUT:** Selects the input source (e.g., HDMI 1, AV).
- **Q.MENU:** Accesses the Quick Menu for common settings.
- **SETTINGS:** Opens the main TV settings menu.
- **Number Pad (0-9):** Directly enters channel numbers.
- **GUIDE:** Displays the electronic program guide.
- **FAV:** Accesses favorite channels.
- **Volume (+/-):** Adjusts the volume level.
- **Channel (P Up/Down):** Changes TV channels.
- **MUTE:** Mutes or unmutes the TV sound.
- **3D:** Activates or deactivates 3D mode (if supported by TV and content).
- **SMART:** Accesses the Smart TV home screen or apps.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates through menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the TV menu or application.
- **TEXT:** Opens teletext (if available).
- **SUBTITLE:** Toggles subtitles on or off.
- **Play/Pause/Stop/Fast Forward/Rewind:** Media playback controls.

Point the remote control directly at the TV's infrared sensor for optimal performance. Ensure there are no obstructions between the remote and the TV.

MAINTENANCE

1. Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

2. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

3. Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can damage the remote control.

TROUBLESHOOTING

- **Remote control is not working:**

- Ensure the batteries are inserted correctly with the correct polarity (+/-).
- Replace the batteries with fresh AAA batteries.
- Check if there are any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are pointing the remote directly at the TV.
- Verify that your TV model is listed as compatible in the "Setup" section.

- **Some buttons are not responding:**

- This could indicate low battery power. Try replacing the batteries.
- Ensure the remote is clean and free from debris that might be obstructing button presses.
- Confirm the button functionality is supported by your specific TV model.

- **Remote control works intermittently:**

- This often points to weak batteries. Replace them.
- Check for strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the infrared signal.

If troubleshooting steps do not resolve the issue, please refer to the "Support" section for further assistance.

SPECIFICATIONS

Model Number	AKB73756565
Brand	PERFASCIN

Compatible Devices	LG LED 3D Smart Televisions (specific models listed in Setup section)
Power Source	2 x AAA Batteries (not included)
Special Feature	No Programming Required
Color	Black
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2 ounces

SUPPORT

For further assistance, compatibility inquiries, or troubleshooting not covered in this manual, please contact PERFASCIN customer support. When contacting support, please have your TV model number and the remote control model number (AKB73756565) available.

Contact Information: Please refer to your purchase documentation or the retailer's website for specific contact details.

© 2023 PERFASCIN. All rights reserved.