

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA 4-12 Cups Programmable Coffee Maker User Manual

BELLA 14755

BELLA 4-12 Cups Programmable Coffee Maker

Model: 14755 | Brand: BELLA

INTRODUCTION

This manual provides comprehensive instructions for the BELLA 4-12 Cups Programmable Coffee Maker. Please read thoroughly before first use to ensure safe and optimal operation of your appliance.

COMPONENTS

- Coffee Maker Unit (Base with control panel, water reservoir, brew basket housing)
- Glass Carafe (12-cup capacity)
- Reusable Filter Basket
- Measuring Scoop





Overview of the BELLA 4-12 Cups Programmable Coffee Maker, showcasing its stainless steel and black design with the glass carafe in place.

SETUP

1. Unpack all components and remove any packaging materials.
2. Place the coffee maker on a flat, stable, heat-resistant surface.
3. Clean the carafe, reusable filter basket, and measuring scoop with warm, soapy water. Rinse thoroughly.
4. Perform an initial cleaning cycle: Fill the water reservoir to the MAX line with clean water. Place the empty reusable filter basket in the brew basket housing. Close the lid. Run a full brew cycle without coffee grounds. Discard the water. Repeat this process 2-3 times to remove any manufacturing residues.



INCLUDES SUSTAINABLE AND RE-USABLE FILTER BASKET AND MEASURING SCOOP

The included reusable filter basket and measuring scoop, designed for sustainable coffee brewing.

OPERATING INSTRUCTIONS

Basic Brewing

1. Open the top lid of the coffee maker.
2. Fill the glass carafe with the desired amount of fresh, cold water. Refer to the water level markings on the carafe and the reservoir.
3. Pour the water from the carafe into the water reservoir.
4. Place the reusable filter basket into the brew basket housing.
5. Add the desired amount of ground coffee into the reusable filter basket. Use the provided measuring scoop for accurate measurement (approximately 1 scoop per cup).
6. Close the top lid securely.
7. Place the empty glass carafe on the warming plate.

8. Press the "ON/OFF" button to start brewing. The LCD display will illuminate.

9. The coffee maker will automatically shut off after 2 hours.



A hand pouring water from the glass carafe into the water reservoir of the coffee maker, illustrating the filling process.



PROGRAMMABLE UP TO 24 HOURS IN ADVANCE

A close-up view of the coffee maker's backlit LCD display and control buttons, showing the programmable features.

Official product video demonstrating the features and operation of the BELLA 12-Cup Programmable Coffee Maker, including filling, brewing, and pouring.

Brew Strength Selection (1-4 Cup Feature)

For smaller quantities (1-4 cups) with full carafe taste, or to select a bolder brew:

1. Follow steps 1-6 of Basic Brewing.
2. To activate the 1-4 cup feature, press and hold the "PROGRAM" button until a beep is heard and the display indicates the 1-4 cup setting.
3. To select a bolder coffee strength, press and hold the "ON/OFF" button until the display indicates the bold setting.
4. Press the "ON/OFF" button to start brewing with your selected strength.

24-Hour Programmable Brew

Set the coffee maker to start brewing automatically at a specific time:

1. Ensure the current time is set correctly on the LCD display using the "HOUR" and "MIN" buttons.
2. Follow steps 1-6 of Basic Brewing.
3. Press the "PROGRAM" button once. The display will show "PROGRAM" and flash.
4. Use the "HOUR" and "MIN" buttons to set your desired brew start time.
5. Press the "PROGRAM" button again to confirm the programmed time. The "PROGRAM" indicator will remain lit.
6. The coffee maker will automatically start brewing at the set time.



A hand pouring freshly brewed coffee from the glass carafe into a white mug, demonstrating the ease of serving.

MAINTENANCE

Daily Cleaning

- After each use, discard used coffee grounds from the reusable filter basket.
- Wash the glass carafe, reusable filter basket, and measuring scoop in warm, soapy water. These parts are top-rack dishwasher safe.

- Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the unit in water.

Special Cleaning Cycle (Descaling)

To maintain optimal performance and coffee flavor, descale the coffee maker regularly (e.g., monthly or every 40-80 brew cycles, depending on water hardness).

1. Fill the water reservoir with a mixture of 1 part white vinegar and 2 parts cold water.
2. Place the empty reusable filter basket in the brew basket housing.
3. Place the empty carafe on the warming plate.
4. Run a regular brew cycle with the vinegar solution.
5. Allow the cycle to complete. Discard the vinegar solution.
6. Run 2-3 full cycles with fresh, clean water to rinse thoroughly and remove any residual vinegar taste.



**STYLISH STAINLESS STEEL DESIGN
FOR YOUR COUNTERTOP**

The BELLA coffee maker's stylish stainless steel design, complementing modern kitchen aesthetics.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir.	Fill water reservoir.
	Power cord unplugged.	Ensure power cord is securely plugged into a working outlet.
Coffee tastes weak.	Not enough coffee grounds.	Add more coffee grounds. Use the "Bold" setting if available.
	Coffee grounds too coarse.	Use finer ground coffee.
Coffee overflows from filter.	Too many coffee grounds.	Reduce the amount of coffee grounds.
	Filter basket not seated correctly.	Ensure the reusable filter basket is properly seated.
	Coffee maker needs descaling.	Perform a special cleaning cycle to remove mineral buildup.
Display not working.	Power outage or unit unplugged.	Check power connection. Reset time if necessary.

SPECIFICATIONS

- Brand:** BELLA
- Model Name:** Coffee Maker
- Model Number:** 14755
- Color:** Stainless Steel, Black
- Product Dimensions:** 7.16"D x 9.72"W x 13.62"H
- Item Weight:** 5.51 pounds
- Coffee Maker Type:** Drip Coffee Machine
- Filter Type:** Reusable
- Operation Mode:** Fully Automatic
- Voltage:** 120 Volts
- Special Features:** Programmable Timer, Bold Strength Selector, Pause and Serve, 2-Hour Auto Shutoff



Dimensions of the BELLA 4-12 Cups Programmable Coffee Maker, showing its compact size for countertop placement.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official BELLA website or contact their customer service. Keep your purchase receipt for warranty claims.

Official BELLA Website: www.bellahousewares.com

