

Edenwood ED6504UHD

Edenwood Vestel ED6504UHD 65-inch 4K Smart LED TV User Manual

Model: ED6504UHD

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Edenwood Vestel ED6504UHD 65-inch 4K Smart LED TV. Please read this manual thoroughly before using the television and retain it for future reference.

Important Safety Information: Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury. Do not attempt to service this product yourself.

PACKAGE CONTENTS

Verify that all components are present in the packaging:

- Edenwood Vestel ED6504UHD 65-inch 4K Smart LED TV
- Remote Control with Batteries
- Power Cable
- TV Stand (if applicable)
- User Manual (this document)
- Quick Start Guide

SETUP

1. Unpacking and Placement

Carefully remove the TV from its packaging. It is recommended to have two people for this process due to the size and weight of the unit. Place the TV on a stable, flat surface or prepare for wall mounting.



Image: The Edenwood Vestel ED6504UHD 65-inch 4K Smart LED TV displaying a vibrant image of the Golden Gate Bridge. The television is shown with its central stand attached, ready for placement on a flat surface.

2. Attaching the Stand (Optional)

If you are not wall-mounting, attach the TV stand according to the instructions provided in the Quick Start Guide. Ensure all screws are securely fastened.

3. Wall Mounting (Optional)

The Edenwood Vestel ED6504UHD supports wall mounting. Use a VESA-compatible wall mount kit (sold separately) that matches the TV's VESA pattern. Consult a professional for wall mounting to ensure safety and proper installation.

4. Connecting Peripherals

Connect your external devices (e.g., cable box, Blu-ray player, gaming console) to the appropriate ports on the TV. The TV features HDMI, USB, and VGA connectivity.

- **HDMI:** For high-definition audio and video.
- **USB:** For media playback from USB storage devices.
- **VGA:** For connecting to a computer.
- **Ethernet:** For wired internet connection.

5. Power Connection

Plug the power cable into the TV's power input, then into a wall outlet. Do not use damaged power cords.

6. Initial Power On and First-Time Setup

Press the power button on the remote control or the TV. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), and channel scanning.

OPERATING YOUR TV

Remote Control Functions

Familiarize yourself with the remote control. Key functions typically include:

- **Power:** Turns the TV on/off.
- **Source:** Selects input sources (HDMI, AV, TV, USB).
- **Volume +/-:** Adjusts volume.
- **Channel +/-:** Changes channels.
- **Navigation Buttons:** For menu navigation (Up, Down, Left, Right, OK).
- **Smart TV Button:** Accesses smart TV features and applications.
- **Menu:** Opens the main settings menu.
- **Exit/Back:** Returns to the previous screen or exits a menu.

Smart TV Features

Your Edenwood Vestel ED6504UHD is a Smart TV, offering access to various online applications and services. Ensure your TV is connected to the internet (Wi-Fi or Ethernet) to utilize these features.

- **App Store:** Download and install additional applications.
- **Web Browser:** Browse the internet directly from your TV.
- **Streaming Services:** Access popular streaming platforms (subscriptions may be required).

Picture and Sound Settings

Access the TV's menu to adjust picture (brightness, contrast, color, sharpness) and sound (bass, treble, balance, sound mode) settings to your preference.

MAINTENANCE

Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cabinet:** Wipe the cabinet with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Always unplug the TV before cleaning.

Software Updates

Periodically check for software updates through the TV's settings menu. Keeping your TV's software updated ensures optimal performance and access to new features.

TROUBLESHOOTING

Before contacting customer support, refer to the following common issues and solutions:

Problem	Possible Solution
No power	Ensure the power cable is securely connected to both the TV and the wall outlet. Check if the outlet is working.

Problem	Possible Solution
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly.
No sound, but picture is present	Check the volume level and mute status. Verify audio cables are connected properly.
Remote control not working	Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled on the TV. Check your router and internet connection. Re-enter the Wi-Fi password.

SPECIFICATIONS

Feature	Detail
Brand	Edenwood
Model	ED6504UHD
Screen Size	65 Inch (164 cm)
Display Technology	LED
Resolution	4K Ultra HD
Key Feature	Smart/Internet TV
Connectivity Technology	Ethernet, HDMI, USB, VGA, Wi-Fi
Mounting Type	Wall Mount (VESA compatible)

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Edenwood/Vestel website. For technical support, service, or replacement parts, please contact your authorized dealer or the manufacturer's customer service department.

Note: Product specifications and appearance are subject to change without notice.

	Guide d'Utilisation TV EDENWOOD ED50EA01UHD-VE Ce guide d'utilisation complet pour le téléviseur EDENWOOD ED50EA01UHD-VE (modèle 988345) fournit des instructions détaillées pour l'installation, la configuration et l'utilisation de votre TV Ultra HD. Découvrez les fonctionnalités Smart TV, Dolby Vision et HDR pour une expérience visuelle optimale.
	Manuel d'utilisation Enceinte Edenwood BARREL 250 (975742) Guide complet pour l'enceinte Edenwood BARREL 250 (modèle 975742), incluant les instructions d'utilisation, les spécifications techniques, le nettoyage et le dépannage.
	Manuel d'utilisation Enceinte EDENWOOD PARTY300 (974867) ELECTRO DEPOT Manuel complet pour l'enceinte EDENWOOD PARTY300 (modèle 974867). Découvrez comment connecter, utiliser, nettoyer et dépanner votre enceinte audio Bluetooth avec TWS et entrées microphone. Produit recommandé par ELECTRO DEPOT.
	EDENWOOD ED65EA08UHD-VE TV Operating Instructions Comprehensive operating instructions for the EDENWOOD ED65EA08UHD-VE TV, covering setup, features, connections, and safety information.
	Manuel d'utilisation Enceinte Portable EDENWOOD PARTY400 FIRE Découvrez comment utiliser votre enceinte portable EDENWOOD PARTY400 FIRE. Ce guide complet détaille les connexions Bluetooth, USB, AUX, les fonctions micro, le nettoyage et le dépannage pour une performance optimale.



[Edenwood ED43EA11UHD-MM 43-inch QLED TV User Manual](#)

User manual for the Edenwood ED43EA11UHD-MM 43-inch QLED TV. Covers setup, operation, features, safety, and troubleshooting. Includes multilingual support information.