

- Manuals.plus /
- › AgPubs /
- › AgPubs Parts Catalog Manual for J.I. Case W20 Articulated Loader (S/N 9123140-After)

AgPubs W20 Articulated Loader S/N 9123140-After

AgPubs Parts Catalog Manual for J.I. Case W20 Articulated Loader (S/N 9123140-After)

Official Parts Identification and Ordering Guide

1. INTRODUCTION

This document serves as the official Parts Catalog Manual for the J.I. Case W20 Articulated Loader, specifically for units with Serial Numbers 9123140 and after. This catalog is published by AgPubs and is designed to assist users in identifying and ordering correct replacement parts for their equipment.

It provides detailed exploded views, part names, and original equipment manufacturer (OEM) part numbers, which are essential for accurate maintenance and repair.

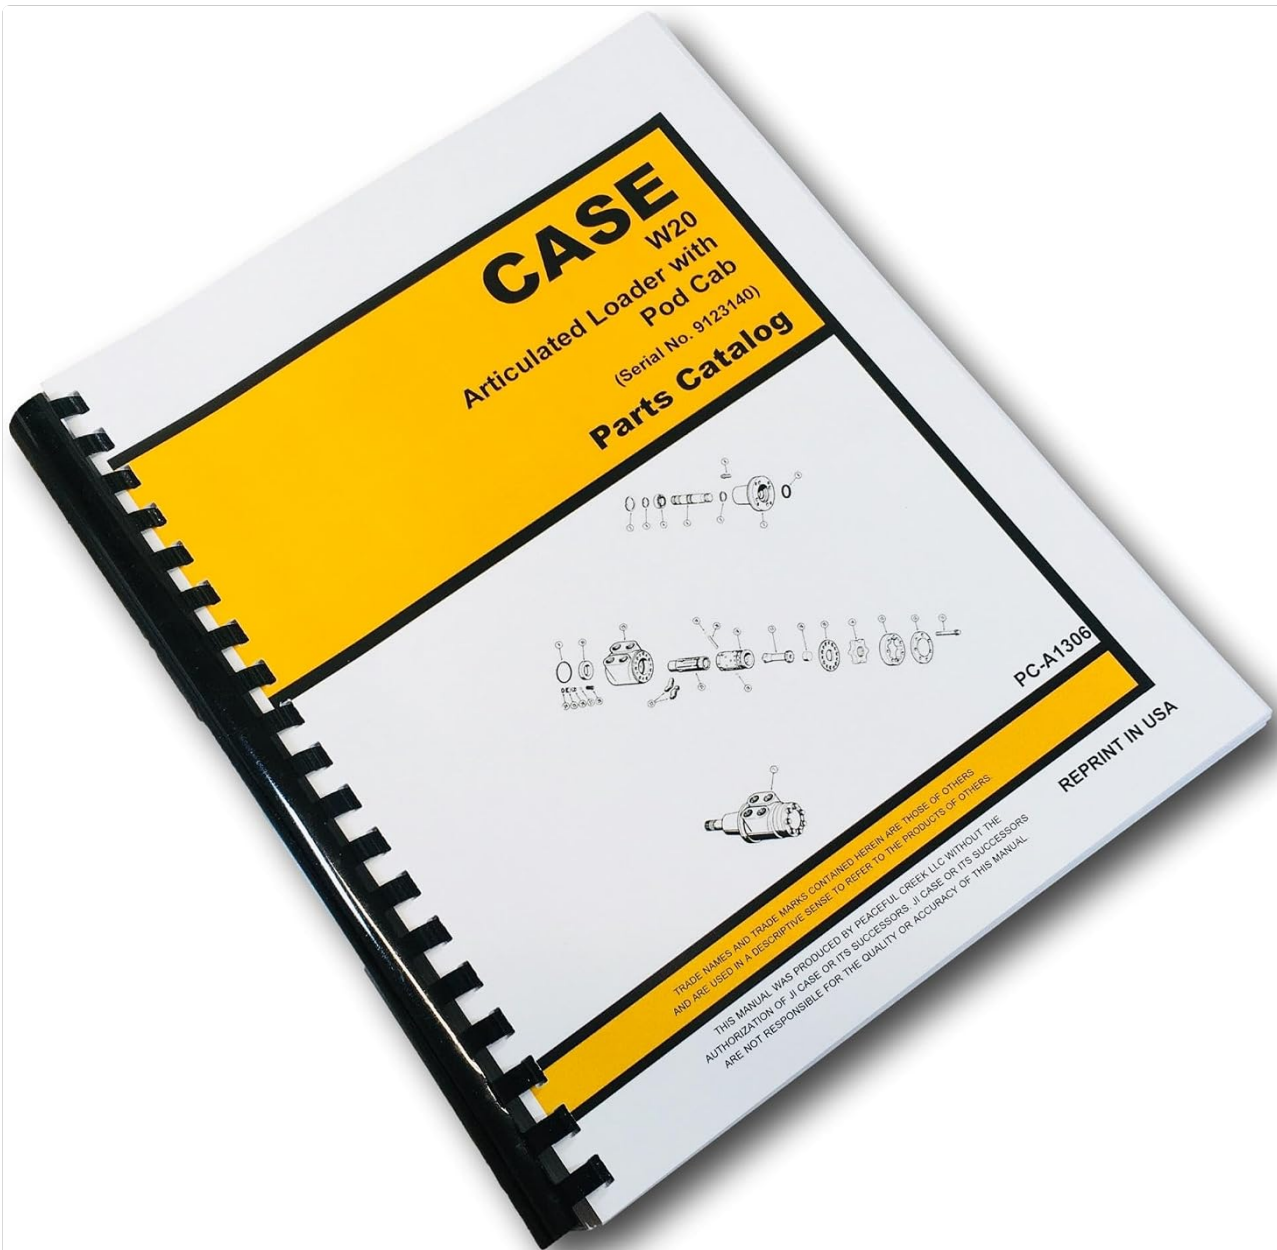 


Figure 1.1: Front cover of the AgPubs Parts Catalog Manual for the J.I. Case W20 Articulated Loader.

2. UNDERSTANDING MANUAL TYPES

It is important to distinguish between different types of manuals available for equipment. Each serves a specific purpose:

- **Service Manual:** Provides comprehensive instructions for repair, overhaul procedures, and troubleshooting guides. This manual is crucial for detailed mechanical work.
- **Operators Manual:** Contains essential information for basic maintenance, operational procedures, recommended fluid types and quantities, and general adjustments. This manual is for daily operation and routine care.
- **Parts Catalog (This Manual):** Features exploded views of assemblies, lists of individual part names, and corresponding factory (OEM) part numbers. Its primary function is to facilitate accurate part identification and ordering.

This document is a Parts Catalog and focuses exclusively on part identification. For operational or repair instructions, please refer to the appropriate Operator's or Service Manual.

W20 ARTICULATED LOADER WITH POD CAB S/N 9123140 & After

Parts Catalog A 1306

Port Publ. 500

Published April 1978

Note: This parts catalog replaces the previous issue - 1306 - which is obsolete and should be discarded.

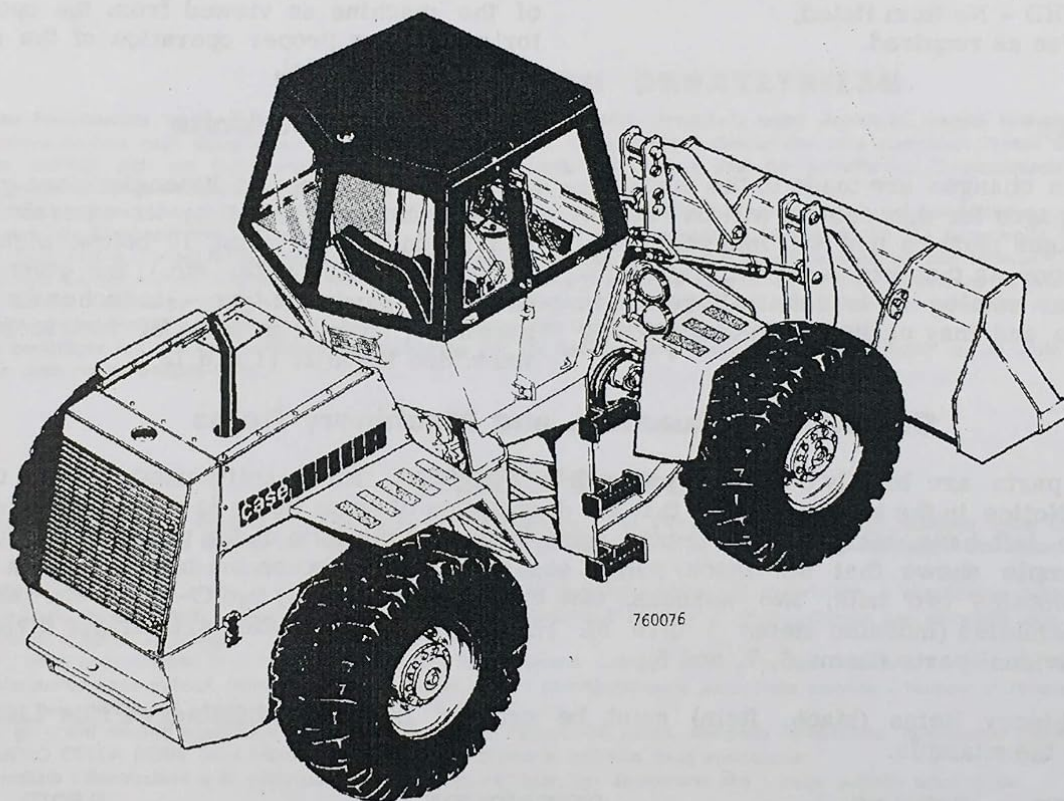 


Figure 2.1: Title page confirming the manual's scope for the W20 Articulated Loader with Pod Cab, S/N 9123140 & After.

3. HOW TO USE THIS PARTS CATALOG

This catalog is organized to help you quickly locate the parts you need. Follow these steps:

1. **Identify the Component:** Determine the specific component or system where the part is located (e.g., engine, transmission, hydraulic system).
2. **Consult the Alphabetical Index:** Use the alphabetical index to find the relevant section or page number for the component.
3. **Locate the Exploded View:** Turn to the indicated page to find the exploded diagram of the assembly.
4. **Match Part to Number:** On the exploded view, identify the part you need and note its corresponding

reference number.

5. **Find Part Details:** Refer to the accompanying parts list, which uses the reference numbers to provide the part name, description, and the factory (OEM) part number.

4. CATALOG STRUCTURE: ALPHABETICAL INDEX

The manual begins with a comprehensive alphabetical index, allowing users to quickly navigate to specific sections. Components are listed alphabetically with their corresponding page numbers.

6	MODEL W20 ARTICULATED LOADER	
ALPHABETICAL INDEX		
A		
Accelerator and Linkage	49	
Air Cleaner	45	
Air Conditioning	281,283	
Alternator	67,69	
Mounting and Adjusting Strap	89	
Auxiliary Steering	93,95,121,123	
Axle Assemblies	163	
Axle Housing	167,167B	
Differential	169,169B	
Drum Brakes	171	
Planetaries	167,167B	
Axle Mounting	163	
B		
Backup Alarm	109	
Battery	87	
Cables	87	
Belts		
Alternator and Fan	43	
Compressor	43,281	
Seat	259	
Block, engine cylinder	27	
Brake Assemblies and Circuits		
Air Compressor and Related		
Parts	175-179	
Air Pressure Protection Valve	187,199	
Alcohol Evaporator	181	
Brake Actuator	183,193	
Drum Brakes	171,185	
Emergency Brake to Safety		
Chamber	189	
Governor, air compressor	179	
Master Cylinder	193	
Master Cylinder to Wheel		
Cylinders	185	
Parking Brake, transmission	151	
Safety Chamber	189,195	
Treadle Assembly	187,191	
Treadle to Master Cylinder		
and Reservoir	183	
Treadle to Hydraulic Tank		
and Horn	187	
Buckets		
Clam(4-in-1)	245	
Standard	243	
Teeth	243,245	
C		
Cab, operators	267-275	
Camshaft, engine	25	
Canopy, ROPS	285	
Canopy, ROPS	145,147	
Clutch, transmission	111	
Cold Start System (Ether Injection)	175,177	
Compressor, air	283	
Compressor, air conditioning	33	
Connecting Rods, engine	183	
Control Levers		
Clutch Cutout	239	
Loader Height and Leveling	235,237	
Loader Lift and Dump	49	
Pedal, accelerator	183-191	
Pedal, brake (Treadle)	131,133	
Transmission	249	
Counterweight	29	
Crankshaft, engine	259,263	
Cushions, seat	183,185,193	
Cylinders, brake		
Master	171,185	
Slave	217,219	
Cylinders, hydraulic		
Bucket Tilt	247	
Clam	215	
Loader Lift	125,127	
Steering		
D		
Decals		
Engine Data	21	
Machine	287	
Dipsticks		
Engine Oil	27	
Hydraulic Tank	203	
Transmission Oil	135	
Drum Brakes	171,185	
Drive Shaft		
Center Bearing	159	
Front, axle end	159	
Front, transmission end	161	
Rear	161	

Figure 4.1: First page of the alphabetical index, showing entries from 'A' to 'D'.

ALPHABETICAL INDEX

E

Electrical Systems	67-111
Auxiliary Steering	93
Backup Alarm	109
Bucket Height	239
Cold Starting Systems	111
Instrument Panels	77,79
Operators Compartment	91
Return-To-Dig	239
Engine Mount	41
Engine Subassemblies	67,69
Alternator	25
Camshaft	29
Crankshaft	27
Cylinder Block	21
Cylinder Head and Cover	29,31
Flywheel and Housing	59
Fuel Filter System	57
Fuel Injection System	37
Gasket Kits	65
Injection Nozzles	63
Injection Pump	61
Injection Pump Drive	15
Oil Filter and Cooler	35
Oil Pump and Pan	17
Manifolds, intake and exhaust	33
Piston and Connecting Rods	71-75
Starter	39
Timing Gear Cover	19
Turbocharging System	23
Valve Mechanism	11
Water Manifold and Thermostat	13
Water Pump	181
Evaporator, alcohol	47
Exhaust, pipe and mufflers	43

F

Fan, radiator	13,43
Mounting	253,255
Fenders	45
Filters	179
Air Cleaner	15
Air, governor	53,55
Engine Oil	203
Fuel	137
Hydraulic Tank	99
Transmission Oil	29
Flasher Lights	
Flywheel, engine	

F

Frames	255
Articulated, front	249
Articulated, rear	241
Loader Lift	65
Fuel Injector Nozzles	51,53
Fuel Lines	51
Fuel Tank	

G

Gaskets, engine (Service Kits)	37
Gauges-See Electrical Systems	
Gears	
Engine-See Engine Subassemblies	
Transmission-See Transmission	
Subassemblies	179
Governor, air compressor	251
Grille	251
Guards	
Engine Side Panels	251

H

Head, engine	21
Heater	27
Block, engine	277-279
Cab	251
Hood	187,199,201
Horn, air	43
Hose, radiator	
Hoses-See Fuel Lines, Brakes Assemblies	
and Hydraulic Circuits	
Hydraulic Circuit	205,207
Basic Hydraulics	211
Loader Bucket (Dump)	209
Loader Lift	207
Pump to Loader Valve	123
Steering, pump to cylinders	117
Steering, valve to reservoir	137
Transmission	203
Hydraulic Tank Assembly	

I

Index, numerical	291
Instrument Panel	77,79
Instruments - See Gauges	
Transmission (See Transmission	
Subassemblies)	

Figure 4.2: Second page of the alphabetical index, covering entries from 'E' to 'H'.

ALPHABETICAL INDEX

L

Lights	97-103
Loader Arm, mechanical parts	241
Lockup Parts	265

M

Manifold	
Exhaust	17
Intake	17
Water	11
Mirrors	269,285
Mounts	
Axle	163
Engine	41
Radiator	43
Transmission	135
Mufflers	47

N

Nozzle, fuel injector	65
Numerical Index	291

O

Oil Cooler, engine	15
Oil Pan, engine	35

P

Panel, instrument	77,79
Parking Brake	151,189
Pedal, accelerator	49
Pedal, brake (Treadle)	183,187-191
Piston Assemblies, engine	33
Pulleys	
Air Compressor	173
Alternator	89
Alternator and Fan Drive	29
Fan Mounting	13
Pump Drive, water	13

P

Pumps	
Engine, oil	35
Fuel Injection	63
Fuel, electric	55
Hydraulic Oil	129
Steering	117,119,121,129
Torque Converter	139
Transmission Charging	153
Water, engine	13

R

Radiator, cooling	43
Regulator, voltage	67,69
Reservoirs	
Air	173,183
Fuel	51,53
Hydraulic Oil	203,204
Rims, wheel	165
Rings, engine piston	33
Rocker Arms, engine	23
Rods, connecting	33
Rods, push	23

S

Safety Chamber	189,195
Seat Assemblies	259-263
Shafts	
Axle (See Axle Assemblies)	
Drive	159,161
Engine (See Engine Subassemblies)	
Subassemblies	
Shroud, radiator	251
Side Panels, engine	253
Sleeve, piston	
Solenoid	
Starter	75,83
Starter, engine	71,73
Starter Aid- (Ether Injection)	111
Steering	113-125
Steps	255

Figure 4.3: Third page of the alphabetical index, covering entries from 'L' to 'R'.

ALPHABETICAL INDEX

T

Temperature Sending Unit	11
Thermostat, water temperature	11
Timing Gear Cover, engine	39
Tire Inflation Kit	173
Torque Converter	139
Transmission Mounts	135
Transmission Subassemblies	
Axle Output Shaft and Parking	
Brakes	151
Charging Pump	153
Control Valve	153,155
Converter Housing, Gears and	
Transmission Housing	141
Forward Clutch and Planetary	147
Front Cover, Input Shaft and Torque	
Converter	139
High Range Clutch and Transfer	
Gear	149
Hydraulic System	137
Overhaul Kit	157
Reverse Clutch and Planetary	145
Turbine Driven Gears and Freewheel	
Unit	143
Trunnion, rear frame	249
Turn Signals	99

V

Valve Mechanism, engine	23
Valve Parts, hydraulic control	221-233

V

Valves	
Air Shutoff	187
Air Pressure Protection	187,199
Air Pressure Regulator	187,197
Brake Control	187,191
Breather, axle	167,167B
Breather, transmission	141
Clutch Cutout	183
Emergency Brake	189
Drain, air reservoir	183
Drain, engine oil cooler	15
Drain, radiator	43
Flow Control, steering	117
Horn	199
Loader Control, 2 spool	221,235
Loader Control, 3 spool	223,237
Tire, valve stem	165
Torque Converter	141
Transmission Control	153,155
Check, double	183,197

W

Wheel, steering	113
Wheel, tire	165
Windows-cab	275
Wiper, windshield	105-107
Wire-See Electrical Circuits	

Figure 4.4: Fourth page of the alphabetical index, covering entries from 'T' to 'W'.

5. IDENTIFYING PARTS WITH EXPLODED VIEWS

Each section dedicated to a specific system or component features an exploded diagram. These diagrams visually separate each part of an assembly, making it easy to identify individual components and their relative positions. Accompanying each diagram is a detailed list, cross-referencing the numbered parts in the diagram with their official part numbers and descriptions.

5.1. Accelerator and Linkage

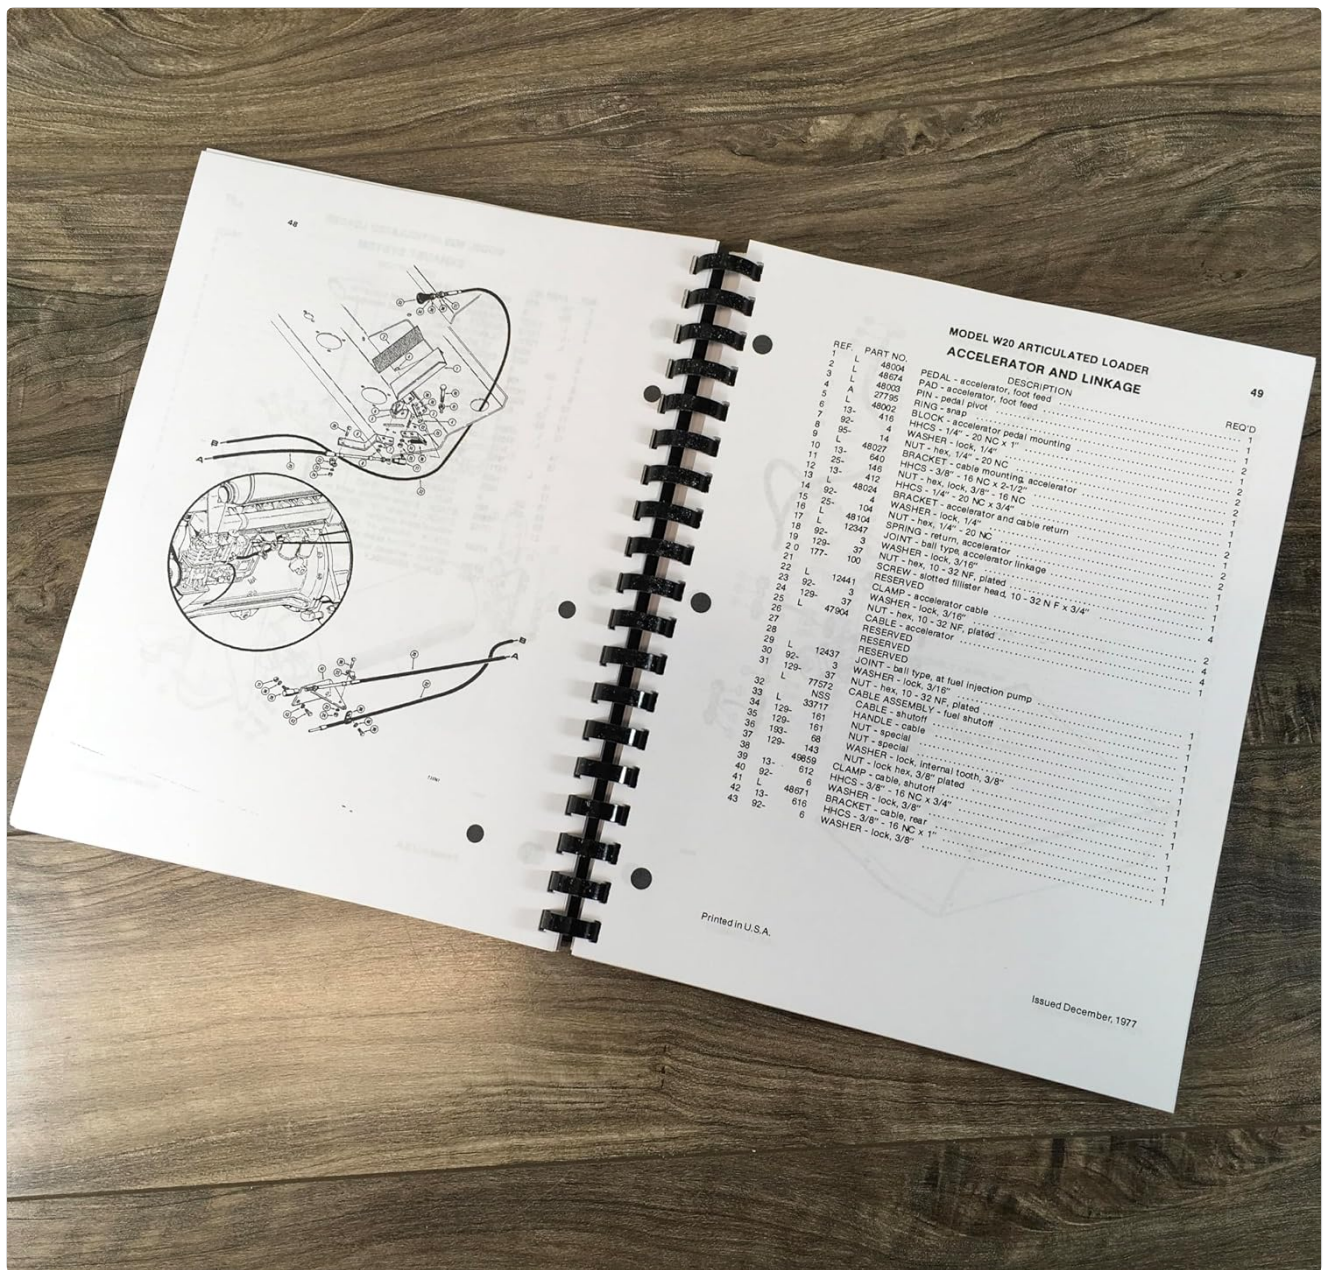 


Figure 5.1.1: Exploded view illustrating the components of the accelerator and linkage system, with corresponding part numbers listed on the right.

5.2. Injection Pump



Figure 5.2.1: Exploded view detailing the components of the injection pump assembly, with part numbers and descriptions.

5.3. Alternator

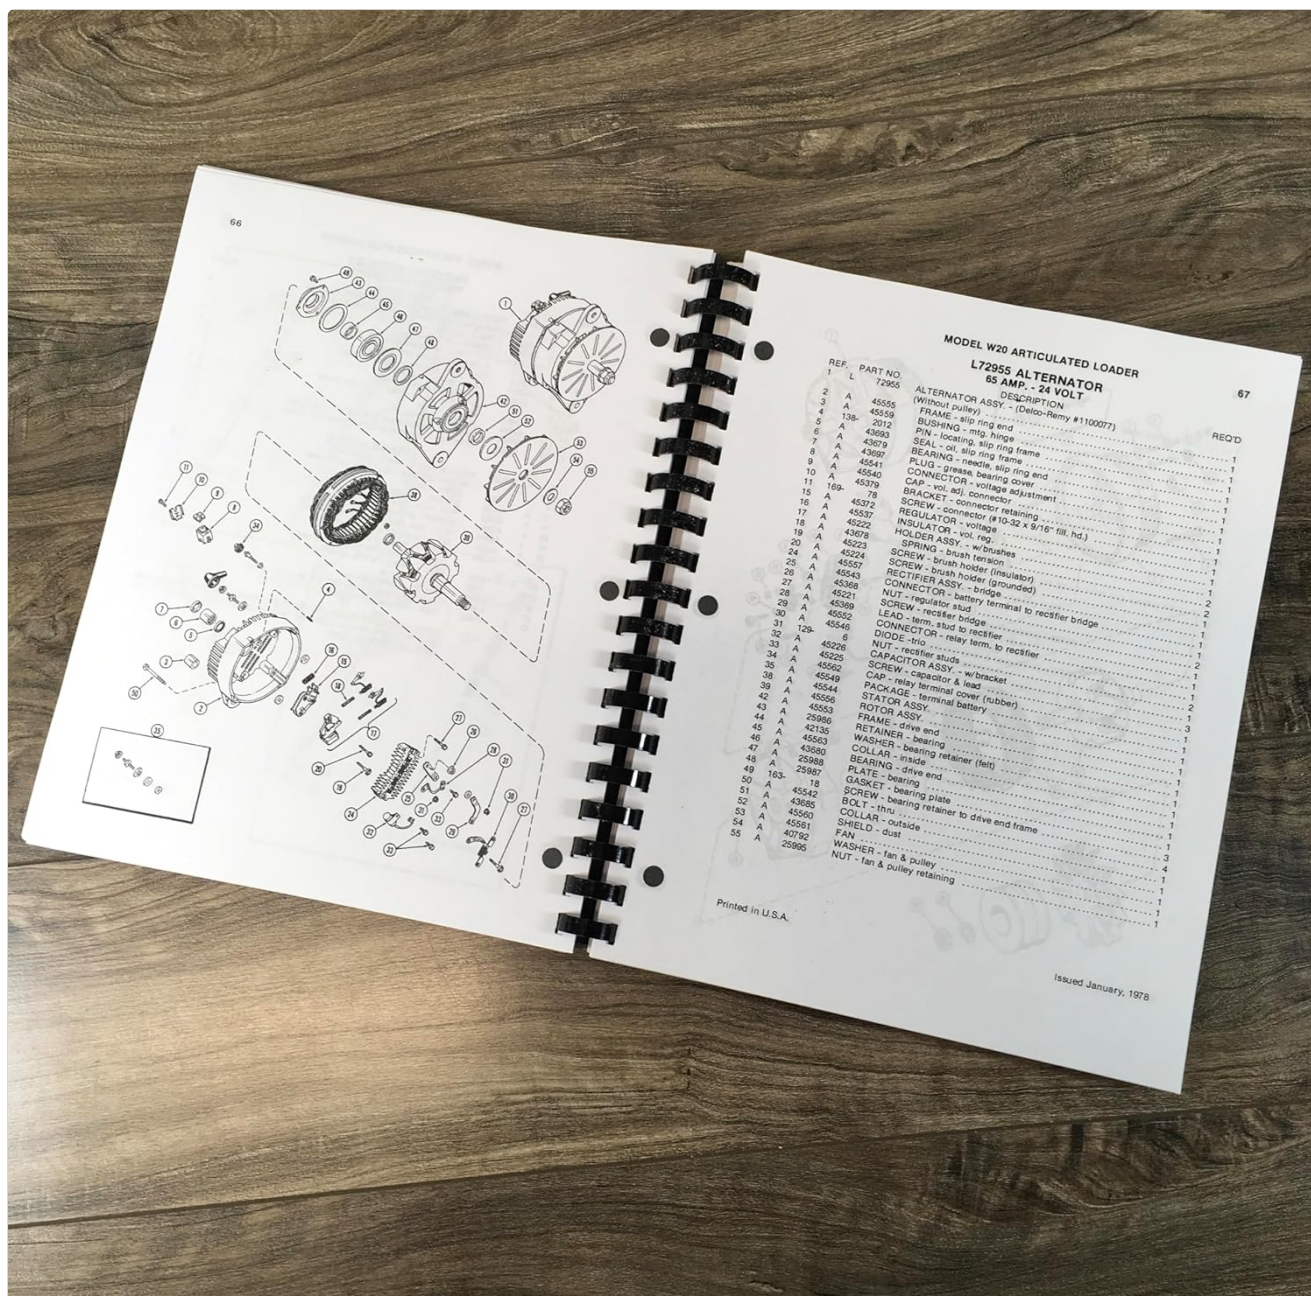 


Figure 5.3.1: Exploded view showing the various parts of the alternator assembly, along with their respective part numbers.

6. IMPORTANT CONSIDERATIONS

This Parts Catalog is intended solely for part identification. It does not contain instructions for:

- **Setup:** Initial assembly or configuration procedures.
- **Operating:** Instructions for operating the J.I. Case W20 Articulated Loader.
- **Maintenance:** Routine service schedules, lubrication points, or adjustment procedures.
- **Troubleshooting:** Diagnostic steps for identifying and resolving operational issues.
- **Specifications:** Detailed technical specifications beyond part numbers.

For information on these topics, please consult the relevant Operator's Manual or Service Manual for your J.I. Case W20 Articulated Loader.

7. WARRANTY AND SUPPORT

For questions regarding the content of this parts catalog, or for assistance with part identification, please contact

AgPubs or your authorized J.I. Case dealer. Information regarding product warranties for replacement parts should be obtained from the part supplier at the time of purchase.

This manual is a quality reproduction designed for durability, often exceeding the original print. It is intended to provide accurate information for part identification.

© AgPubs. All rights reserved. This document is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07HS47Q9L>

More documents and user manuals: <https://manuals.plus/>