

Chicco 00079148190000

Chicco Relax & Play Automatic Baby Bouncer Instruction Manual

Model: 00079148190000

PRODUCT OVERVIEW

The Chicco Relax & Play bouncer is designed for infants from birth up to 9 kg. It features an automatic swinging function with 5 different speeds to gently soothe and relax the baby. This bouncer provides comfort and security with its padded cushion and 3-point harness. It includes an entertainment bar with 12 selectable melodies and 2 removable hanging plush toys. The seat is adjustable to two positions for varied recline options, ensuring comfort from birth. The bouncer folds simply and compactly, standing upright when folded for easy storage and portability. The seat padding is removable and machine washable for hygiene.

Dimensions: 69.5 x 60 x 58.5 cm. Weight: 3 Kg.

SETUP INSTRUCTIONS

Follow these steps to assemble your Chicco Relax & Play bouncer.

- Unpacking:** Carefully remove all components from the packaging. Verify that all parts are present according to the packing list.
- Frame Assembly:** Extend the main frame components until they click securely into place. Ensure all locking mechanisms are engaged.
- Seat Attachment:** Attach the seat unit to the frame. Refer to the specific connection points, ensuring the seat is firmly secured.
- Toy Bar Installation:** Insert the entertainment bar into its designated slots on the frame. Ensure it is securely fastened.
- Battery Installation:** Locate the battery compartment (usually at the base or control panel). Insert the required batteries (e.g., AA or C, check manual for specifics) ensuring correct polarity.
- Safety Check:** Before first use, double-check all connections, harnesses, and locking mechanisms to ensure they are properly assembled and secure.



Chicco Relax & Play bouncer fully assembled, showing its grey fabric and white frame with hanging toys.



A baby comfortably seated in the Chicco Relax & Play bouncer next to a child playing, demonstrating the product's use in a home environment.

OPERATING INSTRUCTIONS

This section details how to use the Chicco Relax & Play bouncer's features.

Automatic Swinging Function

The bouncer features an automatic swinging mechanism with 5 adjustable speeds.

- Power On/Off:** Locate the power button on the control panel. Press to turn the bouncer on or off.
- Speed Adjustment:** Use the speed control buttons (usually marked with '+' and '-') to select one of the 5 swinging speeds. Start with a lower speed and adjust as needed for your baby's comfort.

Music and Entertainment Bar

The entertainment bar provides auditory and visual stimulation.

- 1. Melody Selection:** Press the music button to cycle through the 12 selectable melodies.
- 2. Volume Control:** Adjust the volume using the dedicated volume buttons.
- 3. Toy Removal:** The two plush toys hanging from the bar are removable for cleaning or independent play.

Seat Recline Adjustment

The seat can be adjusted to two different recline positions.

- 1. Adjusting Recline:** Locate the recline adjustment mechanism (usually a lever or button on the side or back of the seat). Follow the instructions to safely adjust the seat to the desired position. Ensure the seat is locked securely in place before placing the baby in it.

Safety Harness

Always secure your baby with the 3-point safety harness.

- 1. Securing Baby:** Place the baby in the seat. Fasten the 3-point harness, ensuring it is snug but not too tight. Adjust the straps as necessary for a secure fit.

BALANCEMENT AUTOMATIQUE



5 VITESSES
POUR BERGER
BÉBÉ

Image illustrating the automatic swinging motion of the bouncer, highlighting the 5 different speed settings available for gentle rocking.

BARRE DE JEU AMUSANTE



**12
MÉLODIES**

Close-up of the bouncer's entertainment bar, showing the two hanging plush toys and indicating the availability of 12 melodies.

MODE FIXE



COUSSIN REMBOURRÉ ET CONFORTABLE

Image showing the bouncer in a fixed, non-swinging mode, emphasizing the comfortable, padded cushion for baby's support.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and hygiene of your bouncer.

- Cleaning the Seat Padding:** The seat padding is removable and machine washable. Refer to the care label for specific washing instructions (e.g., cold water, gentle cycle).
- Frame Cleaning:** Wipe the plastic and metal parts of the frame with a damp cloth and mild soap. Do not use abrasive cleaners.
- Toy Cleaning:** The plush toys can be hand-washed or machine-washed according to their care labels.
- Battery Replacement:** Replace batteries when the swinging function or music becomes weak or stops. Dispose

of old batteries responsibly.

5. **Storage:** When not in use, fold the bouncer compactly and store it in a dry, safe place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING GUIDE

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Bouncer does not swing	Batteries are low or incorrectly inserted.	Replace batteries, ensuring correct polarity.
Music does not play	Batteries are low or volume is too low.	Replace batteries or increase volume.
Bouncer seems unstable	Frame not fully assembled or locked.	Check all frame connections and locking mechanisms to ensure they are securely engaged.
Seat recline mechanism is stiff	Debris or improper alignment.	Clear any obstructions. Ensure the mechanism is aligned correctly. Do not force.

If problems persist, contact Chicco customer support.

PRODUCT SPECIFICATIONS

- **Model Number:** 00079148190000
- **Brand:** Chicco
- **Recommended Age/Weight:** From birth up to 9 kg (approximately 6 months)
- **Dimensions (Unfolded):** 69.5 cm (L) x 60 cm (W) x 58.5 cm (H)
- **Dimensions (Folded):** 60 cm (L) x 58.5 cm (W) x 77 cm (H)
- **Product Weight:** 3.7 kg
- **Swinging Speeds:** 5
- **Melodies:** 12 selectable
- **Harness:** 3-point safety harness
- **Seat Recline Positions:** 2
- **Material:** Plush fabric, Plastic frame
- **Power Source:** Batteries (type not specified, user should check product for exact type)
- **Washable:** Removable, machine-washable seat padding

PLIAGE COMPACT



Image demonstrating the compact folding capability of the Chicco Relax & Play bouncer, showing its slim profile when stored.

WARRANTY INFORMATION

Chicco products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation included with your product or visit the official

CUSTOMER SUPPORT

For further assistance, spare parts, or warranty inquiries, please contact Chicco customer service.

Website: www.chicco.com

Contact Information: Refer to the Chicco website or product packaging for regional contact details.

© 2024 Chicco. All rights reserved.

Documents - Chicco – 00079148190000



[\[pdf\]](#)

41 079148 190 000 Schommelstoel Relax And Play 00079148190000 pack PackRelax FCE4 ts
1663858805081 cdn artsana assets chicco |||

IT ATTENZIONE: Non usare questo prodotto quando il tuo bambino in grado di stare seduto da solo o pesa pi di 9 kg. ATTENZIONE: Questo prodotto non inteso per prolungati periodi di sonno. EN WARNING: Do not use this product once your child can sit up unaided or weighs more than 9 kg. WARNING: This...

lang:tl score:13 filesize: 1.83 M page_count: 1 document date: 2022-09-22



[\[pdf\]](#)

41 079148 190 930 Schommelstoel Relax And Play 00079148190000 pack PackRelax PlayUK FCE3 ts
1663859705304 cdn artsana assets chicco |||

IT ATTENZIONE: Non usare questo prodotto quando il tuo bambino in grado di stare seduto da solo o pesa pi di 9 kg. ATTENZIONE: Questo prodotto non inteso per prolungati periodi di sonno. EN WARNING: Do not use this product once your child can sit up unaided or weighs more than 9 kg. WARNING: This...

lang:tl score:13 filesize: 1.82 M page_count: 1 document date: 2022-09-22