

VINABTY CT-8053

VINABTY CT-8053 Replacement Remote Control User Manual

Model: CT-8053

INTRODUCTION

This manual provides comprehensive instructions for the VINABTY CT-8053 replacement remote control. This remote is designed to function as a direct replacement for various Toshiba 4K UHD Smart LED TV models, including those in the U76 Series. It is pre-programmed and requires no additional setup beyond battery installation.

SETUP

1. Battery Installation

The CT-8053 remote control requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



9.06 inch



Image: VINABTY CT-8053 Remote Control showing its dimensions (approximately 9.06 inches long and 1.97 inches wide).

The battery compartment is located on the back.

2. Initial Use

This remote control is pre-programmed for compatible Toshiba TV models. No additional programming or pairing is required. Once batteries are installed, the remote is ready for immediate use with your television.

OPERATING INSTRUCTIONS

The CT-8053 remote control features a standard layout for easy navigation and control of your Toshiba TV. Refer to the image below for button identification.





Image: Front view of the VINABTY CT-8053 Remote Control, displaying all buttons including Power, Number Pad, Volume, Channel, Menu, Navigation, Netflix, and other function keys.

- **Power Button ():** Turns the TV on or off.
- **Number Pad (0-9):** Directly select channels or input numbers.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (^ / v):** Changes TV channels.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Netflix Button:** Provides direct access to the Netflix application.
- **Source/Input Button:** Changes the TV's input source (e.g., HDMI 1, AV).
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain TV menus or applications, as indicated on-screen.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls playback of media content.

MAINTENANCE

1. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

2. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

3. Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace the batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Confirm the remote is pointed directly at the TV's sensor.

- **Specific buttons not working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
- If the issue persists after replacing batteries and cleaning, the remote may require replacement.

- **TV not responding to any remote commands:**

- Ensure the TV is powered on and not in standby mode.
- Try using the physical buttons on the TV itself to confirm the TV is functional.
- If the TV responds to its physical buttons but not the remote, the remote or the TV's IR sensor may be faulty.

SPECIFICATIONS

Model Number	CT-8053
Brand	VINABTY
Compatible Devices	Toshiba 4K UHD Smart LED TVs (e.g., 48U7653DB, 55U7653DB, 40U7653DB, U76 Series, 49U6763DG, 55U8660EV, 65X9763DB)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.5 inches (approximately 17.8 x 5.1 x 1.3 cm)
Item Weight	3 ounces (approximately 85 grams)
Color	Black
Special Feature	Ergonomic design

WARRANTY INFORMATION

Specific warranty details for the VINABTY CT-8053 remote control may vary depending on the retailer and region of purchase. Please retain your proof of purchase and contact the seller or manufacturer directly for information regarding warranty coverage and claims.

SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please contact the retailer from whom you purchased the VINABTY CT-8053 remote control or refer to the official VINABTY support channels if available.

© 2024 VINABTY. All rights reserved.