

[Manuals.plus](#) /

› [AgPubs](#) /

› AgPubs Service Manual for Ford NAA Golden Jubilee Tractor

AgPubs NAA Golden Jubilee Tractor

AgPubs Service Manual for Ford NAA Golden Jubilee Tractor

Model: NAA Golden Jubilee Tractor

INTRODUCTION

This document serves as a comprehensive service manual for the Ford NAA Golden Jubilee Tractor. It provides detailed instructions for repair, overhaul, and troubleshooting procedures across various tractor systems. This manual is intended for technicians and owners performing maintenance and repair tasks.

The information contained herein is designed to assist in maintaining the tractor's optimal performance and extending its operational life. Adherence to the procedures outlined will ensure proper functionality and safety.

MANUAL TYPE DEFINITIONS

Understanding the purpose of different manual types is crucial for effective equipment maintenance:

- **Service Manual:** Focuses on repair, overhaul, and troubleshooting. This manual falls into this category.
- **Operators Manual:** Provides basic maintenance guidelines, operational instructions, fluid types and quantities, and adjustment procedures.
- **Parts Catalog:** Contains exploded views, part names, and original equipment manufacturer (OEM) part numbers for identification and ordering.

MANUAL OVERVIEW

The manual covers essential systems of the Ford NAA Golden Jubilee Tractor, including the engine, transmission, and hydraulic system. Each section provides step-by-step instructions and diagrams to guide users through complex procedures.

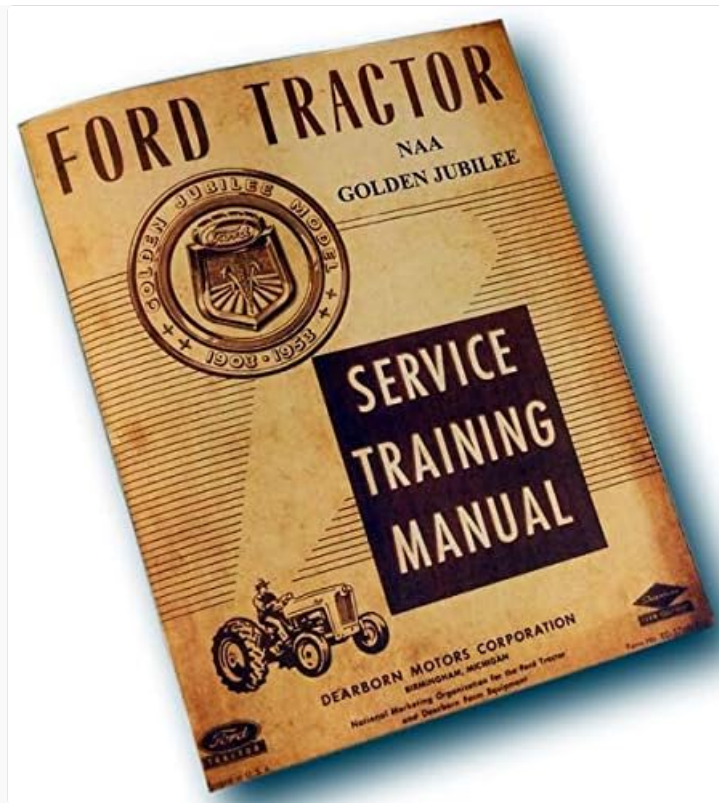 


Image: Front cover of the AgPubs Service Manual for the Ford NAA Golden Jubilee Tractor, featuring the title "FORD TRACTOR NAA GOLDEN JUBILEE MODEL SERVICE TRAINING MANUAL" and an illustration of a tractor.

ENGINE SYSTEM

This section details the procedures for disassembling, inspecting, and assembling the engine components. It includes instructions for crankshaft installation, governor assembly, cylinder head overhaul, and ignition system maintenance.

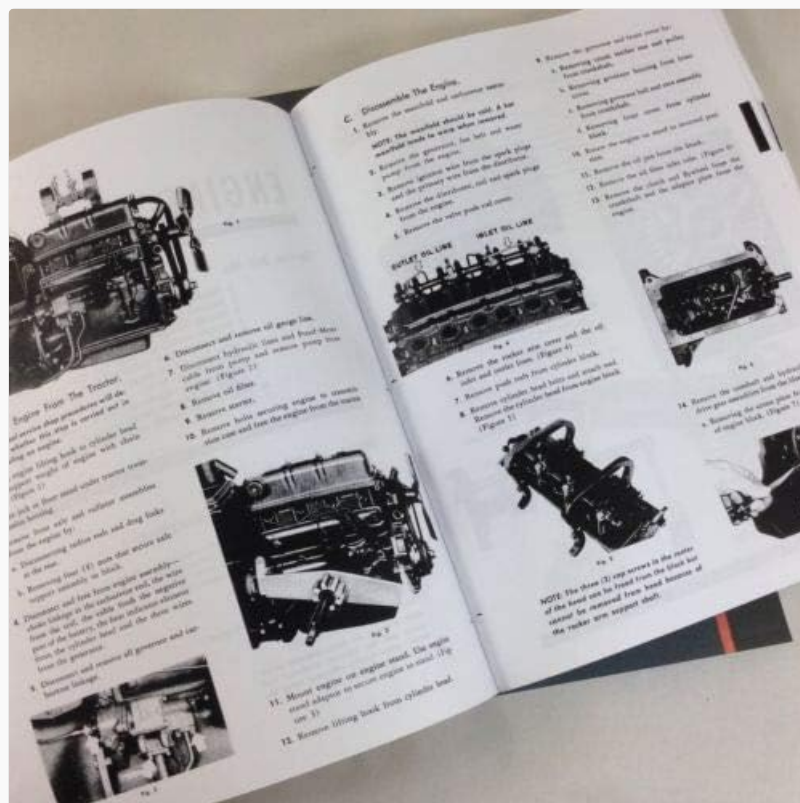 


Image: An open page from the service manual, displaying detailed diagrams and textual instructions for engine disassembly, including components like the manifold and cylinder head.



Image: Another open page from the service manual, showing illustrations and steps for engine assembly procedures, specifically focusing on piston and cylinder inspection and installation.

Key Engine Procedures:

- Engine Disassembly and Reassembly
- Crankshaft Installation
- Governor Assembly and Cylinder Front Cover
- Engine Rear Cover Plate, Flywheel, and Clutch Assembly
- Piston, Rings, and Rod Assembly
- Oil Pump, Pan, and Oil Filter
- Cylinder Head Assembly and Reconditioning
- Manifold and Carburetor Assembly and Installation
- Water Pump, Fan Assembly, and Thermostat Installation
- Ignition System

TRANSMISSION SYSTEM

This section provides instructions for the maintenance and repair of the tractor's transmission system, including main shaft, countershaft, and PTO shaft service.



Image: An open page from the service manual, illustrating transmission components such as the countershaft and gears, along with instructions for cleaning, inspection, and oil seal replacement.

Key Transmission Procedures:

- Transmission Removal and Installation
- Disassembly and Reassembly of the Transmission Cover and Gear Shift
- Main Drive Gear and Shaft
- Transmission Main Shaft
- Transmission Countershaft
- Reverse Idler Shaft
- Servicing the PTO Shifter Assembly
- The PTO Shaft Assembly

HYDRAULIC SYSTEM

This section covers the hydraulic system, including the removal, disassembly, assembly, and installation of the hydraulic pump and related components.

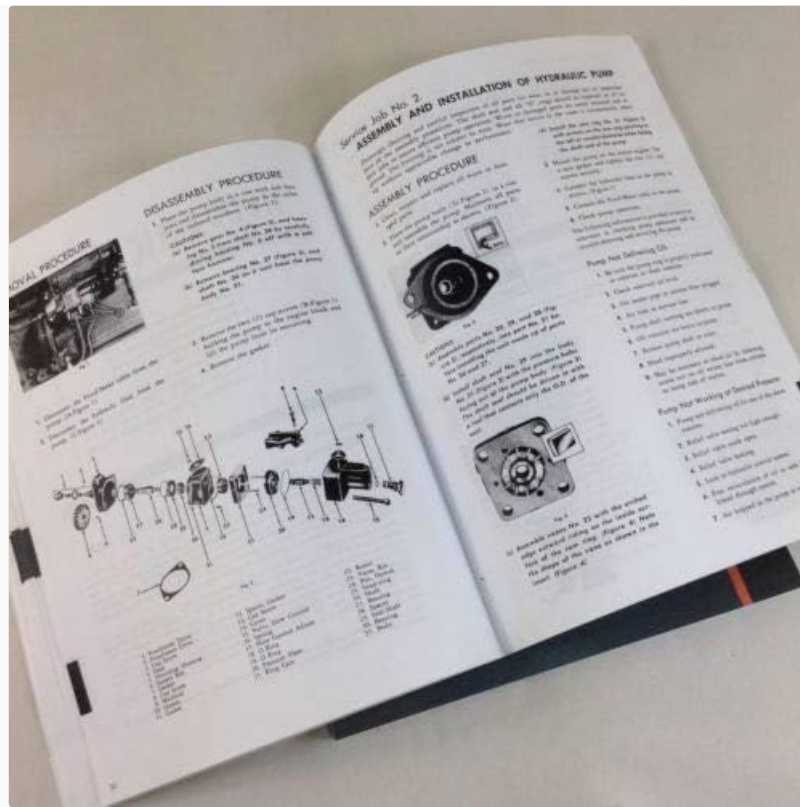 


Image: An open page from the service manual, featuring exploded diagrams and step-by-step instructions for the disassembly and assembly of the hydraulic pump.

Key Hydraulic System Procedures:

- Hydraulic Pump Removal and Disassembly
- Hydraulic Pump Assembly and Installation
- Hydraulic Lift Cover Assembly
- Removal of the Manifold Plate and Valves for the Hydraulic Lift Cover
- Safety Valve Removal and Installation
- Attaching the Ram Cylinder and Valves
- Housing to the Lift Cover and Installing the Lift Cover on the Tractor
- Constant Draft and Implement Position Control Adjustments

SPECIFICATIONS

This section provides technical specifications for the AgPubs Service Manual.

Attribute	Value
Manufacturer	Peaceful Creek
Part Number	M-51758
Material	Paper
Item Package Quantity	1
ASIN	B07HT3JQ3X
Date First Available	September 28, 2018

SUPPORT AND FURTHER INFORMATION

For additional support or inquiries regarding this service manual, please contact the manufacturer, Peaceful Creek. Refer to the part number M-51758 when seeking assistance.

This manual is a reproduction designed to be durable and provide accurate information for the Ford NAA Golden Jubilee Tractor. For specific warranty information related to the manual itself, please consult the retailer or manufacturer directly.