

[manuals.plus](#) /› [VINABTY](#) /› [VINABTY CT-8069 Replacement Remote Control User Manual for Toshiba Smart TV](#)

## VINABTY CT-8069

# VINABTY CT-8069 Replacement Remote Control User Manual

For Toshiba Smart TV Models

## 1. INTRODUCTION

This manual provides instructions for the VINABTY CT-8069 replacement remote control, designed for use with various Toshiba Smart TV models. This remote offers direct functionality without the need for complex programming or setup. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

## 2. PRODUCT OVERVIEW

The CT-8069 remote control is a direct replacement for your original Toshiba Smart TV remote. It features a standard layout with dedicated buttons for common functions and popular streaming services.



QUICK

0

GUIDE



P

+



 
-



MENU



OK



BACK



EXIT



NETFLIX



YouTube

F Play

TEXT

R

G

Y

B

3D

SUBTITLE



REC



CT-8069



Image 1: Front view of the VINABTY CT-8069 replacement remote control, showing all buttons and its ergonomic design.

This remote is compatible with a wide range of Toshiba Smart Full HD LED TV models, including but not limited to: 32L3753DB, 43L3653DB, 43U6763DB, 49U6663DB, 49U6763DB, 55U6663DB, 55L3753DB, 43L3753DB, 32D3753DB, 32W3753DB, 65U6663DB, 55U5766DB, 24D3753DB, 32D3653DB, 32W3753DG, 43U5766DB, 43U6663DB, 43V6763DB, 49L3653DB, 49L3658DB, 49L3753DB, 49U5663DB, 49U5766DB, 49U6663DB, 49U6763DB, 49U7763DB, 49V6763DB, 55L3763DG, 55U6763DB, 55U7763DB, 65U6763DB, 75U6763DB.

### **3. SETUP**

---

The CT-8069 remote control is designed for immediate use with compatible Toshiba Smart TVs. No programming or pairing is required.

#### **3.1 Battery Installation**

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by the arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote is ready for use.

### **4. OPERATING INSTRUCTIONS**

---

Point the remote control directly at your Toshiba Smart TV. Ensure there are no obstructions between the remote and the TV's infrared receiver.

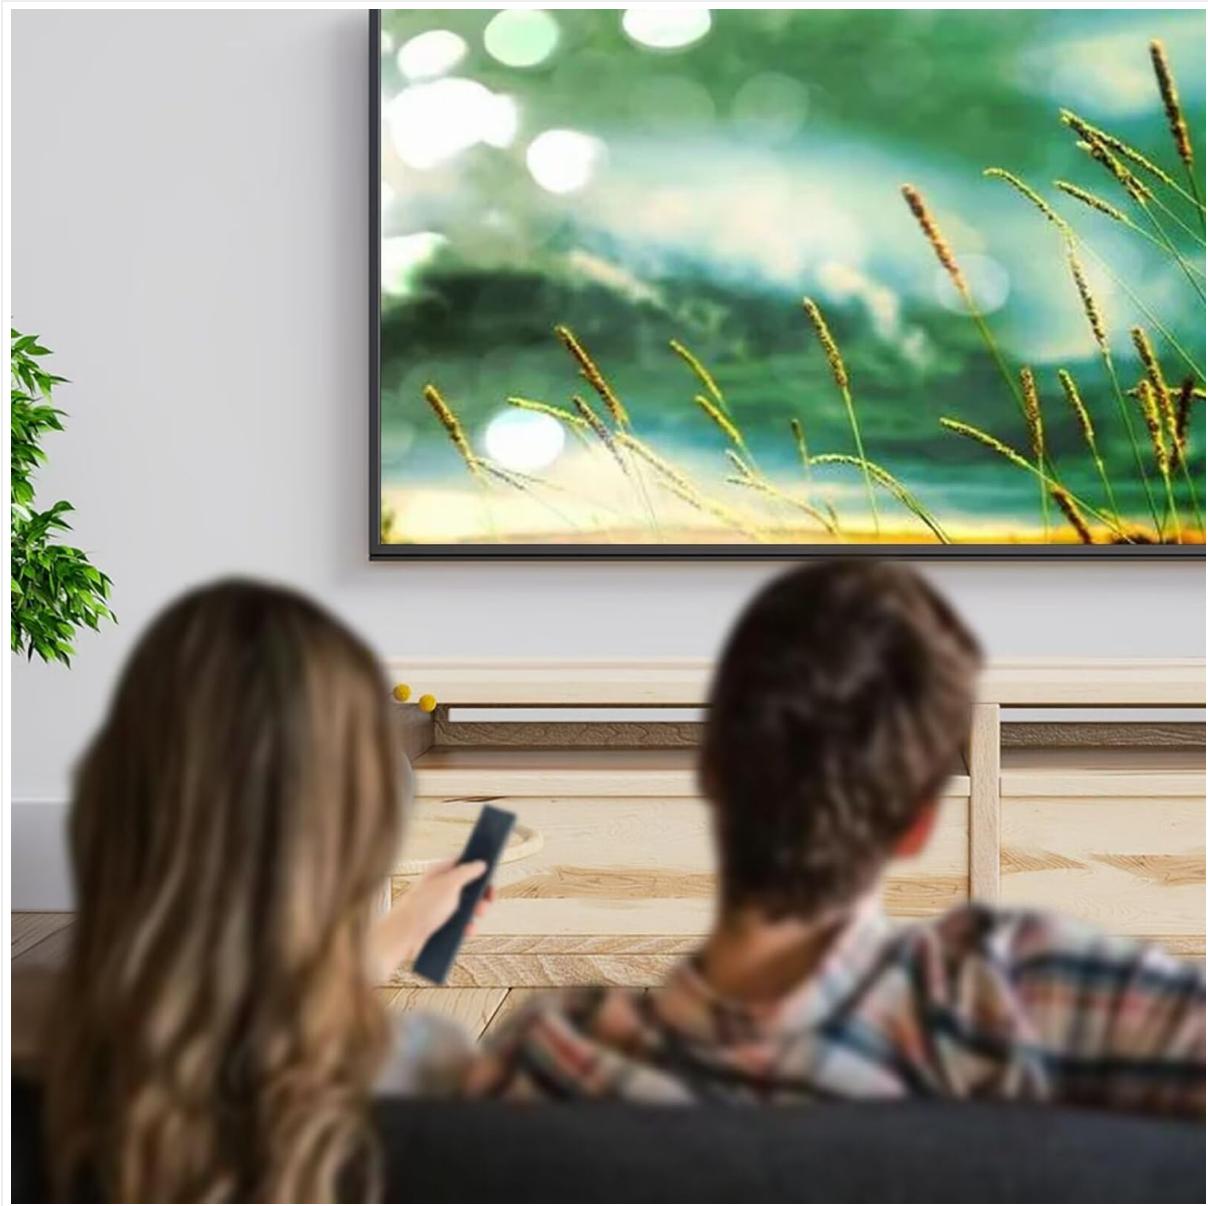


Image 2: A person using a remote control to operate a television, demonstrating typical usage.

## 4.1 Basic Functions

- **Power ( )**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (+/-)**: Adjusts the sound volume.
- **Channel Up/Down (P▲/P▼)**: Changes the TV channel.
- **Mute ( )**: Mutes or unmutes the TV sound.

## 4.2 Navigation and Menu Controls

- **Directional Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selections or opens menus.
- **MENU**: Opens the main TV menu.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Closes the current menu or application.
- **GUIDE**: Accesses the electronic program guide.
- **QUICK**: Provides quick access to frequently used functions.

## 4.3 Special Function Buttons

- **NETFLIX**: Direct access to the Netflix application.
- **YouTube**: Direct access to the YouTube application.
- **Plex**: Direct access to the Plex application.
- **TEXT**: Activates or deactivates Teletext.
- **SUBTITLE**: Toggles subtitles on or off.
- **REC**: Initiates recording (if supported by TV and external storage).
- **Play/Pause ( ), Stop ( ), Fast Forward ( ), Rewind ( )**: Media playback controls.
- **Color Buttons (Red, Green, Yellow, Blue)**: Used for specific functions within menus or applications, as indicated on screen.

## 5. MAINTENANCE

---

### 5.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical wipes, as these may damage the surface or internal components.

### 5.2 Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

### 5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

## 6. TROUBLESHOOTING

---

### 6.1 Remote Not Responding

- **Check Batteries**: Ensure batteries are correctly inserted with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight**: Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- **Remote Sensor**: Ensure the TV's infrared sensor is not blocked or dirty.
- **Distance**: Operate the remote within a reasonable distance from the TV (typically up to 20 feet or 6 meters).

### 6.2 Specific Buttons Not Working

- **Battery Check**: Weak batteries can sometimes cause intermittent button functionality. Replace batteries.
- **Clean Remote**: Dust or debris under the buttons can affect their operation. Gently clean around the buttons.
- **TV Compatibility**: While this remote is broadly compatible, some specific advanced functions might vary slightly depending on your exact TV model. Refer to your TV's original manual for specific feature details.

## 7. SPECIFICATIONS

---

<b>Model Number</b>	CT-8069
<b>Brand</b>	VINABTY
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Compatible Devices</b>	Toshiba Smart TVs (various models)
<b>Product Dimensions</b>	8 x 2 x 0.5 inches (approx.)
<b>Item Weight</b>	2.89 ounces (approx.)

## 8. WARRANTY AND SUPPORT

---

For any questions, concerns, or issues regarding your VINABTY CT-8069 replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty claims, if applicable. Specific warranty terms may vary by retailer and region.