

Passion-Electro LD28CHG2200E

Passion-Electro Replacement Remote Control for GRANDIN LD28CHG2200E TV

User Manual

INTRODUCTION

This manual provides instructions for the Passion-Electro replacement remote control, specifically designed for GRANDIN LD28CHG2200E TV models. This is a specialized replacement remote, not a generic universal remote. It is engineered to provide access to all functions of your original remote control without the need for complex programming.

Simply install the batteries, and the remote is ready for immediate use. The remote features an LED indicator for operational feedback. Please note that while the functionality is similar to an original remote, the exact button layout shown in images may vary slightly depending on the specific production batch.

SETUP

Battery Installation

To begin using your replacement remote control, you must first install the batteries. This remote requires two 1.5V AAA (LR03) batteries, which are not supplied with the product.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control, illustrating the battery compartment location.



Image: Close-up of the battery compartment, showing the area where batteries are inserted.

Once batteries are installed, the remote is ready for use with your GRANDIN LD28CHG2200E TV without any further programming.

OPERATING INSTRUCTIONS

Basic Functions

This replacement remote control is designed to replicate the essential functions of your original GRANDIN LD28CHG2200E TV remote. Point the remote directly at your television's infrared receiver for optimal performance.

- **Power Button:** Located typically at the top right, this button turns the TV on or off.
- **Number Buttons (0-9):** Used for direct channel selection.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Navigates through channels sequentially.
- **Mute Button:** Silences the TV audio.
- **Menu/Settings:** Accesses the TV's on-screen menu for adjustments.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate through menus and confirm selections.

- **Source/Input:** Changes the input source (e.g., HDMI, AV).



Image: Front view of the remote control, displaying the power button, number pad, navigation, and colored function buttons.



Image: Angled front view of the remote control, providing a clearer perspective of the button arrangement.



Image: Another angled front view, focusing on the lower section of the remote with additional function buttons.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new 1.5V AAA batteries.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Obstructions can block the signal.
 - Make sure you are within the maximum operating range of 10 meters.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the problematic buttons, to remove any dirt or debris that might be causing them to stick.
 - If only certain buttons are unresponsive after checking batteries, the remote might be faulty and may require replacement.
- **TV Not Responding to Any Remote:**

- Ensure the TV itself is powered on and not in standby mode.
- Try using the physical buttons on the TV (if available) to confirm the TV is functioning correctly.

SPECIFICATIONS

Brand	Passion-Electro
Item Model Number	LD28CHG2200E
Color	Black
Batteries Required	2 x AAA (LR03) 1.5V (not supplied)
Maximum Range	10 Meters
Country of Origin	China
Manufacturer	Passion-Electro

WARRANTY AND SUPPORT

This product is supplied as a new item. For any questions regarding product functionality, troubleshooting beyond the scope of this manual, or warranty claims, please contact the seller directly through your purchase platform. Specific warranty details are subject to the terms provided by the seller at the time of purchase.