

GICO 37833

GICO 12-Piece Children's Kitchen Cookware Set User Manual

Model: 37833

1. INTRODUCTION

The GICO 12-Piece Children's Kitchen Cookware Set is a comprehensive play set designed to inspire imaginative role-playing for young chefs. Contained within a durable red cardboard suitcase, this set includes a variety of metal cookware and utensils, providing a realistic and engaging play experience. It is not only a fun toy but also a valuable educational tool that fosters creativity and imagination.



Figure 1: The GICO 12-Piece Children's Kitchen Cookware Set, including pots, pan, pot holders, and metal cutlery, displayed outside its red cardboard suitcase.

2. SAFETY INFORMATION

This product is intended for children aged 3 years and older. Adult supervision is recommended during play to ensure safe use.

- **Choking Hazard:** The set contains small parts. Keep away from children under 3 years of age.
- **Material Care:** The cardboard suitcase is not waterproof. Avoid exposure to water or excessive moisture to prevent damage. Metal components should be kept dry to prevent rust.
- **Intended Use:** This product is a toy and is not intended for use with real food, heat, or cooking appliances.

3. PACKAGE CONTENTS

The GICO 12-Piece Children's Kitchen Cookware Set includes the following items:

- 1 x Red Cardboard Suitcase (Approx. 25 x 19 x 9 cm)
- 2 x Metal Pots with Lids
- 1 x Metal Pan
- 1 x Fabric Pot Holder
- Various Metal Utensils (e.g., spatula, ladle, slotted spoon, whisk)



Figure 2: The GICO 12-Piece Children's Kitchen Cookware Set neatly stored within its red cardboard suitcase, demonstrating its portability and ease of storage.

4. SETUP

This product requires no assembly. It is ready for play directly out of the box.

1. Unlatch and open the red cardboard suitcase.
2. Carefully remove all 12 pieces of the kitchen set from their packaging within the suitcase.
3. The set is now ready for imaginative play.

5. OPERATING INSTRUCTIONS

The GICO Children's Kitchen Cookware Set is designed for open-ended imaginative play. Children can use the various components to simulate cooking, serving, and other kitchen-related activities.

- **Pots and Pan:** Use the metal pots and pan for pretend cooking scenarios. The lids can be placed on the pots for added realism.

- **Metal Utensils:** The included metal cutlery and utensils are perfect for stirring, scooping, and serving pretend food.
- **Pot Holder:** The fabric pot holder can be used to safely handle the pretend hot pots and pans, enhancing the role-play experience.
- **Storage:** When play is complete, all items can be neatly stored back inside the red cardboard suitcase. This makes cleanup easy and keeps all pieces together for portability.

6. MAINTENANCE AND CARE

Proper care will extend the life of your GICO Children’s Kitchen Cookware Set:

- **Cleaning:** Wipe metal components with a dry or slightly damp cloth. Do not immerse metal parts in water. The cardboard suitcase and fabric pot holder should be kept dry and cleaned with a dry cloth if necessary.
- **Storage:** Store the entire set in a dry place, away from direct sunlight, high humidity, and extreme temperatures. Always ensure all pieces are returned to the suitcase after use to prevent loss.
- **Handling:** Handle the cardboard suitcase with care to avoid bending, tearing, or crushing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cardboard suitcase is damaged or bent.	Rough handling or exposure to moisture.	Handle the suitcase with care. Keep it away from liquids. Minor bends may be carefully reshaped. Severe damage may require replacement.
Metal parts show signs of rust.	Exposure to moisture or improper drying.	Ensure all metal parts are completely dry after any cleaning. Store the set in a dry environment.
Missing pieces from the set.	Items not stored properly after use.	Always return all 12 pieces to the suitcase after play. Check the play area thoroughly for any misplaced items.

8. SPECIFICATIONS

Model Number: 37833

Brand: GICO

Product Type: Children's Kitchen Cookware Play Set

Number of Pieces: 12

Main Materials: Cardboard (suitcase), Metal (cookware, utensils), Fabric (pot holder)

Color: Red

Suitcase Dimensions: Approximately 25 cm (Length) x 19 cm (Width) x 9 cm (Height)

Recommended Age: 3 years and up

Educational Value: Fosters creative thinking and imaginative play

Assembly Required: No

Batteries Required: No


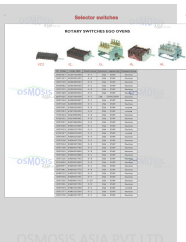
9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the specific policies of the retailer from whom this product was purchased. As this is a children's play set, manufacturer warranties may vary.

For general inquiries about GICO products or further assistance, please visit the official GICO brand website or contact their customer service department directly.

© 2023 GICO. All rights reserved.

Related Documents - 37833

	<p>Craftsman 21" Lawn Mower Operator's Manual</p> <p>Operator's manual for the Craftsman 21" Lawn Mower, covering safety instructions, assembly, operation, maintenance, and troubleshooting for models 247.39775, 247.37815, 247.37833, and 247.37860. Includes detailed guides on safe operation, adjustments, and care.</p>
	<p>Osmosis Asia Selector Switches for Ovens</p> <p>A comprehensive catalog of selector switches for various oven models, including detailed LF codes, positions, contact capacities, connections, and suitable oven brands. Features products from Osmosis Asia Pvt. Ltd.</p>