

## Domo DO7056S

# Domo DO7056S Handheld Garment Steamer User Manual

Model: DO7056S

---

## 1. INTRODUCTION

Thank you for choosing the Domo DO7056S Handheld Garment Steamer. This device is designed to quickly and efficiently smooth wrinkles from various fabrics, refresh garments, and eliminate bacteria and dust mites without the need for an ironing board. Please read this manual thoroughly before first use to ensure safe and optimal performance.

### Key Features:

- Rapid wrinkle removal and fabric refreshing.
- Eliminates bacteria and dust mites from all fabric types.
- No ironing board required, ideal for quick touch-ups and travel.
- Fast heat-up time: approximately 45 seconds.
- Continuous steam output: 30g/min.
- Removable water tank capacity: 250 ml.
- Stainless steel steam button.
- Automatic shut-off after 15 minutes of inactivity.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions before using this appliance.

- Always ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Never direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the steamer.

- Unplug the steamer from the power outlet before filling or emptying the water tank, and when not in use.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Always place the steamer on a stable, heat-resistant surface when not in use.
- Do not leave the steamer unattended while it is plugged in or operating.
- Allow the appliance to cool completely before storing.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Domo DO7056S garment steamer:

1. Steam Head / Nozzle
2. Steam Trigger / Button
3. Handle
4. Water Tank (removable)
5. Power Cord
6. Fabric Brush Attachment (if included)



Figure 3.1: Front view of the Domo DO7056S Handheld Garment Steamer. This image shows the overall design of the steamer, including the steam head, handle, and transparent blue water tank.



Figure 3.2: Side view of the Domo DO7056S, highlighting the removable water tank. The transparent blue tank allows for easy monitoring of the water level.



Figure 3.3: The Domo DO7056S steamer with the fabric brush attachment installed on the steam head. This attachment helps to open fabric weaves for better steam penetration and can remove lint or pet hair.

## 4. SETUP

- 1. Unpack the Steamer:** Carefully remove all packaging materials and ensure all components are present and undamaged.
- 2. Fill the Water Tank:**
  - Remove the water tank from the main unit by pulling it downwards.
  - Open the rubber stopper on the bottom of the tank.

- Fill the tank with clean, distilled, or demineralized water up to the MAX fill line (250 ml capacity). Do not overfill.
- Close the rubber stopper securely and reattach the water tank to the steamer until it clicks into place.

- 3. Attach Accessories (Optional):** If using the fabric brush attachment, align it with the steam head and press firmly until it locks into position.
- 4. Positioning:** Place the steamer on a flat, stable, and heat-resistant surface. Ensure the power cord is not tangled or obstructing any pathways.

## 5. OPERATING INSTRUCTIONS

---

Follow these steps for effective and safe steaming:

- 1. Power On:** Plug the power cord into a suitable electrical outlet (230V). The indicator light will illuminate, signaling that the steamer is heating up.
- 2. Heat-Up Time:** The steamer will be ready for use in approximately 45 seconds. The indicator light may change or turn off once ready, depending on the model.
- 3. Steaming Garments:**
  - Hang the garment on a hanger. Gently pull the fabric taut with one hand.
  - Hold the steamer upright, keeping the steam head a few inches away from the fabric.
  - Press and hold the steam trigger button to release continuous steam.
  - Move the steam head slowly over the fabric, from top to bottom, allowing the steam to penetrate and relax the fibers.
  - For stubborn wrinkles, you can gently press the steam head against the fabric while steaming.
  - Use the fabric brush attachment for thicker fabrics or to remove lint.
- 4. Steaming Other Fabrics:** The steamer can also be used for curtains, upholstery, and other household fabrics. Always test on an inconspicuous area first.
- 5. Automatic Shut-off:** The steamer is equipped with an automatic shut-off feature that activates after 15 minutes of inactivity for safety and energy saving. To resume steaming, simply press the steam trigger again.
- 6. Finishing:** Once steaming is complete, release the steam trigger. Unplug the steamer from the power outlet.



Figure 5.1: The Domo DO7056S handheld garment steamer actively emitting steam from its nozzle, demonstrating its primary function for wrinkle removal.

## 6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your steamer.

### 1. After Each Use:

- Unplug the steamer and allow it to cool completely (at least 30 minutes).
- Remove the water tank and empty any remaining water.

- Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 2. Descaling (Monthly or as Needed):

- Mineral deposits can build up over time, especially if tap water is used. This can affect steam output.
- To descale, mix a solution of 50% white vinegar and 50% distilled water.
- Fill the water tank with this solution and let it sit for 30 minutes. Do not heat the solution.
- Empty the tank and rinse thoroughly with clean water several times.
- Refill with distilled water and run the steamer for a few minutes to flush out any remaining vinegar solution.

## 3. Storage:

Ensure the steamer is completely cool and dry before storing. Store it in a cool, dry place, away from direct sunlight.

## 7. TROUBLESHOOTING

If you encounter issues with your Domo DO7056S steamer, refer to the following table:

Problem	Possible Cause	Solution
No steam or weak steam output.	Water tank is empty or low. Steamer not heated up sufficiently. Mineral buildup in the steam head.	Refill the water tank. Wait for 45 seconds until the indicator light signals readiness. Perform descaling procedure (refer to Section 6).
Water leaking from the steam head.	Steamer not fully heated. Overfilling the water tank. Mineral buildup.	Allow the steamer to fully heat up before pressing the steam trigger. Ensure water is filled only to the MAX line. Perform descaling procedure.
Steamer not turning on.	Not plugged in correctly. Power outlet issue. Automatic shut-off activated.	Check power cord connection. Test with another outlet. Press the steam trigger to reactivate.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

Feature	Specification
Model Number	DO7056S
Power	1370-1640 W
Voltage	230 V

Feature	Specification
Water Tank Capacity	250 ml
Continuous Steam Output	30 g/min
Heat-up Time	Approx. 45 seconds
Automatic Shut-off	After 15 minutes of inactivity
Dimensions (L x W x H)	28 x 11.5 x 15 cm
Weight	1.1 kg
Material	Plastic


## 9. WARRANTY AND SUPPORT


Information regarding specific warranty terms and conditions for the Domo DO7056S is not available in this document. For warranty details, spare parts availability, or technical support, please refer to the warranty card included with your product or contact Domo customer service directly through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for any warranty claims.

© 2023 Domo. All rights reserved.

### Related Documents - DO7056S

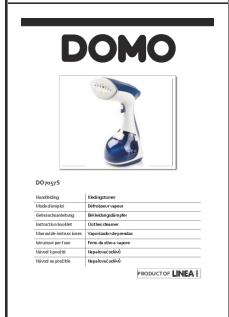	<p><a href="#">DOMO DO7058S Kledingstomer Handleiding</a></p> <p>Deze handleiding biedt gedetailleerde instructies voor het gebruik, onderhoud en de veiligheid van de DOMO DO7058S kledingstomer. Ontdek hoe u uw kleding snel en efficiënt kunt verfrissen.</p>
	<p><a href="#">DOMO DO7057S Clothes Steamer Instruction Manual</a></p> <p>Comprehensive guide for the DOMO DO7057S clothes steamer, covering safety instructions, parts, usage, filling the water reservoir, brush attachment, cleaning, maintenance, and disposal.</p>

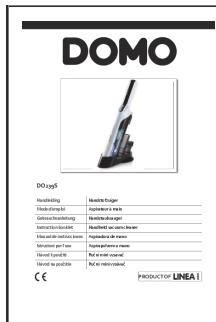

### [DOMO DO239S Handleiding: Draadloze Handstofzuiger Gebruiksinstucties](#)

Ontdek de DOMO DO239S handheld stofzuiger met deze uitgebreide handleiding. Leer over installatie, gebruik, onderhoud, veiligheid en probleemoplossing voor uw draadloze stofzuiger.




### [DOMO DO7110S Steam Generator Iron User Manual](#)

Comprehensive user manual for the DOMO DO7110S steam generator iron, covering setup, operation, safety instructions, maintenance, and troubleshooting.



### [DOMO DO7293S Robotstofzuiger Handleiding](#)

Complete handleiding voor de DOMO DO7293S robotstofzuiger. Ontdek installatie, gebruik, onderhoud en probleemoplossing voor uw huishoudelijke hulp.

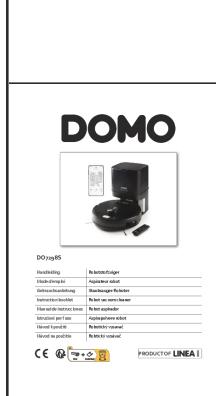

### [Handleiding Robotstofzuiger DOMO DO7298S](#)

Ontdek de DOMO DO7298S robotstofzuiger met deze uitgebreide handleiding. Leer over installatie, gebruik, onderhoud en probleemoplossing voor optimale prestaties van uw DOMO robotstofzuiger.

Documents - Domo – DO7056S

# DOMO



DO7056S

Handleiding	Kledingstomer
Mode d'emploi	Défroisseur vapeur
Gebrauchsanleitung	Bekleidungsdämpfer
Instruction booklet	Clothes steamer
Manuale di istruzioni	Vaporizzatore di prese
Istruzioni per l'uso	Ferro da stiro a vapore
Návod k použití	Napaovac odv
Návod na použitie	Napaovac odv

PRODUCT OF LINEA

[\[pdf\]](#) User Manual Instructions

DO7056S booklet domo elektro be sites default files product

**DO7056S** Handleiding Kledingstomer Mode d'emploi Dfroisseur vapeur

Gebrauchsanleitung Bekleidungsdämpfer Instruction booklet Clothes steamer Manual de instrucciones Vaporizador de prendas Istruzioni per l'uso Ferro da stiro a vapore Nvod k pouzit Napaovac odv Nvod na pouzitie Napaovac o...

lang:nl score:37 filesize: 2.01 M page\_count: 40 document date: 2018-02-26

# DOMO



DO7056S

Handleiding	Kledingstomer
Mode d'emploi	Défroisseur vapeur
Gebrauchsanleitung	Bekleidungsdämpfer
Instruction booklet	Clothes steamer
Manuale di istruzioni	Vaporizzatore di prese
Istruzioni per l'uso	Ferro da stiro a vapore
Návod k použití	Napaovac odv
Návod na použitie	Napaovac odv

PRODUCT OF LINEA

[\[pdf\]](#) User Manual Instructions

Untitled DO7056S original media s bol qQNMQQ3llxNk

**DO7056S** Handleiding Kledingstomer Mode d'emploi Dfroisseur vapeur

Gebrauchsanleitung Bekleidungsdämpfer Instruction booklet Clothes steamer Manual de instrucciones Vaporizador de prendas Istruzioni per l'uso Nvod k pouzit Ferro da stiro a vapore Napaovac odv Nvod na pouzitie Napaovac odv...

lang:nl score:31 filesize: 433.87 K page\_count: 40 document date: 2020-08-28