

## SENCOR SSS3200KIDS

# SENCOR SSS 3200 Kids Bluetooth Speaker with Karaoke Microphone User Manual

Model: SSS3200KIDS

## 1. INTRODUCTION

---

Thank you for purchasing the SENCOR SSS 3200 Kids Bluetooth Speaker with Karaoke Microphone. This portable speaker is designed to provide entertainment with its Bluetooth connectivity, karaoke function, and vibrant LED lighting. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

## 2. SAFETY INSTRUCTIONS

---

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Use only the supplied charger to recharge the product.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water or other liquids to prevent electric shock.
- Ensure proper ventilation around the speaker during use.

## 3. PACKAGE CONTENTS

---

Carefully unpack your SENCOR SSS 3200 Kids speaker and check that all items are present and in good condition. The package should include:

- SENCOR SSS 3200 Kids Bluetooth Speaker
- Wired Microphone
- 3.5mm Audio Cable (AUX cable)
- USB Charging Cable
- Power Adapter

- Shoulder Strap
- User Manual (this document)



Image 3.1: Included accessories for the SENCOR SSS 3200 Kids speaker, including the wired microphone, various cables, power adapter, and shoulder strap.

## 4. PRODUCT OVERVIEW

### 4.1 Front Panel



Image 4.1: Front view of the SENCOR SSS 3200 Kids Bluetooth Speaker, showcasing the main speaker grille with LED

backlighting and the SENCOR logo.

The front of the speaker features the main speaker grille, which is equipped with multi-color flashing LED backlighting for an enhanced visual experience. The SENCOR brand logo is prominently displayed.

## 4.2 Rear Panel and Controls



Image 4.2: Rear panel of the SENCOR SSS 3200 Kids Bluetooth Speaker, showing various input ports, control buttons, and adjustment knobs.

The rear panel houses all the essential controls and connectivity ports:

- **MIC-IN:** 6.3mm jack for connecting the wired microphone.
- **GUITAR-IN:** 6.3mm jack for connecting a guitar (if applicable).
- **LINE IN EAR MIC:** 3.5mm AUX input.
- **USB Port:** For USB flash drive playback.
- **TF Card Slot:** For microSD card playback.
- **DC 9V:** Power input for charging.
- **Power Switch:** To turn the speaker ON/OFF.
- **Display:** Digital display for mode and track information.
- **Control Buttons:** Play/Pause, Skip tracks, Mode/Shift, Record/Delete.
- **Knobs:** VOLUME+, -TREBLE+, -ECHO+, -MIC VOL+ for audio adjustments.
- **Battery Indicator:** Shows battery status.

## 5. SETUP

---

### 5.1 Charging the Battery

Before first use, fully charge the speaker's built-in rechargeable battery. Connect the supplied power adapter to the DC 9V input on the rear panel and plug it into a power outlet. The battery indicator will show charging status. A full charge typically takes 3-5 hours. Ensure the product is fully charged before initial operation to ensure proper functionality.

### 5.2 Connecting the Microphone

Insert the plug of the wired microphone into the MIC-IN jack on the rear panel of the speaker. Ensure the microphone's ON/OFF switch is in the 'ON' position when in use.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Power On/Off

To turn the speaker ON, slide the Power switch on the rear panel to the 'ON' position. To turn it OFF, slide the switch to the 'OFF' position.

### 6.2 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. Enable Bluetooth on your smartphone, tablet, or other compatible device.
3. Search for available Bluetooth devices and select "SSS 3200 Kids" from the list.
4. Once paired, the speaker will emit a confirmation sound, and the Bluetooth icon on the display will stop flashing.
5. You can now play audio from your device through the speaker.

### 6.3 USB/TF Card Playback

Insert a USB flash drive or a TF (microSD) card into the respective port/slot on the rear panel. The speaker will automatically detect the storage device and begin playing audio files. Use the control buttons (Play/Pause, Skip tracks) to manage playback.

## 6.4 AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the LINE IN EAR MIC (3.5mm AUX) port using the supplied 3.5mm audio cable. Press the 'MODE/SHIFT' button to switch to AUX input mode. Audio will then play from your connected device.

## 6.5 Karaoke Function and Recording

With the microphone connected to the MIC-IN port, you can sing along to music playing from any source (Bluetooth, USB, TF, AUX). Adjust the microphone volume using the 'MIC VOL+' knob and add echo effects with the '-ECHO+' knob. The speaker also supports recording your karaoke performance. Refer to the 'REC/DEL' button for recording and deleting functions.

## 6.6 LED Light Modes

The speaker features multi-color flashing LED backlighting. These lights automatically activate when the speaker is on, enhancing the party atmosphere. There may be a dedicated button or a combination of buttons to cycle through different light modes or turn them off, if available (refer to specific product documentation for details).

## 6.7 Audio Adjustments

Use the 'VOLUME+' knob to adjust the overall speaker volume. The '-TREBLE+' knob allows you to fine-tune the treble levels for clearer sound. The '-ECHO+' and '-MIC VOL+' knobs are specifically for microphone effects and volume, respectively.

# 7. MAINTENANCE

---

## 7.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure no liquids enter the speaker's openings.

## 7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery every few months to maintain its health.

# 8. TROUBLESHOOTING

---

- **No Power:** Ensure the speaker is charged. Connect the power adapter and allow it to charge for a few hours. Check the power switch is in the 'ON' position.
- **No Sound:** Check the volume levels on both the speaker and the connected device. Ensure the correct input mode (Bluetooth, USB, AUX) is selected.
- **Bluetooth Not Connecting:** Make sure the speaker is in pairing mode. Disable and re-enable Bluetooth on your device. Move your device closer to the speaker.
- **Microphone Not Working:** Ensure the microphone is securely plugged into the MIC-IN jack and its ON/OFF switch is in the 'ON' position. Adjust the 'MIC VOL+' knob.
- **Distorted Sound:** Reduce the volume on both the speaker and the connected device. Ensure audio files are not corrupted.

# 9. SPECIFICATIONS

---



Image 9.1: Dimensions of the SENCOR SSS 3200 Kids Bluetooth Speaker, showing approximate measurements of 47cm (width), 37cm (height), and 33cm (depth).

Feature	Specification
Brand	SENCOR
Model Number	SSS3200KIDS
Color	Multicolored
Connectivity Technology	Bluetooth
Connectivity Ports	3.5mm Jack, USB
Special Features	Integrated Microphone, Multi-color LED Backlight
Total USB Ports	1
Impedance	4 Ohms
Compatible Devices	Laptop, Smartphone, Tablet
Recommended Uses	Children's Entertainment, Music Activities
Power Source	Battery Powered
Number of Speakers	1

## 10. WARRANTY AND SUPPORT

SENCOR products are designed and manufactured to the highest quality standards. For warranty information, please refer to the warranty card included with your purchase or contact your local SENCOR distributor. For technical support or service inquiries, please visit the official SENCOR website or contact their customer service department.

© 2023 SENCOR. All rights reserved. Information in this manual is subject to change without notice.