

Domo DO353VD

DOMO DO353VD Digital Food Dehydrator Instruction Manual

Model: DO353VD

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your DOMO DO353VD Digital Food Dehydrator. Please read all instructions carefully before first use and retain this manual for future reference. The DOMO DO353VD is designed to dehydrate various foods, such as vegetables, fruits, meats, and spices, extending their shelf life while preserving most vitamins, minerals, and other nutrients.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

The DOMO DO353VD Digital Food Dehydrator includes the following main components:

- Main Dehydrator Unit with Digital Control Panel
- 6 Stainless Steel Drying Trays
- 1 Mesh Sheet (for smaller items)
- 1 Fruit Leather Tray



Image: The DOMO DO353VD Digital Food Dehydrator, showing its compact design and clear front door, allowing visibility of the drying process.



Image: The dehydrator with its six stainless steel trays partially pulled out, demonstrating the ample drying space and easy access for loading and unloading.

SETUP

1. **Unpacking:** Carefully remove the dehydrator and all accessories from the packaging.
 2. **Initial Cleaning:** Before first use, wash the stainless steel trays, mesh sheet, and fruit leather tray in warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
 3. **Placement:** Place the dehydrator on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the unit, keeping it away from walls or other appliances.
 4. **Tray Installation:** Insert the clean drying trays into the dehydrator unit. Ensure they slide in smoothly and are level.
 5. **Power Connection:** Plug the power cord into a grounded electrical outlet.
-

OPERATING INSTRUCTIONS

The DOMO DO353VD features a digital control panel for precise temperature and timer settings. The "advanced dry" technology ensures vertical airflow for optimal drying results.



Image: A close-up view of the digital control panel, showing the ON/OFF, Timer, and Temperature buttons, along with the digital display.

1. **Preparing Food:** Prepare your food items by washing, peeling, and slicing them to uniform thickness. Arrange them in a single layer on the drying trays, ensuring air can circulate freely.
2. **Loading Trays:** Slide the loaded trays into the dehydrator. Close the front door securely.
3. **Power On:** Press the **ON/OFF** button on the control panel to turn on the dehydrator. The digital display will illuminate.
4. **Setting Temperature:**
 - Press the **TEMP** button.
 - Use the **+** and **-** buttons to adjust the temperature between 35°C and 70°C (95°F and 158°F).

- The recommended temperature for most foods is between 50°C and 60°C.

5. **Setting Timer:**

- Press the **TIMER** button.
- Use the **+** and **-** buttons to set the desired drying time, from 30 minutes to 19.5 hours.
- Drying times vary significantly based on food type, thickness, and moisture content.

6. **Starting Dehydration:** Once temperature and time are set, the dehydrator will begin operation automatically after a few seconds. The display will show the remaining time.

7. **Monitoring:** Periodically check the food's dryness. Rotate trays if necessary for even drying, though the vertical airflow design minimizes this need.

8. **Completion:** The dehydrator will automatically shut off when the timer expires. Unplug the unit from the power outlet.

9. **Cooling and Storage:** Allow dehydrated food to cool completely before storing in airtight containers.



Image: A diagram illustrating the "advanced dry" technology with vertical airflow, ensuring consistent and efficient drying across all trays.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your dehydrator.

1. **Before Cleaning:** Always unplug the dehydrator from the power outlet and allow it to cool completely before cleaning.
2. **Trays and Accessories:** The stainless steel trays, mesh sheet, and fruit leather tray are **not dishwasher safe**. Wash them by hand in warm, soapy water. Use a soft brush if necessary to remove any stuck-on food particles. Rinse thoroughly and dry completely before storing or re-using.
3. **Main Unit:** Wipe the interior and exterior surfaces of the dehydrator unit with a damp cloth. For stubborn stains, use a mild detergent on the cloth, then wipe with a clean damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Storage:** Store the clean and dry dehydrator in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dehydrator does not turn on.	Not plugged in; power outlet malfunction; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the problem persists, contact customer support.
Food is not drying evenly.	Overloaded trays; uneven slicing; door not fully closed.	Ensure food is spread in a single layer. Slice food to uniform thickness. Verify the front door is securely closed. While vertical airflow minimizes rotation, you may try rotating trays halfway through the process if needed.
Drying process takes too long.	Temperature set too low; food too thick; high humidity.	Increase the temperature setting within the recommended range. Slice food thinner. Dehydrate in a low-humidity environment.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Domo
Model Number	DO353VD
Power	500 Watts
Voltage	230V
Material	Stainless Steel (trays), Plastic (housing)
Dimensions (L x W x H)	45 x 34.5 x 31.5 cm
Weight	5.68 Kilograms
Number of Trays	6
Temperature Range	35°C - 70°C
Timer Range	30 minutes - 19.5 hours
Automatic Shut-off	Yes
Dishwasher Safe Parts	No


WARRANTY AND SUPPORT

For detailed warranty information, please refer to the separate warranty document included with your purchase or visit the official Domo website. For technical support or service inquiries, please contact Domo customer service.

© 2024 Domo. All rights reserved.

Related Documents - D0353VD

[illegible]

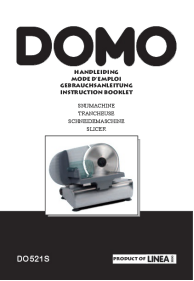	DOMO DO521S Slicer Instruction Booklet This document provides instructions for the DOMO DO521S slicer, covering safety precautions, usage guidelines, and cleaning procedures. It is designed for household use and details warranty information.
	DOMO Kuchyňský robot DO1031KR / DO1023KR Návod k použití Kompletní návod k použití pro kuchyňský robot DOMO modely DO1031KR a DO1023KR. Obsahuje bezpečnostní pokyny, informace o součástkách, instalaci, používání, čištění a údržbě.

Documents - Domo – DO353VD



[\[pdf\]](#) User Manual Instructions

Untitled DO353VD Digital food dryer Manual de instrucciones Deshidratador alimentos Istruzioni per l'uso Essiccatore di frutta e verdura Návod k použití Digitální do353vd instruction manual 1 4062 setpoint media |||

DO353VD Handleiding Digitale voedseldroger Mode d'emploi Dshydrateur digitale Gebrauchsanleitung Digitale Nahrungstrockner Instruction booklet Digital food dryer Manual de instrucciones Deshidratador de alimentos Istruzioni per l'uso Nvod k pouziti Essiccatore di frutta e verdura Digitln s...

lang:nl **score:50** filesize: 362.79 K page_count: 36 document date: 2024-12-18



[\[pdf\]](#) User Manual Instructions

Untitled Manual DOMO Sušička ovocia digitálna DO353VD eu 45d67839bd2913 do353vd instructionmanual kamody cz soubory relatedfile |||

DO353VD Handleiding Digitale voedseldroger Mode d'emploi Dshydrateur digitale Gebrauchsanleitung Digitale Nahrungstrockner Instruction booklet Digital food dryer Manual de instrucciones Deshidratador de alimentos Istruzioni per l'uso Nvod k pouziti Essiccatore di frutta e verdura Digitln s...

lang:nl **score:45** filesize: 395.28 K page_count: 36 document date: 2022-04-25



[\[pdf\]](#) User Manual Instructions

Handleiding DOMO DO353VD FOOD DRYER Vanden Borre M FR data vandenborre be manual |||
Downloaded from www.vandenborre.be **DO353VD** Handleiding Digitale voedseldroger
Mode d emploi Dshydrateur digitale Gebrauchsanleitung Digitale Nahrungstrockner
Instruction booklet Digital food dryer Manual de instrucciones Deshidratador de
alimentos Istruzioni per l uso Essiccatore di frut...

lang:nl score:44 filesize: 2.39 M page_count: 36 document date: 2018-03-01



[\[pdf\]](#) User Manual Instructions

Untitled Bekijk de handleiding Domo DO353VD Voedseldroger Droogoven 6 lagen Timer Wit bol original
media s mZrJogEgMv4n |||
DO353VD Handleiding Digitale voedseldroger Mode d emploi Dshydrateur digitale
Gebrauchsanleitung Digitale Nahrungstrockner Instruction booklet Digital food dryer
Manual de instrucciones Deshidratador de alimentos Istruzioni per l uso Nvod k pouzit
Essiccatore di frutta e verdura Digitln s...

lang:nl score:33 filesize: 290.44 K page_count: 36 document date: 2020-04-23



[\[pdf\]](#) User Manual Instructions

Digital Dörrautomat „DO353VD Beige 913596 D34A0F7A FC5F 4A95 AF55 AF7B0BCBDD75 westfalia
versand at media 9e b9 28 1672931093 |||
DO353VD Handleiding Digitale voedseldroger Mode d emploi Dshydrateur digitale
Gebrauchsanleitung Digitale Nahrungstrockner Instruction booklet Digital food dryer
Manual de instrucciones Deshidratador de alimentos Istruzioni per l uso Essiccatore
di frutta e verdura Nvod k pouzit Digitln...

lang:nl score:28 filesize: 2 M page_count: 36 document date: 2018-03-01



[pdf]

Fiche produit Déshydrateur DOMO DO353VD Villatech 200402 20231223214122 7617 villatech fr media source articles documents 2 0 4 |||

Food dryer **DO353VD** 6 TRAYS Fruit Vegetables Herbs Granola Digitale voedseldroger Dshydrateur digitale -- Maak professionele presentaties -- Ralisez une prsentation de plat op je bord met voedselkrokantjes, digne d un pro en y ajoutant une maak delicatessen zoals touche croquante. Ralise...

lang:nl score:24 filesize: 828.03 K page_count: 1 document date: 2018-08-14



[pdf]

Recepty DOMO Sušička ovocia digitálna DO353VD q5b97afc061151 do353vd cz recepty kamody soubory relatedfile |||

SUSICKA POTRAVIN NVOD NA SUSEN RECEPTY Doba susen Celkov cas susen vzdy zvis na typu potraviny, jak velk a jak tlust pltky budete mt. Zlez vsak i na ostatnch okolnostech: kolik vody potravina obsahuje, jak je rozmstna na platu, procento vlhkosti vzduchu v okol ci teplota v mstnosti. Proto je v...

lang:hr score:22 filesize: 467.72 K page_count: 8 document date: 2018-09-07

 


[pdf] User Manual Instructions

6488202 westfalia eu service dat down datei id

DO353VD Handleiding Digitale voedseldroger Mode d emploi Dshydrateur digitale Gebrauchsanleitung Digitale Nahrungstrockner Instruction booklet Digital food dryer Manual de instrucciones Deshidratador de alimentos Istruzioni per l uso Essiccatore di frutta e verdura Nvod k použit Digitln...

lang:nl score:20 filesize: 2 M page_count: 36 document date: 2018-03-01

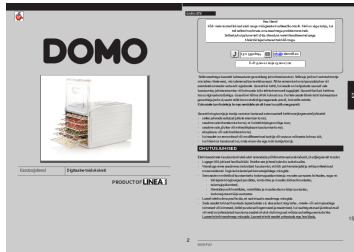 


[pdf]

Microsoft Word Juhend Domo kuivati docx Toomas Karuks 2247 5c497ce7980141 86535854 juhend domo cidermill eu media product erply s3 amazonaws |||

Kasutusjuhend Digitaalne toidukuivati PRODUCT OF GARANTII Hea klient Kik meie tooted lbivad alat ... seotud ohte. Lapsed ei tohi seadmega mngida. Lapsed ei tohi seadet puhastada ega hooldada, 15 2 **DO353VD** E T E T v.a juhul, kui nad on le 16 aasta vanad ja tegutsevad jrelevalve all. Hoidke se...

lang:et **score:19** filesize: 271.07 K page_count: 3 document date: 2019-01-24

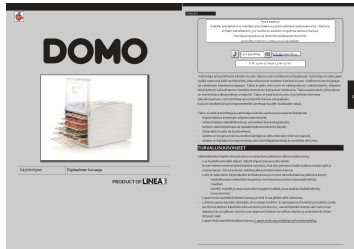

[pdf]

2247 6470583304c643 93087157 kuivaaja domo fin cidermill eu media product erply s3 amazonaws |||

Kytttohejt Digitaalinen kuivaaja PRODUCT OF TAKUUI Hyv asiakas Kaikille tuotteillemme tehdn ain ... it. Lapset eivt saa leikki laitteen kanssa. Lapset eivt saa puhdistaa tai huoltaa laitetta, 15 2 **DO353VD** F I F I paitsi silloin, kun he ovat yli 16-vuotiaita tai toimivat aikuisen valvonnassa. ...

lang:fi **score:18** filesize: 118.22 K page_count: 3 document date: 2023-05-26



[pdf]

TSB letak řijen 2019 indd okuca Chytrý telefon Samsung Galaxy A10 4 390 799 3 589 18 999 33 990 899 15 rijen2019 tsbohemia cz inc katalog

Notebooky, tablety, a mobily Televize, elektronika BI technika, domc spotebice Znackov poctace Barbone Foto, video, audio technika Jzdn kola, hracky, hobby Chytr telefon Samsung Galaxy A10 Obj. kd: 9231509, 9231510 Susicka ovoce DOMO **DO353VD** Obj. kd: 9309658 6 plat Pkon 500 W Termostat 35-70C...

lang:hr **score:12** filesize: 3.32 M page_count: 8 document date: 2019-09-23



[pdf]

food dryer DOMO RECEPTEN | RECETTES De voedseldroger is geschikt voor het drogen van groenten fruit vlees vis kruiden rens te in de DO353VD receptenboekje LR domo elektro be sites default files product

food dryer RECEPTEN | RECETTES REZEPTE | RECIPES DUUR De droogtijd is afhankelijk van het soort voedsel, hoe groot het is, hoe dik de stukken zijn, de hoeveelheid water in het voedsel, hoeveel er op de droogplateaus wordt geplaatst, de temperatuur en vochtigheidsgraad van de kamer waarin het toe...

lang:nl **score:12** filesize: 2.98 M page_count: 20 document date: 2018-03-14