

[Manuals.plus](#) /

› [LA SOMMELIERE](#) /

› LA SOMMELIERE LS41 Wine Cooler Instruction Manual

LA SOMMELIERE LS41

LA SOMMELIERE LS41 Wine Cooler Instruction Manual

Model: LS41

1. INTRODUCTION

Thank you for choosing the LA SOMMELIERE LS41 Wine Cooler. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before use and keep them for future reference.

Safety Information

- Ensure the appliance is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.
- This appliance is intended for household use only.
- Unplug the appliance before cleaning or maintenance.

2. PRODUCT FEATURES

The LA SOMMELIERE LS41 Wine Cooler is designed to store your wine collection under optimal conditions. Key features include:

- **Capacity:** Stores up to 40 standard Bordeaux bottles.
- **Design:** Modern, freestanding design with a sleek black finish.
- **Lighting:** LED interior lighting for clear visibility without heat emission.
- **Temperature Control:** Electronic thermostat with a digital temperature display.
- **Controls:** Touch controls integrated into the door for easy adjustment.
- **Door:** Double-glazed door treated with UV protection to shield wine from harmful light.
- **Safety:** Child safety lock feature.
- **Humidity:** Controlled hygrometry between 50% and 80% to preserve corks.
- **Stability:** Anti-vibration system to protect wine from sediment disturbance.

- **Shelving:** Includes 2 wooden shelves (beech) and 1 bottom support for versatile storage.
- **Leveling:** Adjustable feet at the front for stable positioning.



Figure 1: LA SOMMELIERE LS41 Wine Cooler with door open, displaying its interior and bottle arrangement.

3. SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the wine cooler for any shipping damage. Report any damage to your retailer immediately. Keep packaging materials for future transport if needed.

Placement

- Place the wine cooler on a flat, stable surface away from direct sunlight and heat sources (e.g., oven, radiator).
- Ensure adequate air circulation around the appliance. Maintain a minimum clearance of 10 cm (4 inches) at the back

and sides, and 30 cm (12 inches) above.

- Avoid placing the unit in areas with extreme temperature fluctuations.

Leveling

The wine cooler must be level for optimal performance. Adjust the front adjustable feet by turning them clockwise or counter-clockwise until the appliance is stable and level.

Electrical Connection

Before plugging in, ensure the voltage indicated on the rating label matches your household power supply. Allow the appliance to stand upright for at least 2-4 hours before connecting it to power. This allows the refrigerant to settle.



Figure 2: Key components of the LA SOMMELIERE LS41 Wine Cooler.

4. OPERATING INSTRUCTIONS

Control Panel

The touch control panel is integrated into the upper part of the door. It allows you to adjust the temperature and control the interior light.

- **Temperature Adjustment:** Use the **UP** and **DOWN** arrows to set your desired temperature. The digital display will show the set temperature, then revert to the actual internal temperature.
- **Temperature Range:** The wine cooler typically operates within a range suitable for wine storage (e.g., 5°C to 18°C / 41°F to 64°F). Refer to the display for current settings.
- **Light Control:** Press the **LIGHT** button to turn the interior LED light on or off.
- **Child Safety Lock:** Consult the specific instructions for activating and deactivating the child safety lock feature, usually involving a combination of button presses.

Loading Bottles

- Arrange bottles on the wooden shelves to allow for proper air circulation.
- Avoid overloading shelves to prevent damage and ensure efficient cooling.
- The anti-vibration system helps protect your wine, but gentle handling is always recommended.

5. MAINTENANCE AND CARE

Cleaning the Interior

- Always unplug the appliance before cleaning.
- Clean the interior with a soft cloth dampened with a solution of mild detergent and warm water.
- Do not use abrasive cleaners or solvents.
- Remove and clean the wooden shelves separately. Ensure they are completely dry before placing them back.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the glass door with a glass cleaner, avoiding contact with the control panel.

Power Outage

In case of a power outage, keep the door closed to maintain the internal temperature for as long as possible. The wine cooler will resume operation automatically once power is restored.

Long-Term Storage / Moving

If the appliance will not be used for an extended period, unplug it, clean the interior thoroughly, and leave the door slightly ajar to prevent odors and mold growth. When moving, secure all internal components and transport the unit in an upright position.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; check circuit breaker; verify power supply.
Temperature is not cold enough.	Door not closed properly; excessive door opening; warm environment; ventilation blocked; temperature setting too high.	Check door seal; reduce door openings; ensure proper ventilation; lower temperature setting.
Vibrations.	Appliance not level.	Adjust the front leveling feet.
Noise.	Normal compressor operation; fan noise; rattling from loose items.	These are normal operating sounds. Ensure bottles are stable on shelves.
Moisture buildup inside.	High humidity environment; frequent door openings.	This is normal for humidity control. Ensure door is sealed properly.

7. SPECIFICATIONS

Feature	Detail
Model Number	3541361805042
Product Dimensions (W x D x H)	43 x 49.5 x 84.8 cm
Weight	27 kg
Capacity	40 bottles
Energy Consumption	194 kWh/annum (Energy Class B)
Noise Level	42 dB

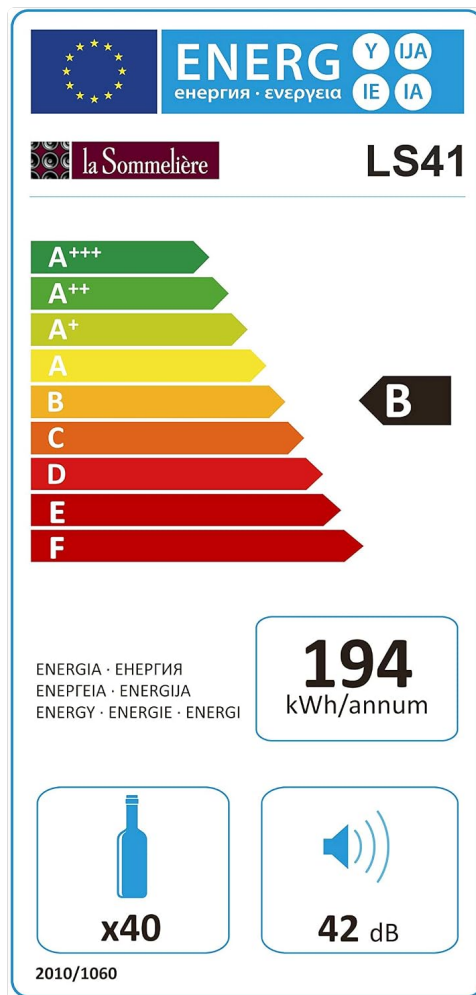


Figure 3: Energy Label for LA SOMMELIERE LS41.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2023 LA SOMMELIERE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07HYCB2WP>

More documents and user manuals: <https://manuals.plus/>